



Wahl Lithium Ion Trimmer Metal Razor Arms Replacement

If the blades to your Wahl Lithium Ion Trimmer...

Written By: nathan



INTRODUCTION

If the blades to your Wahl Lithium Ion Trimmer are damaged or worn, this guide will show you how to replace them with functioning blades.

Blades can be damaged by being dropped, misused, or not being properly taken care of. In any of these circumstances, a replacement is typically required.

Because the blades are sharp, make sure to wear gloves or some sort of hand protection while handling the blades in order to avoid any sort of injury.

Before beginning this guide, make sure that the Wahl Lithium Ion Trimmer is powered off and disconnected from any source of electricity.

TOOLS:

Phillips #0 Screwdriver (1)


Fingers (1)

Step 1 — Metal Razor Arms




- Examine the razor to identify any broken or jammed blades that require replacement. If any such blades are identified, the whole set must be changed.

Step 2

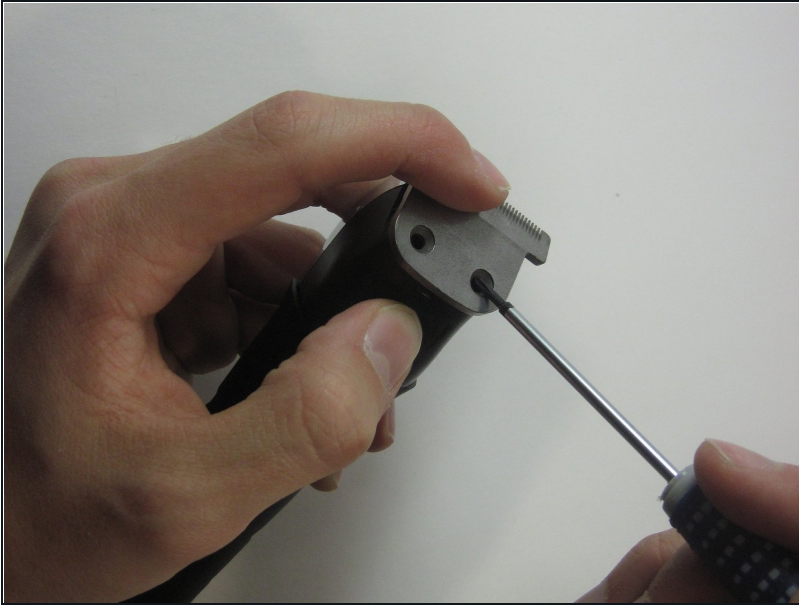


- Unscrew the two Phillips screws that hold the blades in place with a Phillips #0 screwdriver.

Step 3

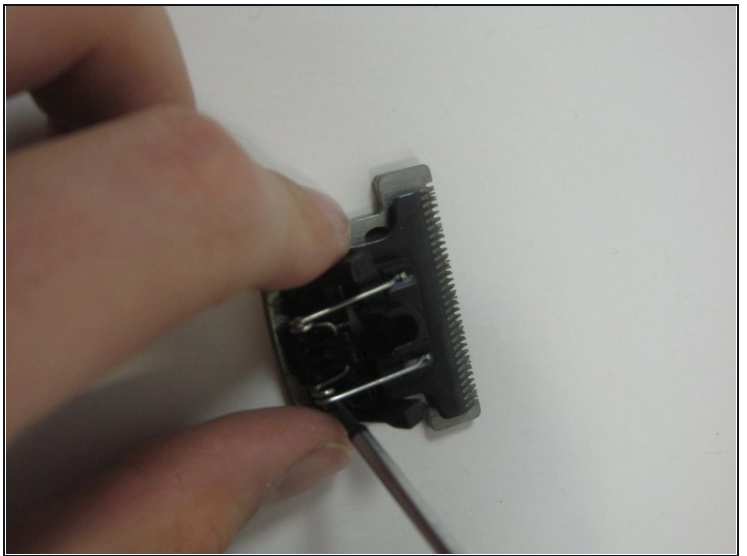

- Apply pressure to the back side of the blades while pushing outward to remove the blade head completely from the Wahl Lithium Ion Trimmer.

Step 4

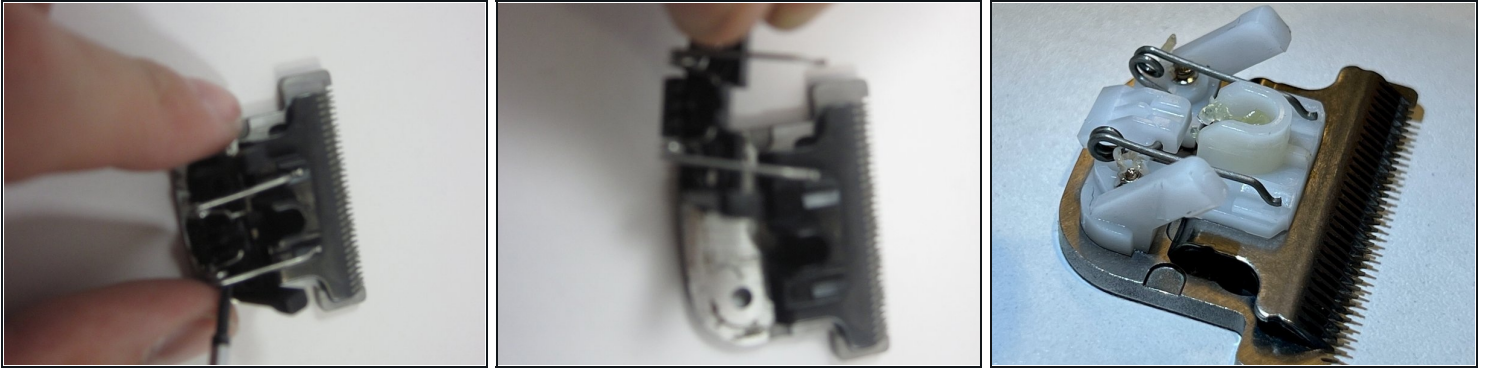

- Remove the metal clip using a Phillips #0 screwdriver.

Step 5



- Separate the Wahl Lithium Ion Trimmer head into its four components. Remove the damaged blade and replace it with a new one.

To reassemble your device, follow these instructions in reverse order.