




Nokia 6560 Speaker Replacement

Written By: Nathan Whitacre

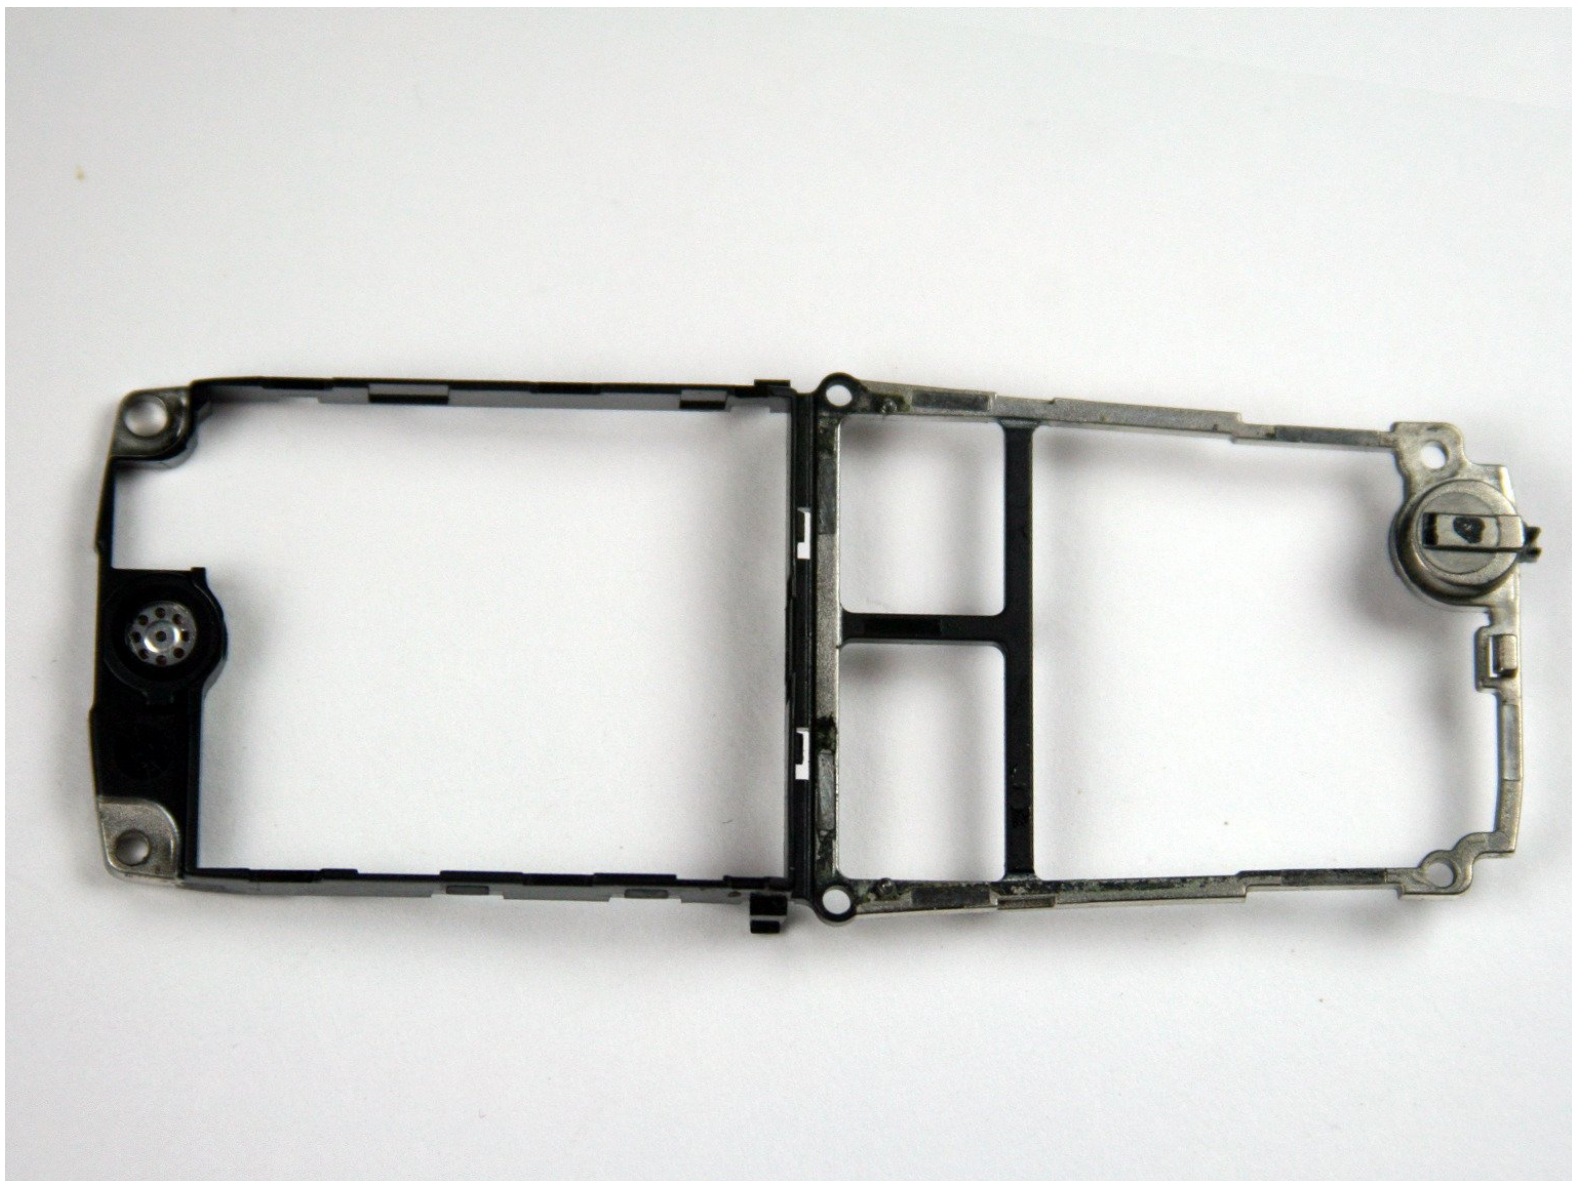

INTRODUCTION

This guide shows you how to replace the speakers on your Nokia 6560.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Remove the back cover of your cell phone by pushing the small slider with your fingernail towards the top of the phone.
- Lift off your cell phone's back cover.

Step 2




- Use your index finger to first push down and then lift up the battery as shown.
- Remove the battery from your cell phone.

Step 3 — Keypad




- Open the front cover of your cell phone with the plastic opening tool or finger nail.
- Lift the cover upwards, starting from the bottom below the keypad.

Step 4

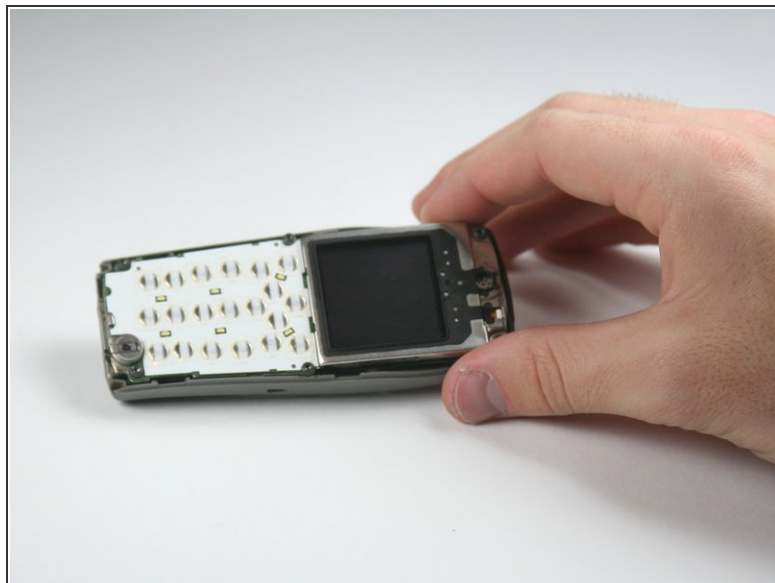


- Lift the keypad off of the keyboard as it is not attached to the phone anymore.
- ⚠ If you want to clean your keyboard do not use chemical cleaners or too much water, instead, use a damp cloth.
- ℹ It may be tricky to get the keypad in the right position while closing the front cover for the reassembly. Ensure they are aligned properly before closing the front cover!

Step 5 — Keyboard

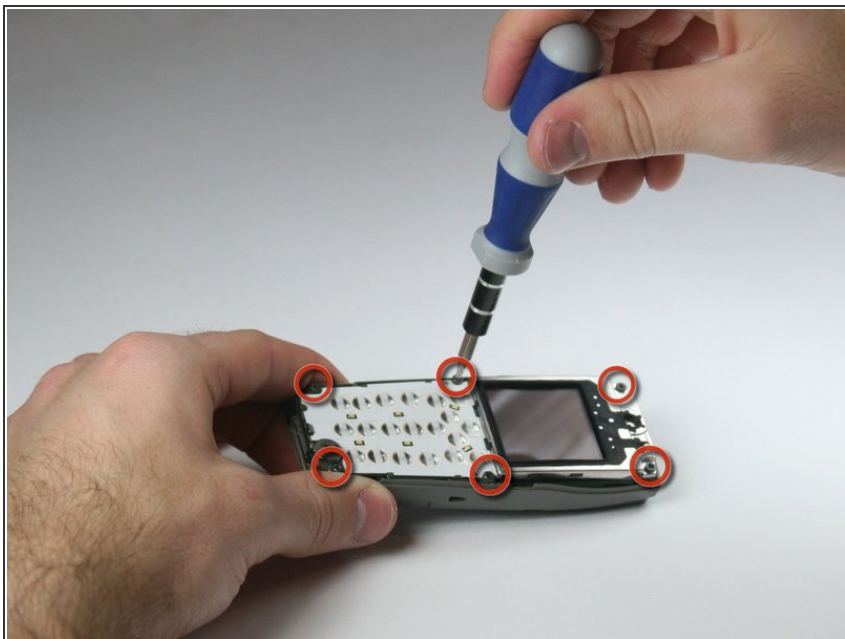


- Unscrew the six T6 torx screws which attach the frame to the cell phone case.
- ⚠ Be careful not to scratch your display with the screw driver.

Step 6

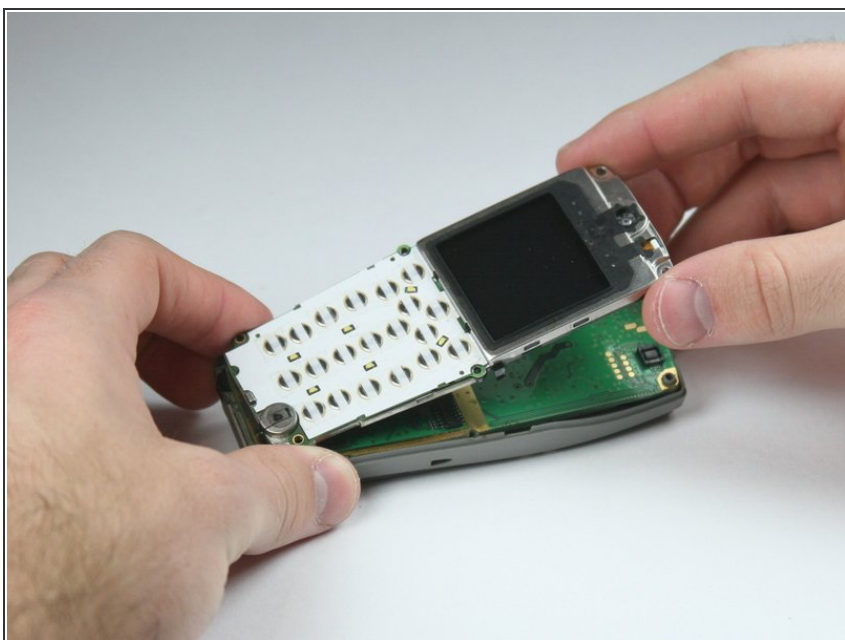


- Lift the frame off of your cell phone.

Step 7

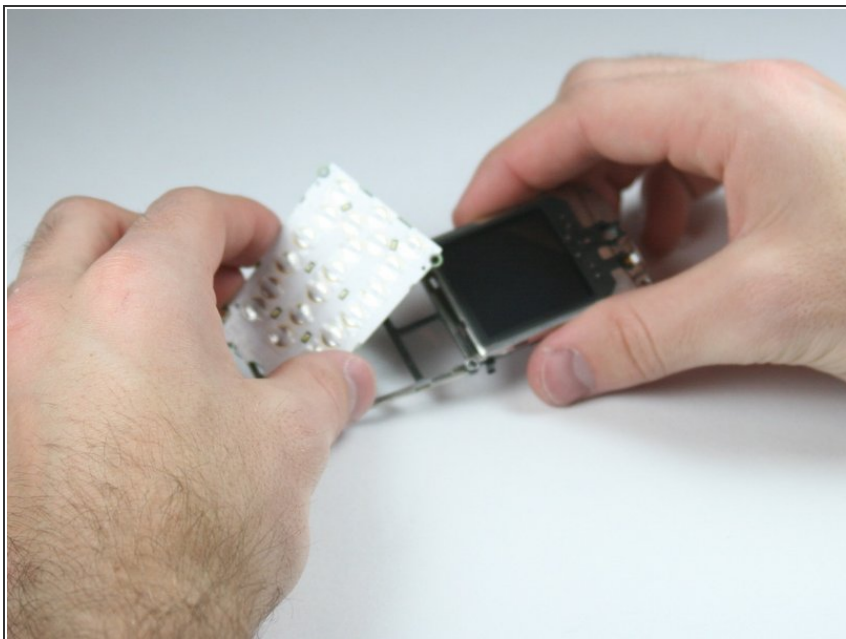

- Lift the keyboard out of the plastic frame.

Step 8 — Display

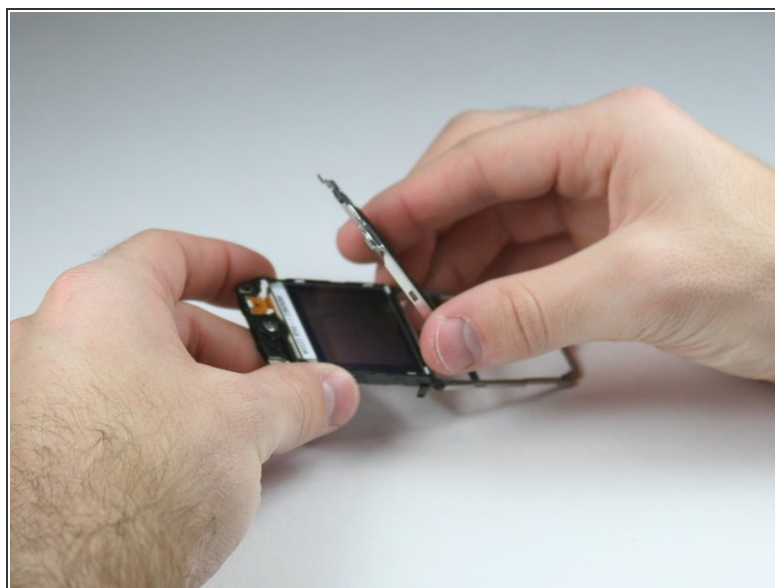


- Use the plastic opening tool to unmount the thin metal frame at the tab connections. You must do this on both sides.
- Lift the thin metal frame off of the plastic frame.

⚠ Pay attention while lifting the frame off because it can easily be bent.


This document was generated on 2020-11-28 01:42:00 AM (MST).

Step 9

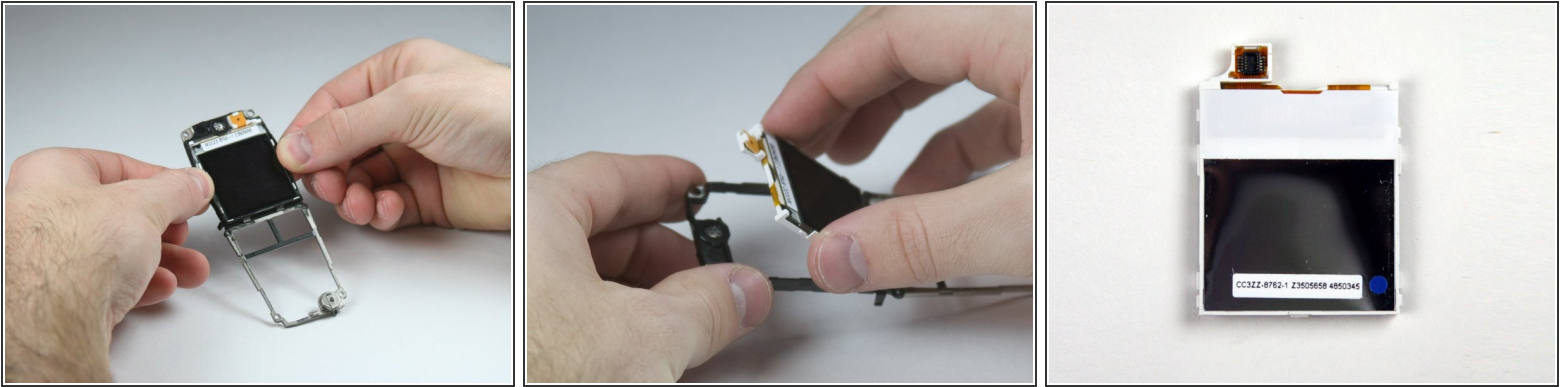

- Pull the sides of the plastic frame apart in order to loosen the display.
- Take the display out of the plastic frame.

Step 10 — Speaker

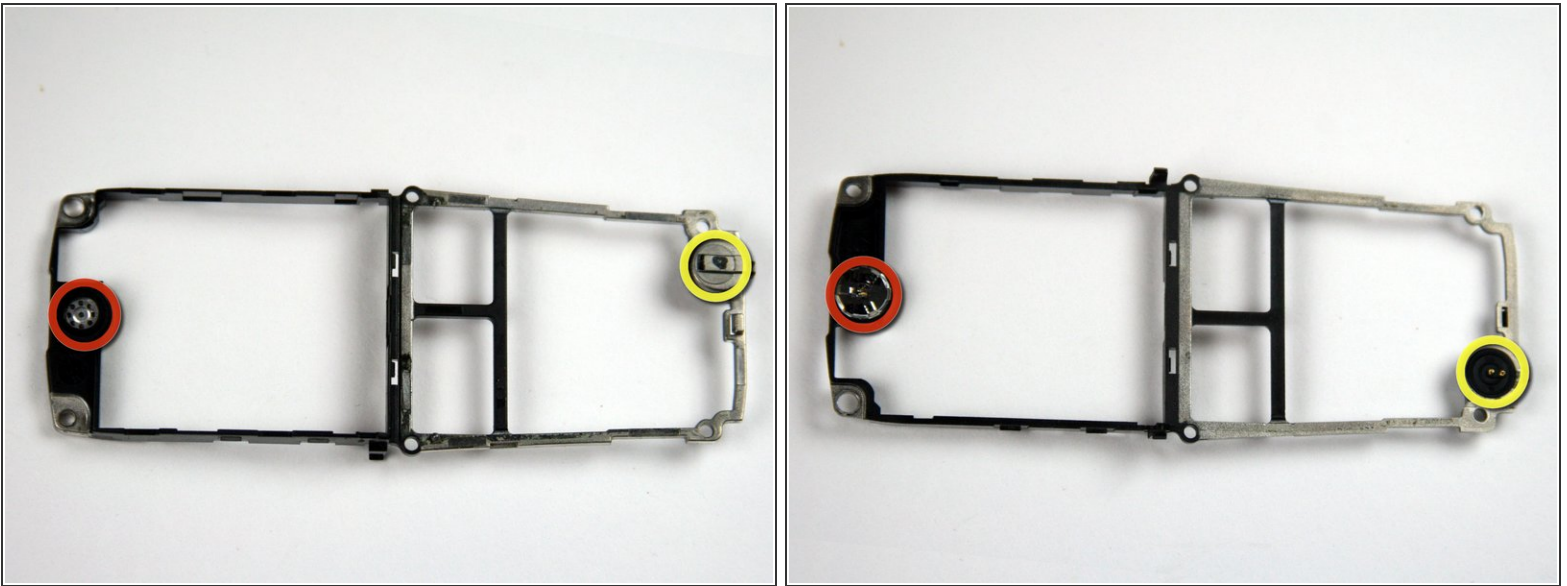

- Now you have the bare plastic frame that holds the speaker.
- The microphone is held at the bottom of this frame.
- Neither the speaker nor the microphone can be repaired. You must replace the whole frame.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 01:42:00 AM (MST).

