



# Removing PowerMac G4 M5183 DVD-ROM Drive Tray

Written By: Justin Petrilli



---

## INTRODUCTION


Removing and replacing the DVD-ROM drive.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Opening PowerMac G4 M5183 Case

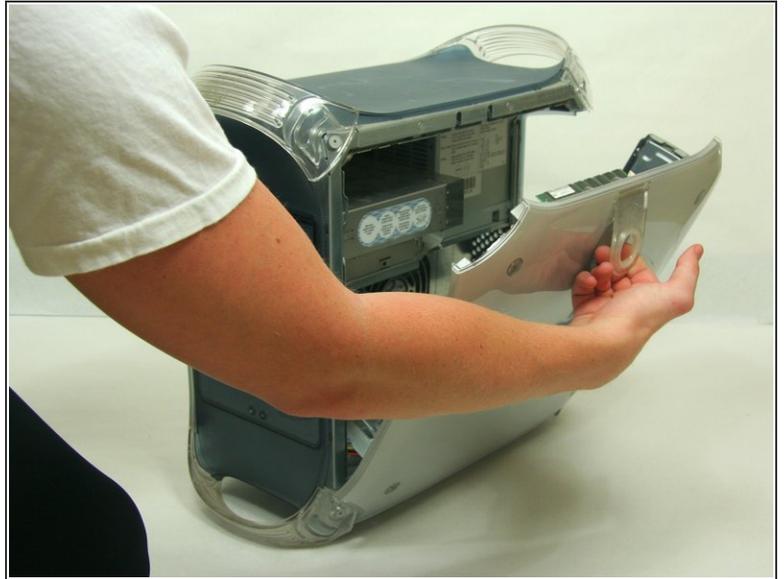

- Pull on outer latch.
- Lower door until it is level with your work surface.

**⚠** Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.

## Step 2 — DVD-ROM Drive



- Removing the faceplate.
  - On the inside of the case, find the two plastic tabs.
  - While depressing the tabs, remove the faceplate by pulling and rotating outward.

## Step 3



- Remove the two screws on the front of the drive with the Phillips #1 screwdriver.

## Step 4



- Pull the drive out to allow access to the power and ribbon cables. Do not fully remove.
- Remove both the power and ribbon cable.