



Sandisk Sansa m230 Series mp3 player Teardown

Follow the steps in this guide in order to gain...

Written By: James Thorne



INTRODUCTION


Follow the steps in this guide in order to gain access to components found inside the device which most often require repair or replacement.

TOOLS:

Phillips #0 Screwdriver (1)

iFixit Opening Tool (1)

Step 1 — Sandisk Sansa m230 Series mp3 player Teardown

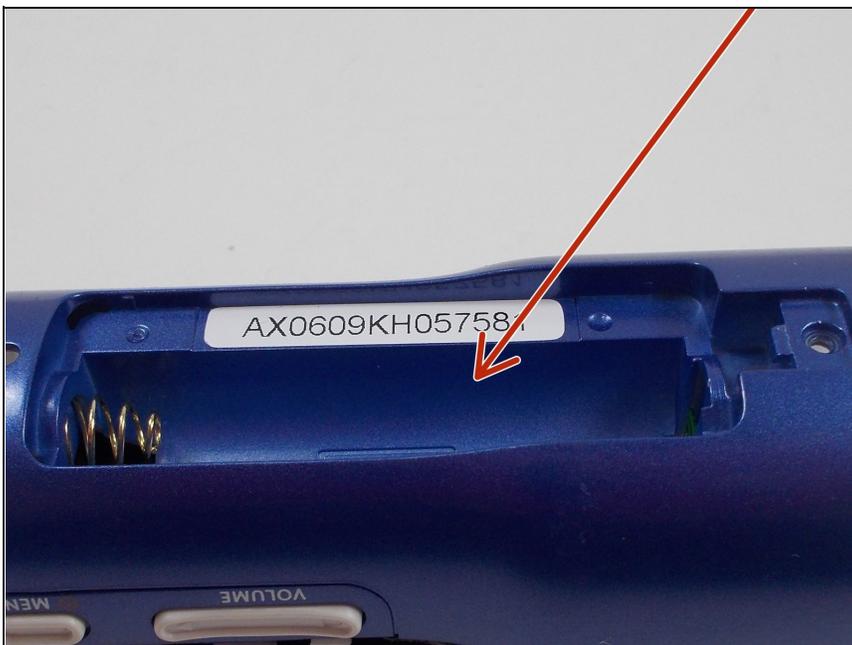

- Remove the battery compartment cover.
- Remove the battery.

Step 2



- Locate and remove the screw next to the battery compartment lid.

Step 3



- Locate the interlocking pegs along the seam of the device's casings.
- Gently pry the pegs apart one at a time, working your way around the case.

⚠ Be careful when prying apart the pegs: they are made of plastic and may break.

Step 4




- The battery contact springs may prevent the case from separating.
- Push the battery contact springs down through the hole in the case.

Step 5



- The casing protecting the USB and headphone jacks must be removed.
- Locate and gently pry apart the two interlocking clips holding it in place.
- The outer casings may now be removed and the MP3 player should separate.

Step 6

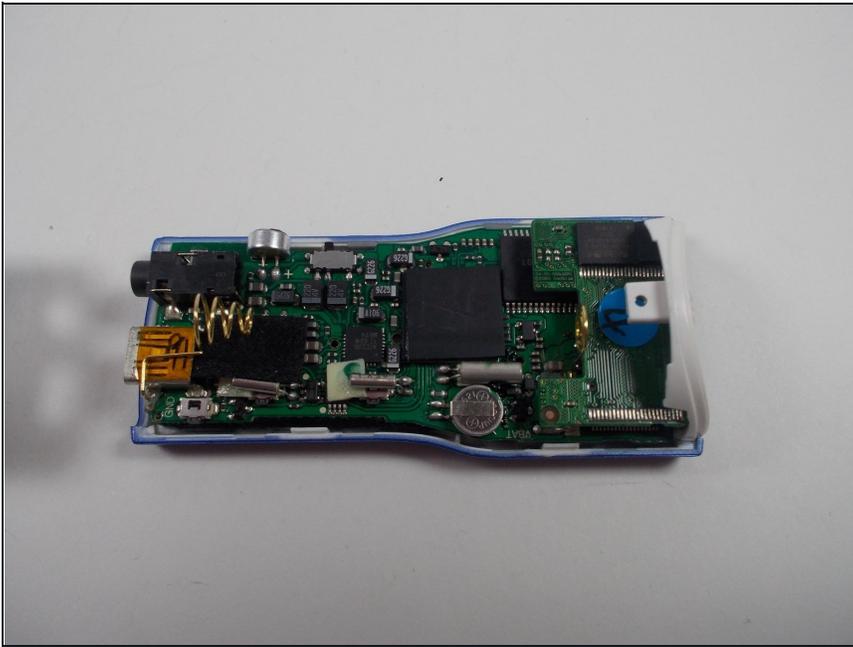

- You now have access to all components found on the inside of the device!

To reassemble your device, follow these instructions in reverse order.