




Kodak Easyshare C813 Battery Door Replacement

This guide demonstrates how to replace the door...

Written By: Susan Marano

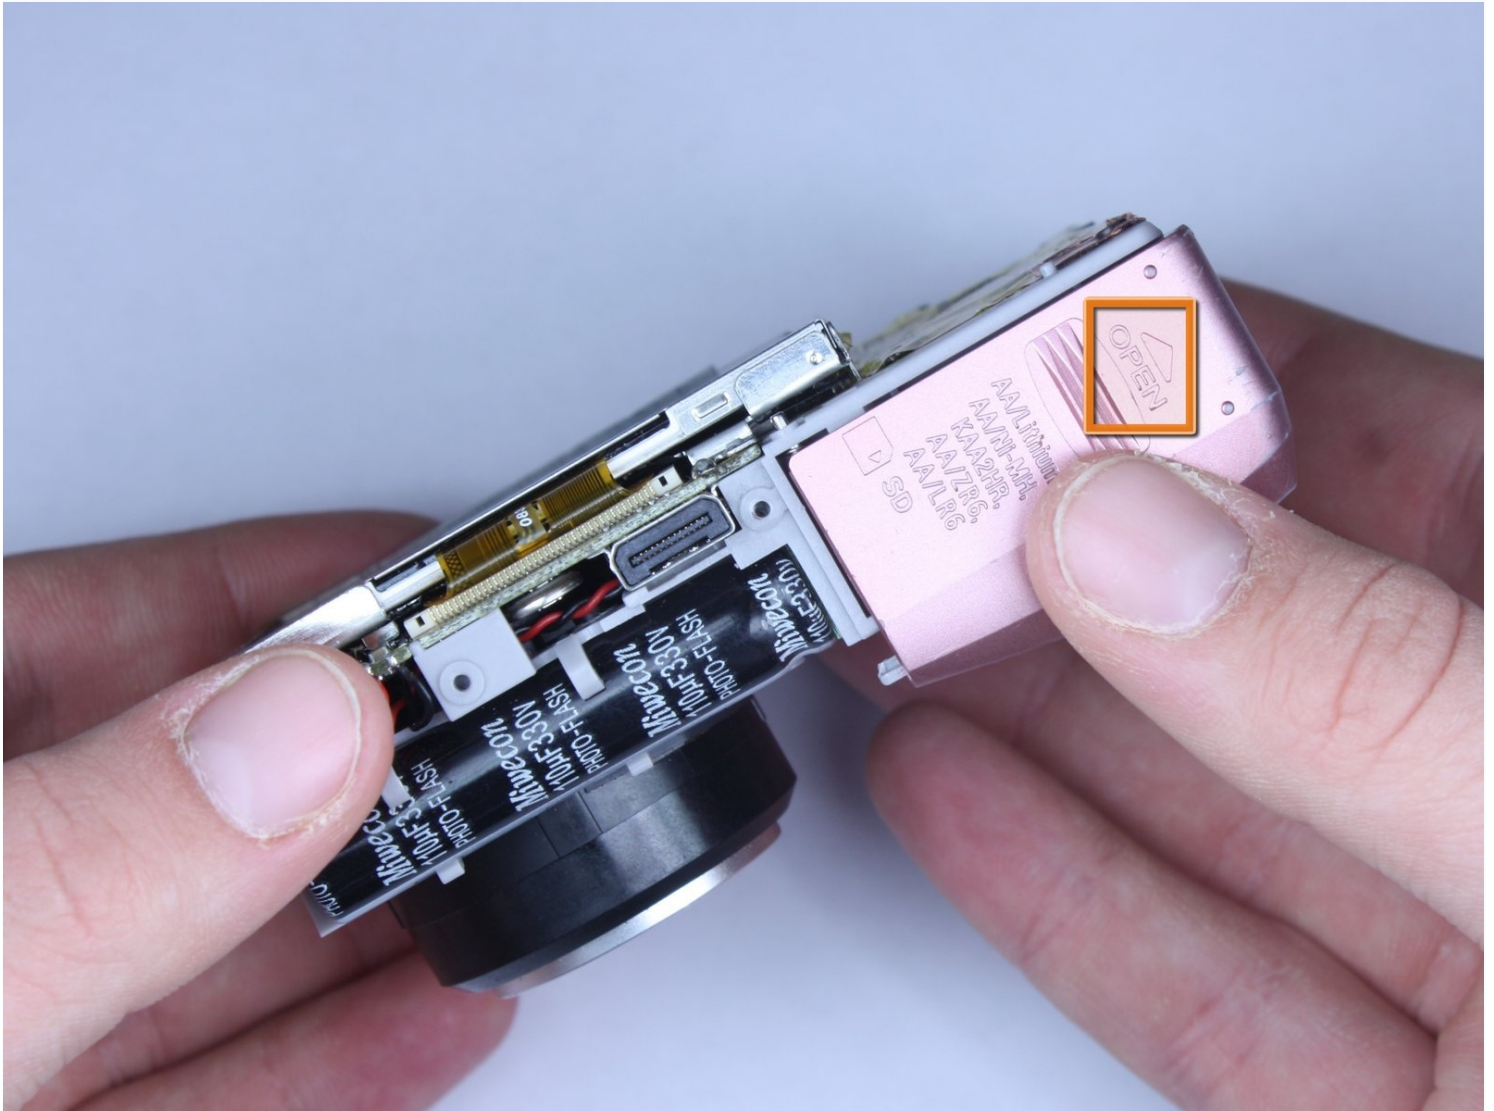

INTRODUCTION

This guide demonstrates how to replace the door to the battery compartment.

TOOLS:

[Anti-Static Wrist Strap](#) (1)

[Phillips #00 Screwdriver](#) (1)

[Spudger](#) (1)

[Tweezers](#) (1)


[iFixit Opening Tool](#) (1)

Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera near the selector dial.

Step 2

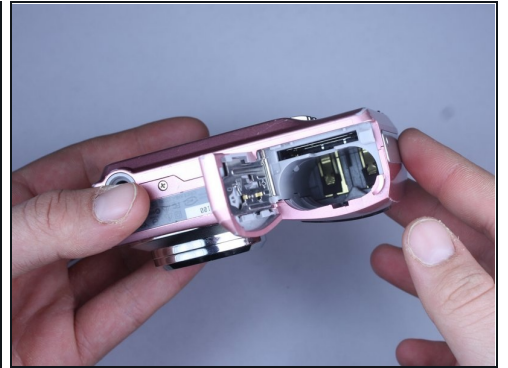

- Press thumb firmly on battery door and slide it in the direction of the arrow.
- Lift thumb allowing the door to swing open.

Step 3 — Back Cover




- Before removing back cover, it is advisable to use an [anti-static wrist strap](#) to prevent damage to electronics.

Step 4



- Turn the camera off by firmly pressing the power button located on top of the camera.

Step 5

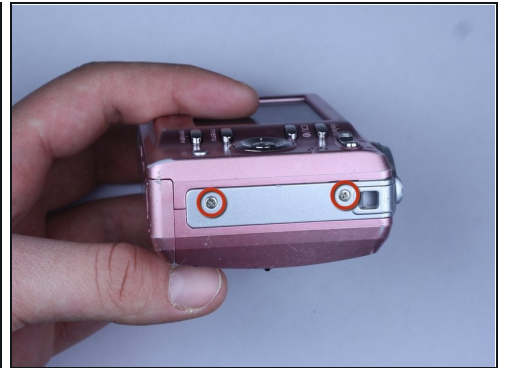

- Locate the 7 screws holding the back cover on.
- Three screws are located on the bottom of the camera.
- Two screws are located on the side shown in the photograph.
- Two final screws are located on the opposite side shown in the photograph.

Step 6



- Remove all 7 screws:
 - Hold the camera firmly with one hand so that you can still see a screw.
 - Place the Philips 00([Found here](#))screwdriver into the screw.
 - Turn the screwdriver to the left until it is free.
 - Repeat for the remaining screws.

Step 7




- Use plastic opening tools to slightly open the side of the case.
- Insert a plastic opening tool and apply pressure to the internal three tabs at the top.
 - The first two are near the words "3X Optical Zoom".
 - The third is near the shutter button.

Step 8




- Gently pull apart the back cover from the rest of the camera.
 - Make sure there are no more screws or tabs keeping the cover on.
 - Use the plastic opening tool to separate any sides still closely connected.

Step 9 — Front Cover

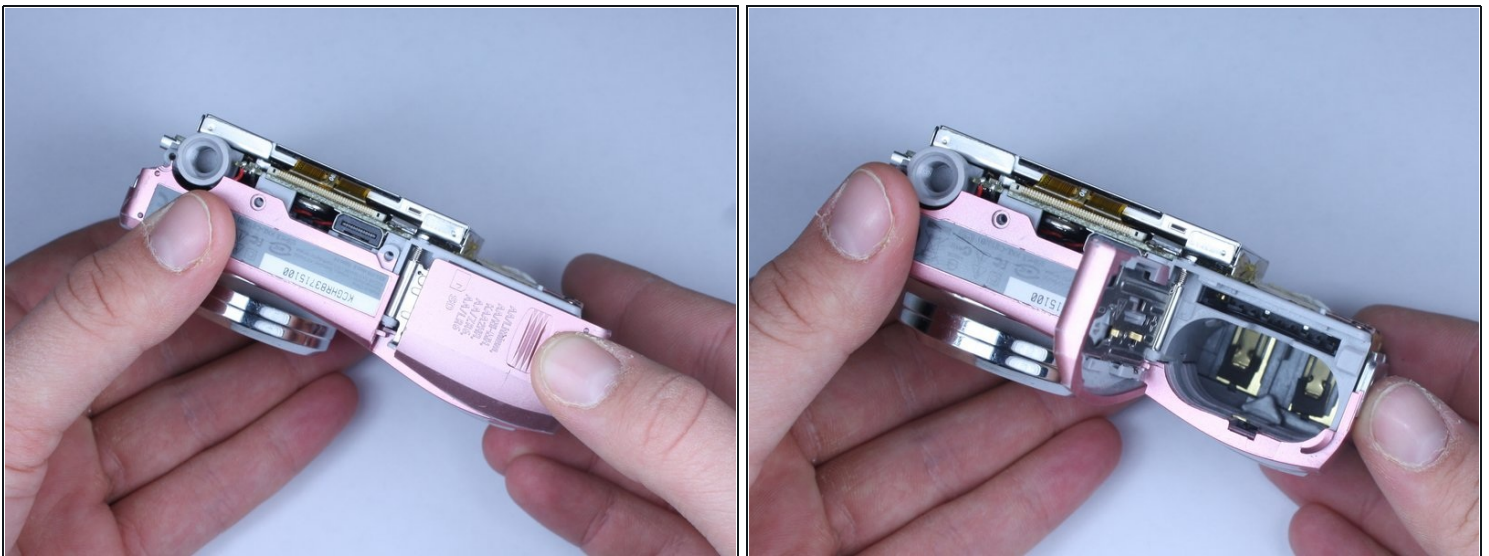

- Open the battery door.
 - Press thumb firmly on battery door and slide it in the direction of the arrow.
 - Lift thumb allowing the door to swing open.

Step 10

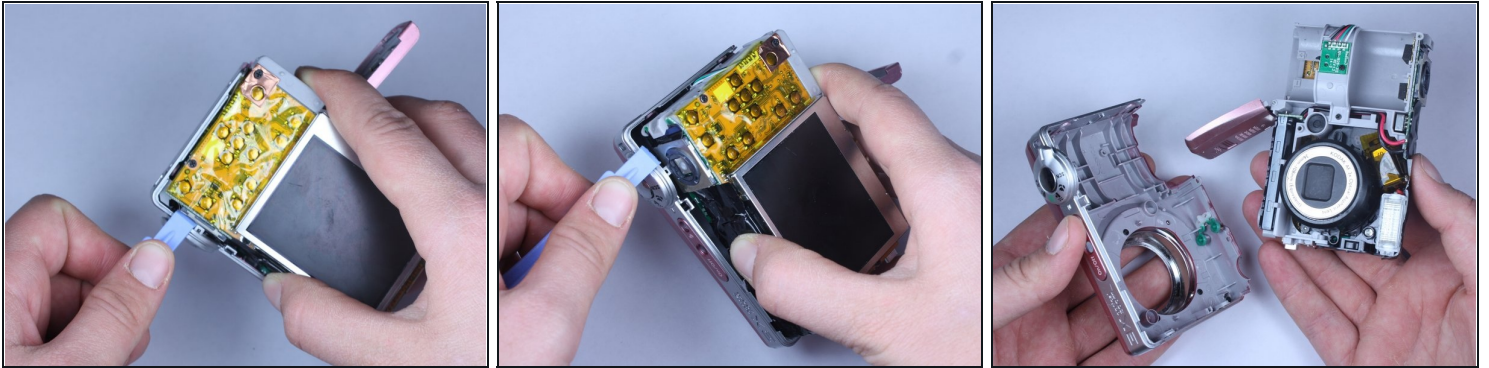

- Use the plastic opening tool to lift the casing around the shutter button.
- Gently remove the front cover from the device.


Step 11



⚠ Do not touch the terminals shown in the photo. These link to the capacitor which could shock you if not discharged.


- To discharge the capacitor follow this [guide](#).

Step 12 — Battery Door

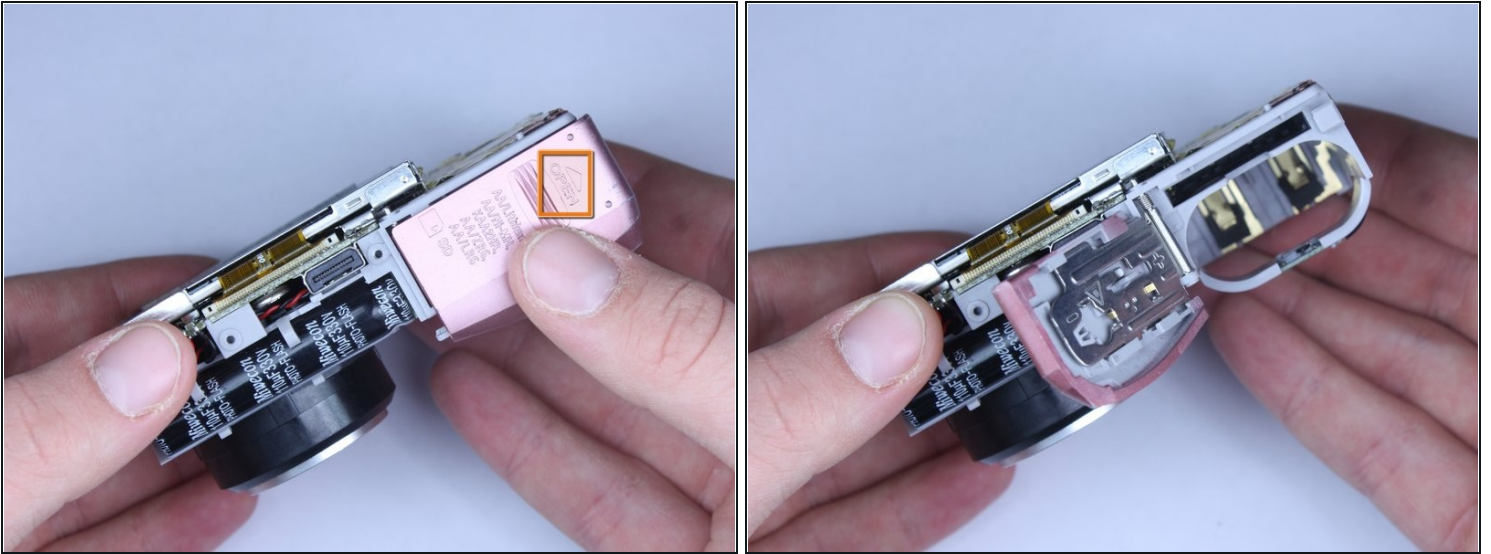


- Open the battery door by pulling in direction of arrow

Step 13

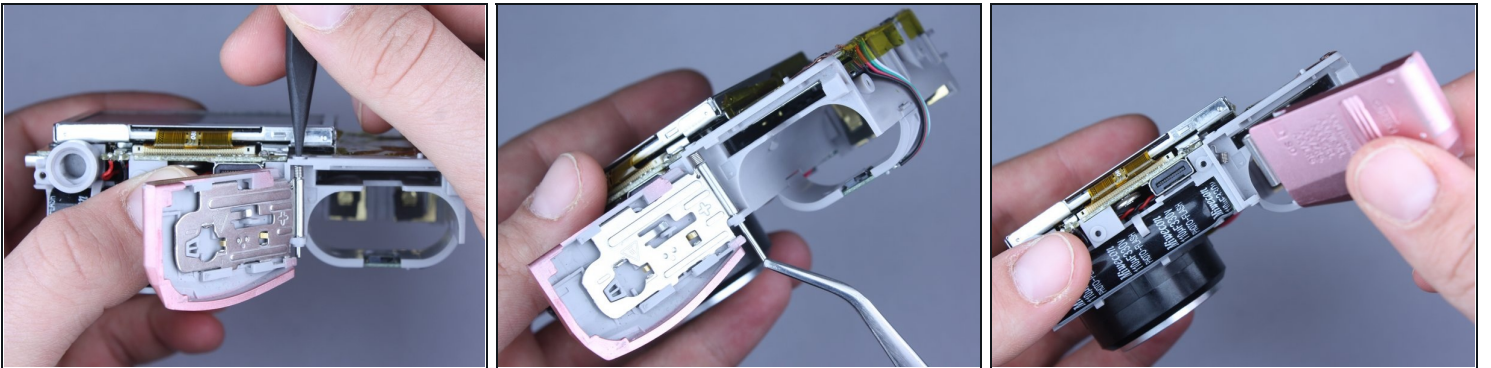

- Use grey wedge([Found here](#)) to push metal pin
- Use tweezers([Found here](#))to pull out metal pin


Step 14

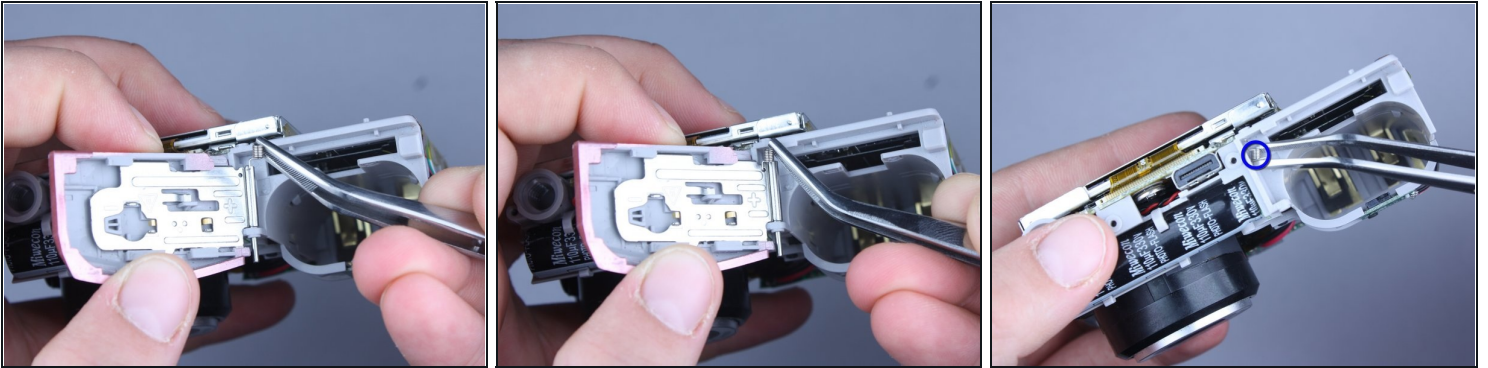

⚠ The spring is small and easy to lose

- Carefully remove battery door and spring

Step 15

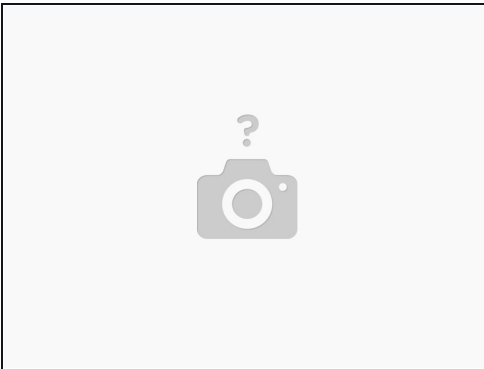

- Make spring is in correct orientation when putting back
- The spring should hook onto a small hole in the door

To reassemble your device, follow these instructions in reverse order.