



# Dell Latitude D610 RAM Replacement

Use this guide to replace the RAM of the Dell Latitude D610.

Written By: Jordan Barham



## INTRODUCTION

Replacing a defective RAM component is pretty easy and can stop your computer from frequently crashing.



### TOOLS:


- [Phillips #1 Screwdriver](#) (1)



### PARTS:

- [DDR2 RAM Card](#) (1)

## Step 1 — Battery

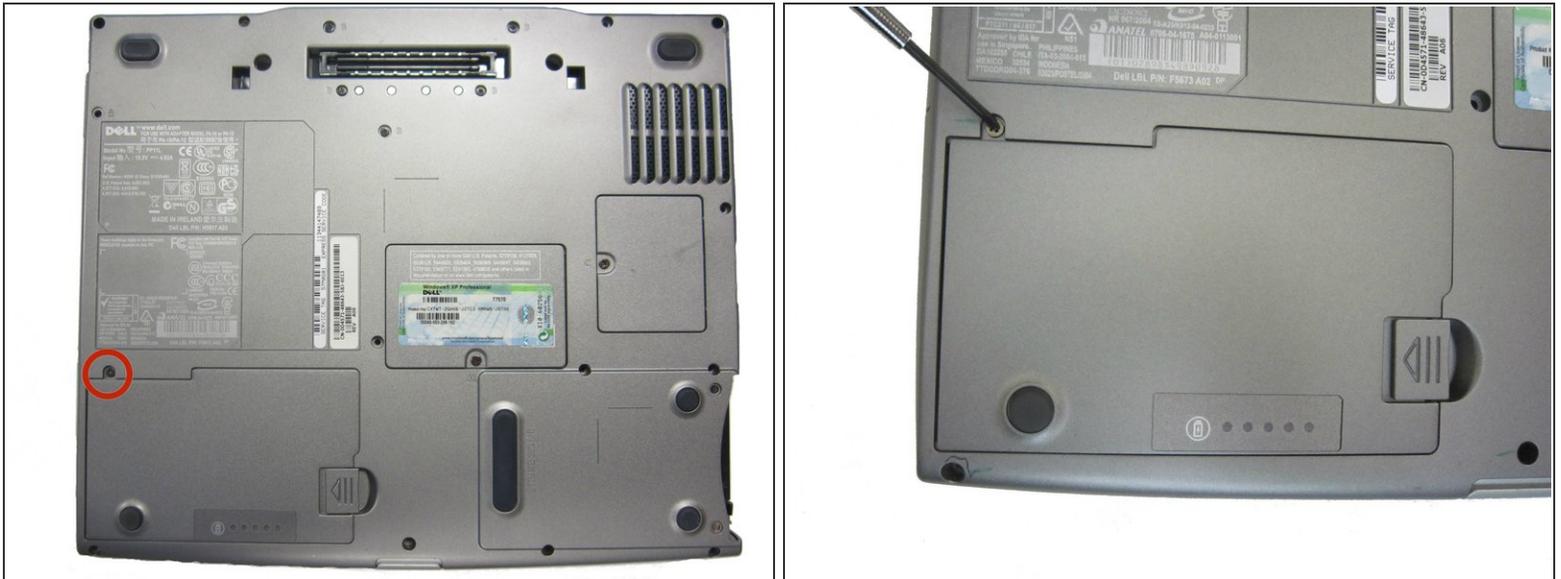

- Remove the 3.9 mm Phillips #1 screw from the battery compartment.

## Step 2



- Locate the laptop battery release button lock
- Push the battery release in the direction of the arrow, and pull upward.

### Step 3



- Remove the battery from its compartment.

### Step 4 — RAM



- Remove the 3.9mm Philips #1 screw holding the panel for the RAM.

## Step 5



- Lift and remove the panel.

## Step 6



- Using two fingers, push the silver ends away from the RAM until the RAM is released.

## Step 7



- Lift the RAM from its slot.
- Remove the RAM completely.

To reassemble your device, follow these instructions in reverse order.