


iRobot Roomba 551 Main Brush Motor Replacement

Remove the main brush motor from your Roomba.

Written By: John McTigue

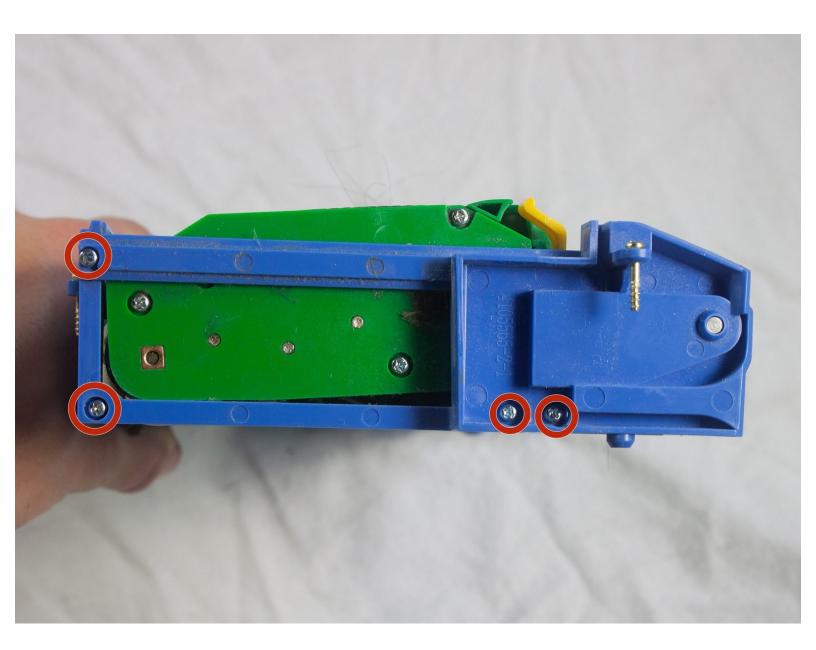

This document was generated on 2021-01-09 04:42:33 AM (MST).

INTRODUCTION

This guide explains how to remove the main brush motor from your Roomba.



TOOLS:


- Phillips #1 Screwdriver (1)
- Phillips #2 Screwdriver (1)

Step 1 — Side Brush




 Place your Roomba upside-down on a hard surface.

Step 2

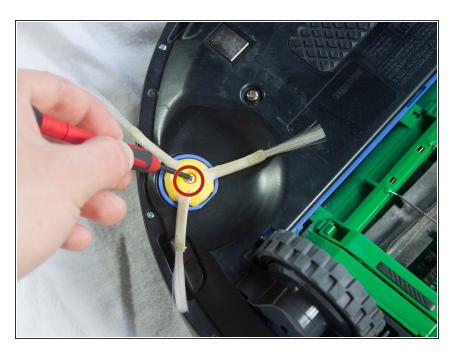


 While holding the side brush in place, use a Phillips #1 screwdriver to remove the 4.5mm screw from the center of the brush.

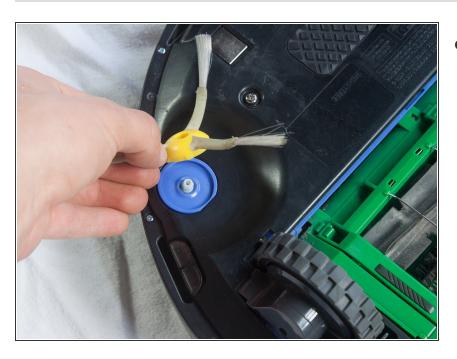

 Gently pull upwards on the brush to remove it.

Step 4 — Bottom Plate

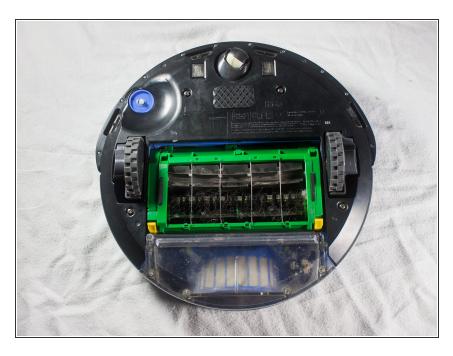


 Rotate the Roomba upside-down so the bottom is facing towards you.





Using a Phillips #2 screwdriver, remove the captive screws that hold the bottom plate in place.

Step 6

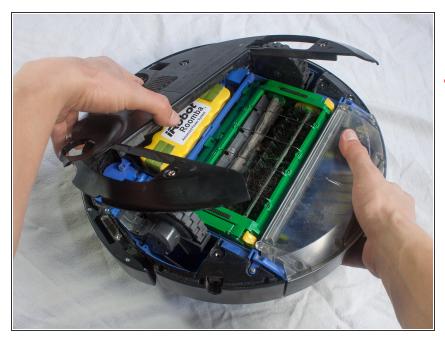


- Carefully lift the bottom plate.
- The battery is only secured in place by the bottom plate, and may fall out once the bottom plate is removed.

Step 7 — iRobot Roomba 551 Dirt Bin Replacement



 Push on the dirt bin release button, and pull gently.

Step 8 — Brush Case

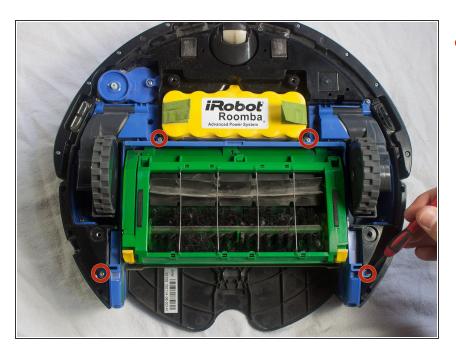



 Use a Phillips #1 screwdriver to loosen the 4 captive screws around the case.




 Grab the brush case and pull upwards to remove.


Step 10 — Main Brush Motor

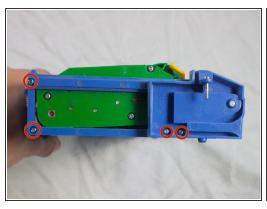


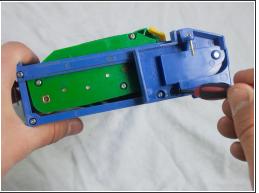


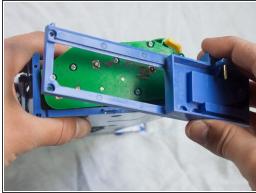

- Use a Phillips #1 screwdriver to remove the 9.5mm screws from the side of the brush case, and pull to detach.
- Repeat for the opposite side of the brush case.

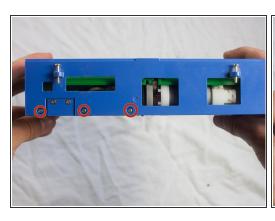


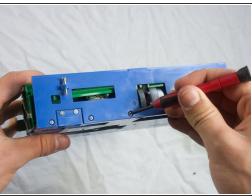


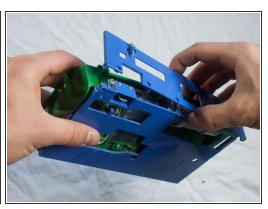

- Use a Phillips #1 screwdriver to remove the three 5.0mm screws from the back of the brush case.
- Pull off the back of the brush case.


Step 12

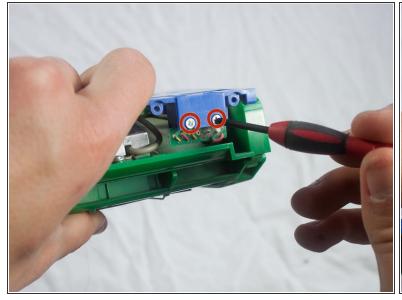

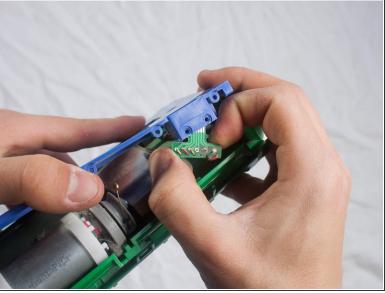


- Use a Phillips #1 screwdriver to remove the two 1.5mm screws securing the chip in place.
- Remove the chip from its housing in the blue brush case.



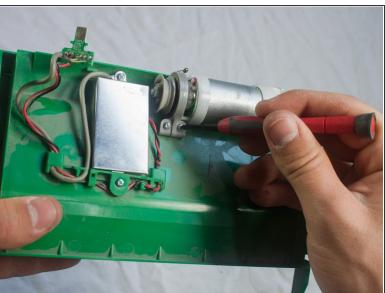


Use a Phillips #1 screwdriver to remove the two 5.5mm screws securing the motor in place.

Step 14

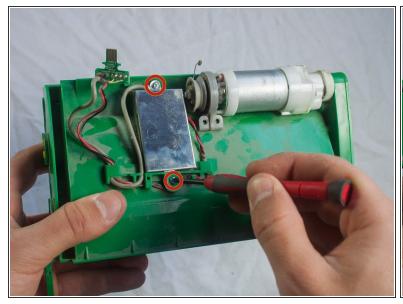




- Use a Phillips #1 screwdriver to remove the two 4.5mm screws on the top and bottom of the metal plate.
- Pull out the motor and metal covering.

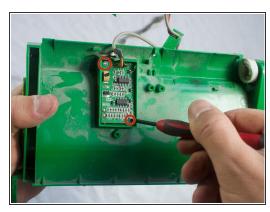



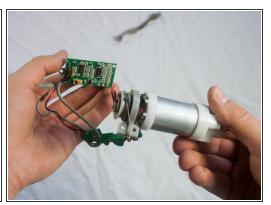

- Use a Phillips #1 screwdriver to remove the two 3.5mm screws on the corners of the circuit board.
- Gently pull out the circuit board.

To reassemble your device, follow these instructions in reverse order.