 




Nokia 6030 Logic Board Replacement

Replacing the logic board.

Written By: Spencer Woodworth

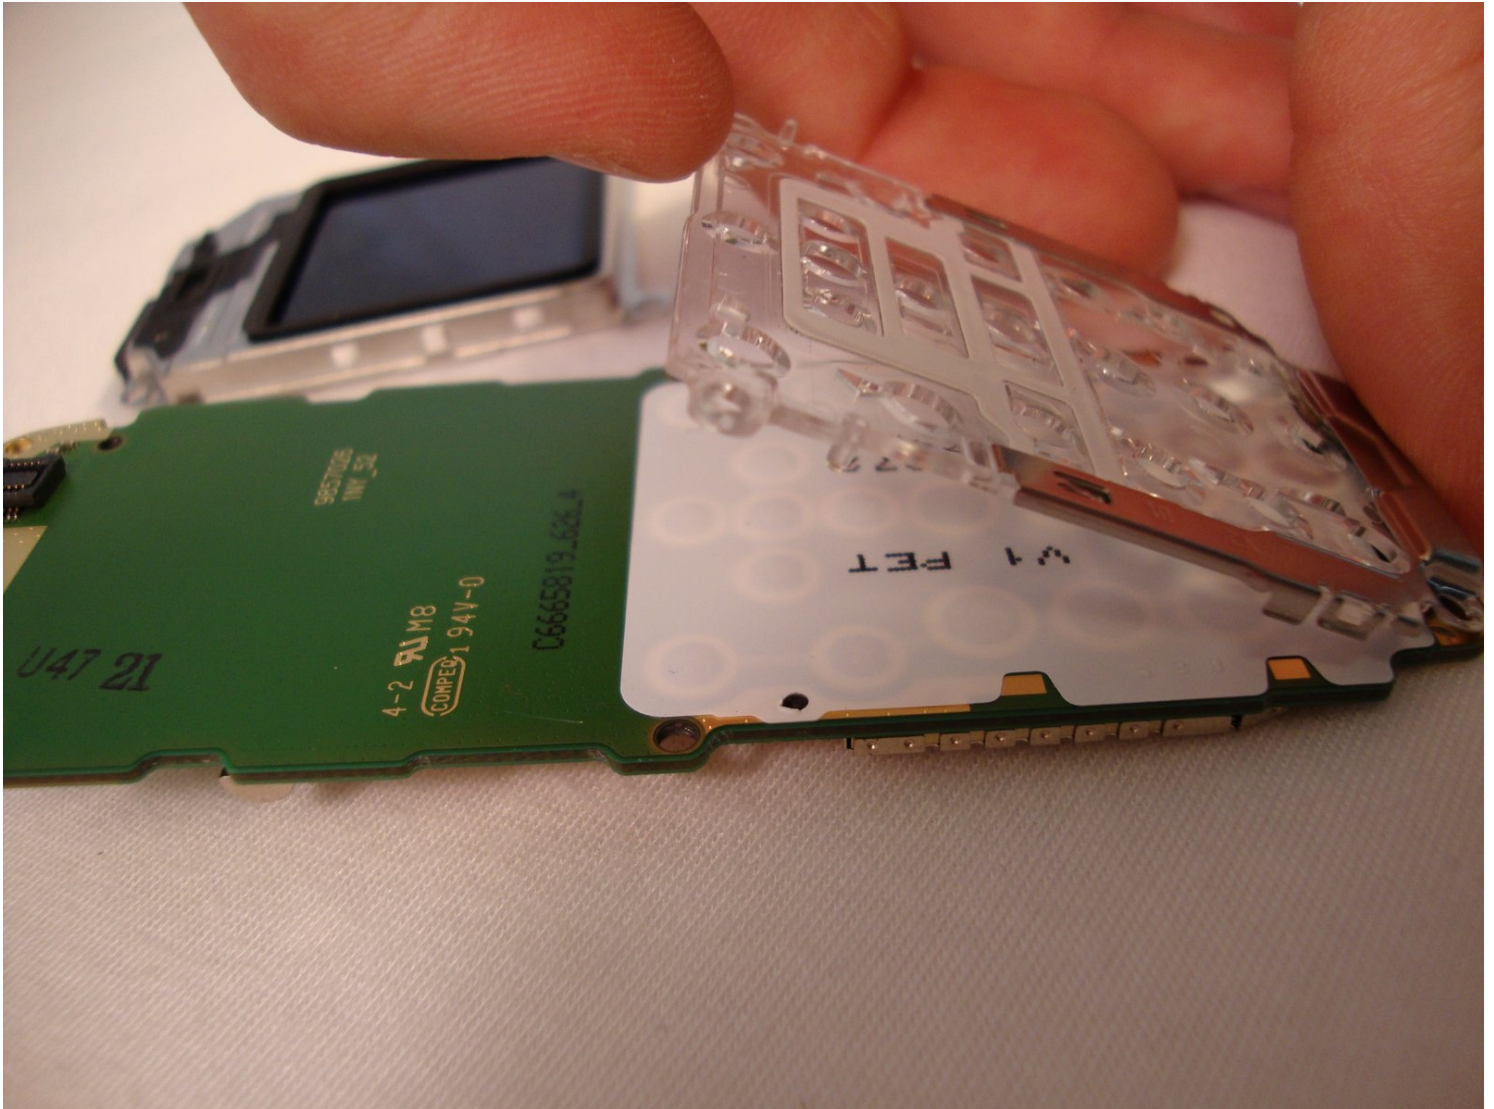

INTRODUCTION

Replacing the logic board.

TOOLS:

[T6 Torx Screwdriver](#) (1)

Step 1 — Battery



 
- Press down on the grip on the back of the phone and slide the rear housing down towards the bottom of the phone.

Step 2



- Use your finger to gently pull the bottom of the battery up by using the slip found at the bottom of the phone.
- Lift out battery and remove.

Step 3 — SIM Card

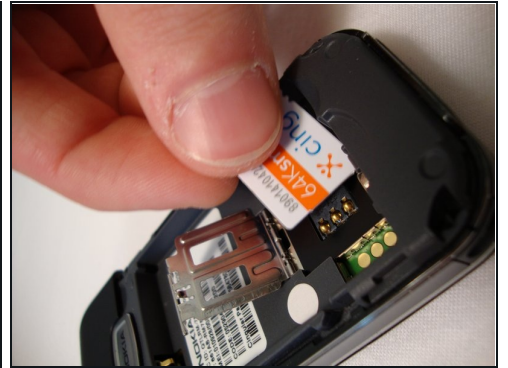




- Use your finger to lift the metal cage up.
- Remove SIM card.

Step 4



- Use your finger to close the metal cage.

   Step 5 — Front Cover

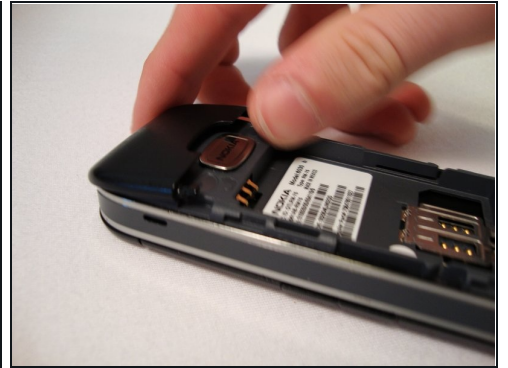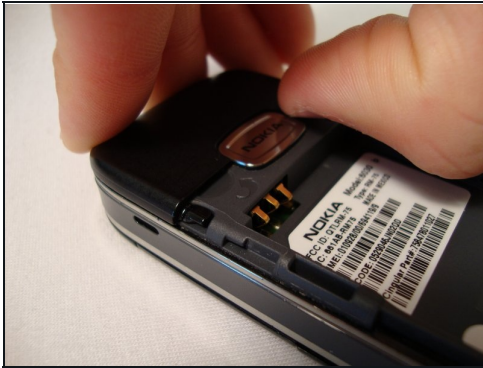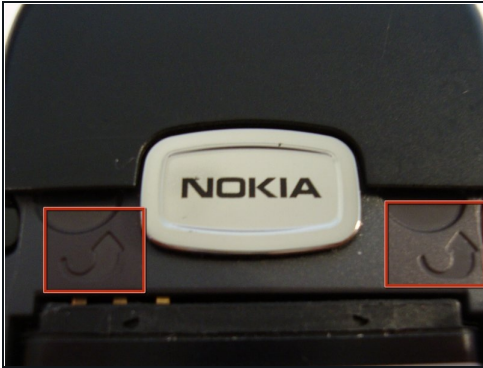


- Insert your two fingers under the two tabs found at the top of the phone underneath the black casing, then pull the casing up and slide it out slowly.

Step 6



- After removing the top cover, turn the phone over so the screen is facing upwards.

 Step 7

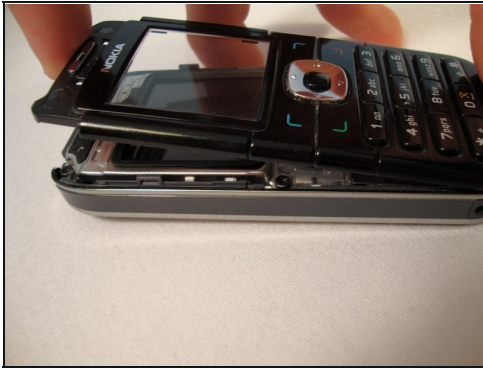


- Use your fingers to slowly lift the screen back towards the bottom of the phone using the arrows found at the top of the phone.

Step 8 — LCD Screen



- Remove the six screws found along the frame of the phone with a T6 Torx screwdriver and put them to the side.


 
Step 9

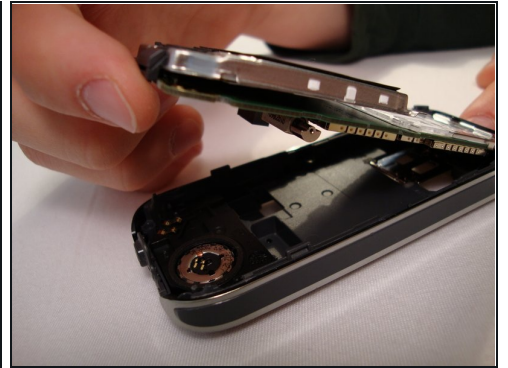

- Gently lift the top of the screen up.




⚠ Be cautious of loose parts.

  Step 10

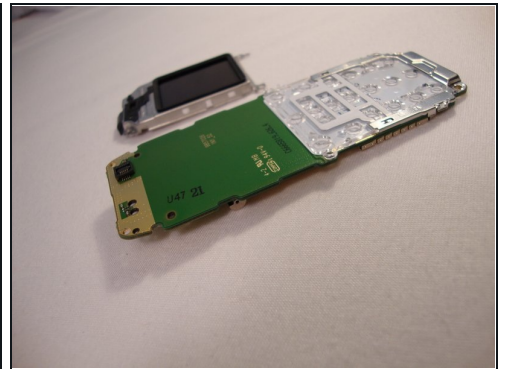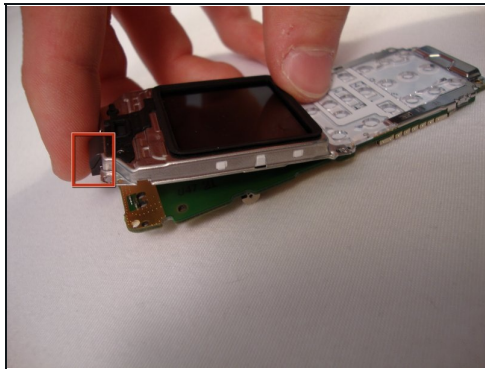

- Gently pull up on the grey plastic tab.

   Step 11 — Logic Board

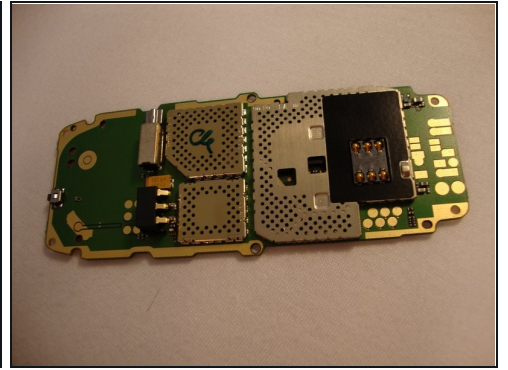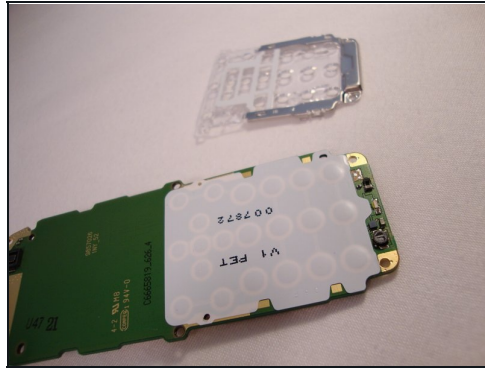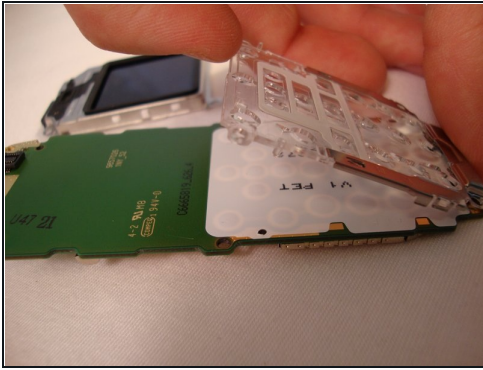

- Lift off plastic cover.

To reassemble your device, follow these instructions in reverse order.