

Toshiba Satellite A105-S4284 Speakers Replacement

Speakers tend to degrade with time, which can...

Written By: Josh



INTRODUCTION

Speakers tend to degrade with time, which can result in a loss of audio quality. Speakers can also accumulate layers of dust and debris that lessens their quality. Occasionally a speaker will altogether stop working. in each of these cases it can be helpful to remove the offending speaker. The speakers in this laptop are hard to get to but, with the proper tools and instructions can be removed.

TOOLS:

Phillips #1 Screwdriver (1) iFixit Opening Tool (1)

Step 1 — Battery





⚠ Make sure your computer is turned off and the computer is not plugged in.

- Turn your laptop upside down, and slide the right release tab outward.
- Using you left hand, hold the left release tab towards the left side and then pull the battery out.

Step 2 — Keyboard



i Flip the laptop over so it is rightside up, and open the laptop all the way so that the screen is horizontal.

Step 3








- Using the plastic opening tool, pry off the panel above the keyboard, starting near the right front speaker.
- Use the plastic opening tool to pop off tabs along the length of this panel.
- (i) This may feel like you're about to break something, but as long as you work your way down the panel and don't yank it out, the laptop will be fine.

Step 4

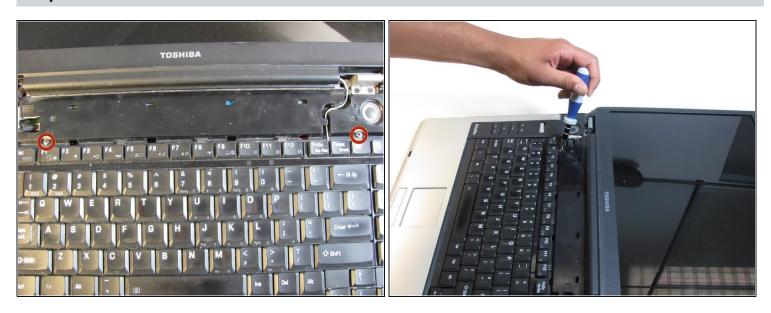

• Unscrew the two 4.5 mm screws holding the keyboard on with the Phillips #1 screwdriver.

Step 5



- Lift the keyboard gently from the side closest the screen.
- Pull out the ribbon connecting the keyboard to the laptop.

Step 6 — Casing







- Disconnect wire attaching LCD to motherboard
- Using the Phillips screwdriver remove the two 4.0mm screws from each hinge above speakers
- Partially close the lid and remove the last two 4.0mm screws from the back of the laptop.

Step 7





- Remove the seventeen 4.5mm phillips screws on the bottom of the laptop.
- Using the pry tool separate the two halves of the laptop base.

① Use caution when separating the laptop halves as they are still connected by two ribbon cables.

Step 8




• Lift the top half of the case enough to get your hand beneath it, and then remove the two ribbon cables that connect it to the motherboard.

Step 9 — Speakers



 Remove the lower half of the laptop and lay upper half on its top.


Step 10

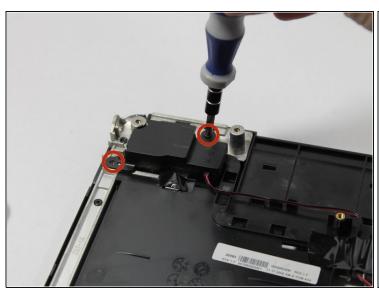



- Using the Phillips screwdriver remove the two 4.0mm screws holding each of the speakers housings to the case.
- Remove the speakers from the case being careful of the wires.

Step 11

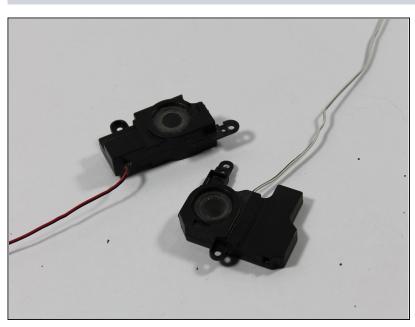

 The wires for the speakers are color coded. The red and black wires are for the right speaker, and the black and white wires are for the left speaker.

To reassemble your device, follow these instructions in reverse order.