



Tefal Actifry Disassembly

The guide is the replacement of a Tefal Actifry Motor. The one that turns the chips in the basket.

Written By: Declan Green



INTRODUCTION

We are going to remove the bottom casing of the Tefal Actifry to replace the motor that turns the chips when cooking.



TOOLS:

- [T15 Security Torx Screwdriver](#) (1)



PARTS:

- [New Actifry Motor](#) (1)

Step 1 — Tefal Actifry Disassembly



- This is the Tefal Actifry as it would sit when being used. You will need to turn it upside down to see the three security screws that need to be removed. I have circled them in red here. The next photo shows a closeup of one of the screws.

Step 2




- Next remove the three screws and the little fan cover at top end of the unit. I gently prised it off with a butter knife. This allows the bottom plastic cover of the Actifry to come off, from the fan end first, then it slips over the lid release buttons and off.

Step 3



- The motor is now exposed with the bottom cover removed. There are two security screws, the same size as the ones on the outside cover that need removed. There are two wires that need removed from the old motor and inserted into the new motor. The new can be secured in place and tightened with the screws.

Step 4

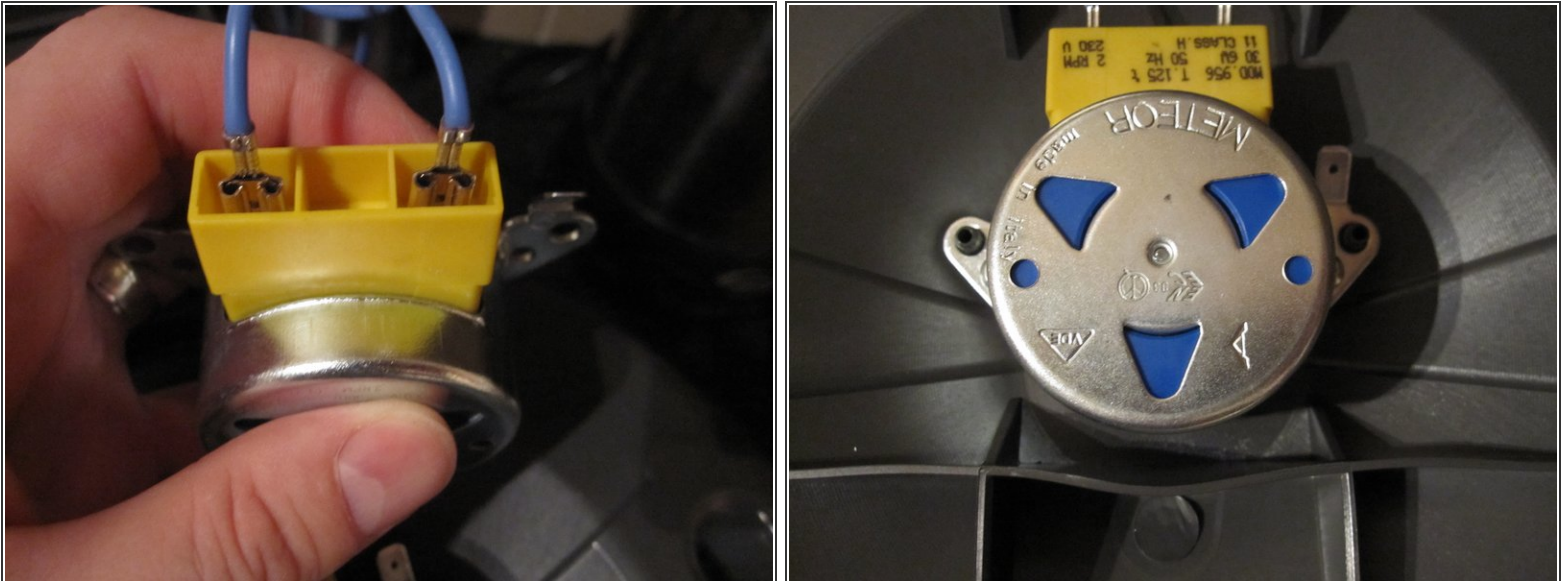

- When the wires are inserted snugly into the new motor and all is secure the bottom can be put back on the Actifry. Remember to slip it on in reverse of how you removed it. I had a little trouble getting it over the buttons, but it will with a little manipulation.

Step 5



- I took my old motor apart to see why it wouldn't work. I discovered a circular magnet in the bottom, underneath the cogs etc. Upon closer inspection I seen it was cracked and a little pull and it came apart. It made it's way to the bin.

To reassemble your device, follow these instructions in reverse order.