



Gateway SA1 Wireless Card Replacement

A guide on how to replace a burnt out or broken Wireless card.

Written By: Shawn Cabral





TOOLS:

- [Pro Tech Toolkit](#) (1)
-

Step 1 — Wireless Card



- The first thing you need to do is remove the panel concealing the wireless card, by taking out the screws.

Step 2



- Locate the wireless card on the right side of the now removed panel.

Step 3



- Remove the screws in the two possible locations.

Step 4



- After removing the screws, gently pull upwards on the end of the wireless card until it is angled as shown.

Step 5



- Pull the card directly outward from its socket, all while being mindful of the connected wires.
- Remove the wired connections by gently pulling them directly away from the card. Please remember where each one was connected, it will be useful for reconnecting

Step 6



- Reconnect wires to new wireless card and screw back into place.

To reassemble your device, follow these instructions in reverse order.