



# LG VX7000 Internal LCD Screen Replacement

Replace a cracked internal LCD display. Note:...

Written By: Nichole Shaw



# INTRODUCTION

Replace a cracked internal LCD display.

Note: to replace the internal display, you must replace the entire face plate, not just the plastic screen.

---

## TOOLS:

[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

---


## Step 1 — Internal LCD Screen



- Using [Tweezers](#), remove 4 rubber screw covers.
  - Remove screws located under rubber plugs using the screwdriver by turning counterclockwise.
- ⓘ NOTE: Screws will not come completely out of phone.




## Step 2

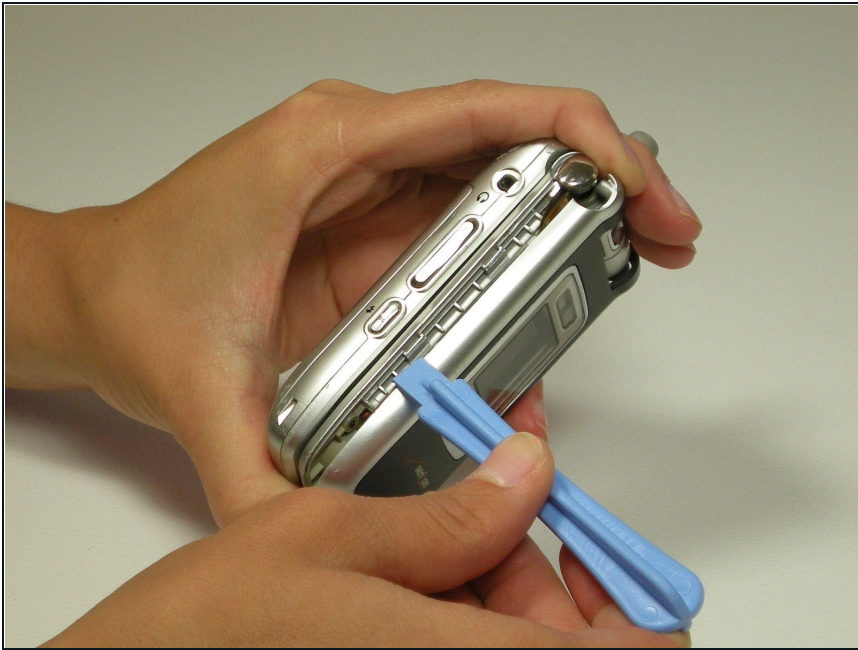


- Using the iPod Opening Tool, pry the face plate off the front of the phone.
- ① NOTE: There will be a significant amount of resistance to removing the face plate from the phone.

## Step 3

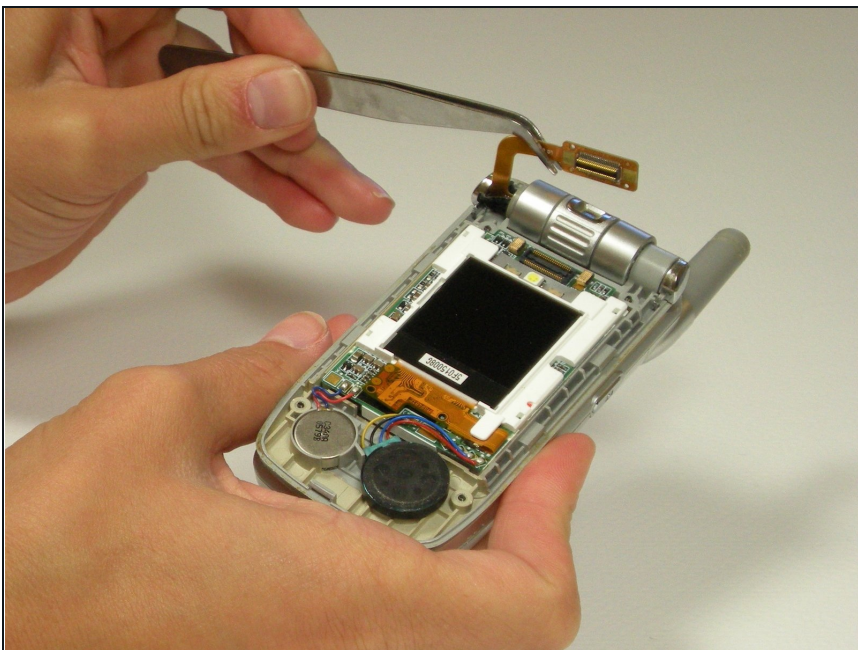

- Unsnap gold plate from the secondary logic board.
- Reposition the plate so that it is out of the way for face plate removal.

## Step 4

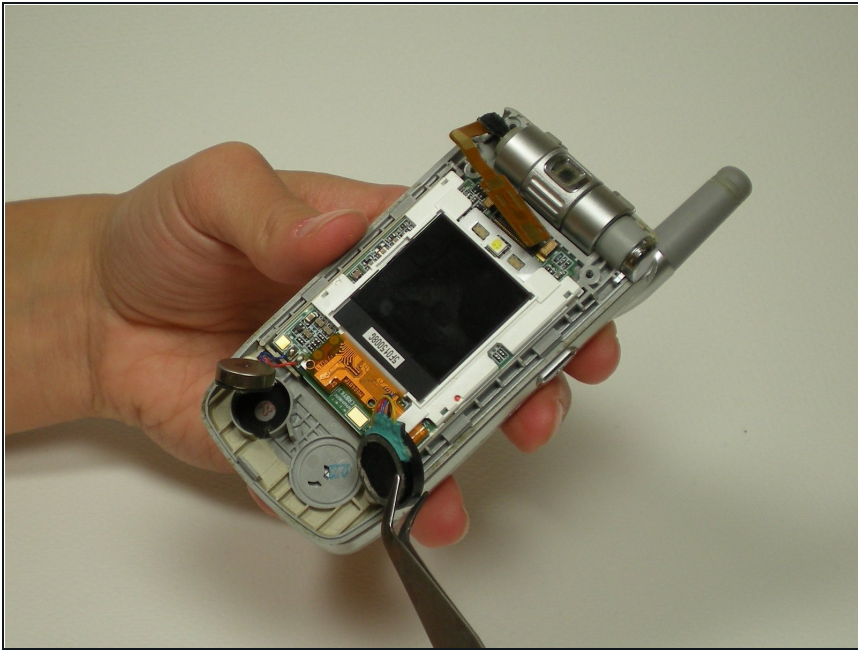

- Twist upper half of face plate in order to release it from the hinge.
- Using tweezers detach the speaker and the secondary battery from the faceplate, leaving wires attached.

## Step 5



- Align new face plate in correct orientation in order to install.

---

To reassemble your device, follow these instructions in reverse order.

