



# Lenovo IdeaPad N586 Keyboard Replacement

Written By: Christopher



## TOOLS:

Spudger (1)

## PARTS:

Lenovo Keyboard - 25206719 (1)

### Step 1 — Keyboard




- Remove three screws on bottom of case. They have a little keyboard image next to them. If you don't do this first, the keyboard will not come off. Place the plastic spudger right under the edge of the keyboard and lift up the keyboard.

### Step 2



- Slowly and gently lift the keyboard up to separate from the chassis.

### Step 3

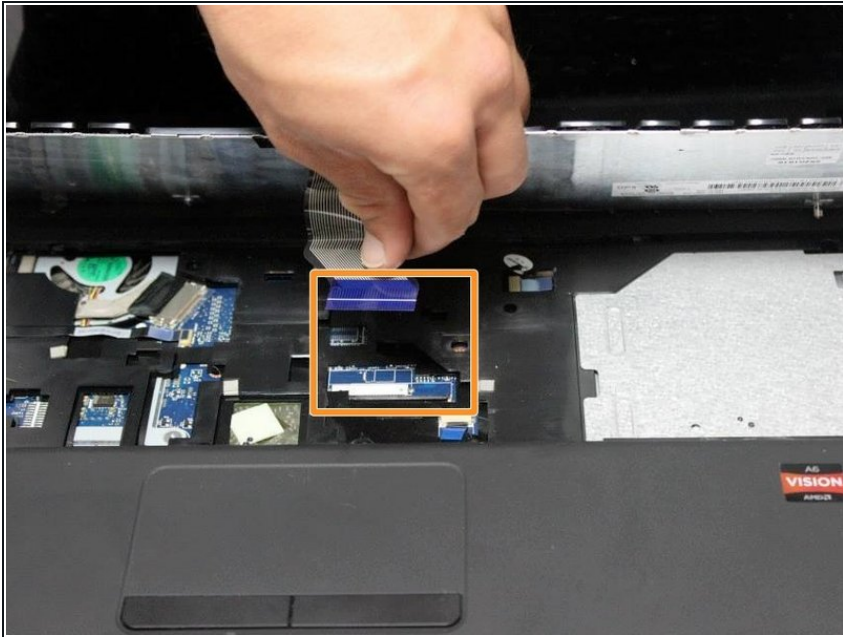

- Gently lift the keyboard off the chassis.
- Carefully disconnect the keyboard from the laptop by unhooking the keyboard ribbon.

### Step 4



- Now remove the keyboard from the computer.

To reassemble your device, follow these instructions in reverse order.