

Dell Inspiron N5030 Hard Drive Replacement

Learn how to replace the hard drive.

Written By: Charles



INTRODUCTION

This guide will help you if you want to put in a new hard drive or if you have a broken one that you need to replace on a Dell Inspiron N5030.



TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Battery





Guide ID: 25688 - Draft: 2014-06-10


- Turn the computer over on its back so the battery compartment faces towards you.
- Place your fingers on the small buttons with arrows pointing outwards.
- Push and slide the buttons outward to unlock the battery compartment.





- Grab the battery and pull it towards yourself.
- Remove the battery.

Step 3 — Keyboard

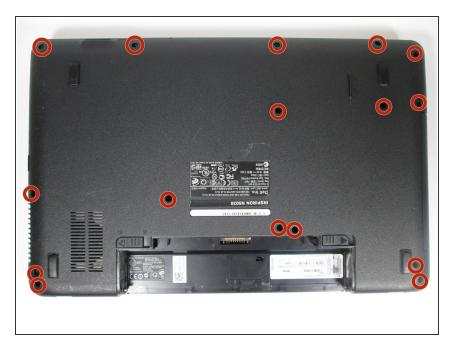

 Use a Phillips #0 screwdriver to unscrew the sixteen 0.6 mm screws on the back panel.




 Flip over the laptop and open it so that the screen faces you.

Step 5



- Use the plastic opening tool and your fingers to pry off the top panel.
- Pry the panel off starting at any one of the corners and then continue around the edges of the computer.

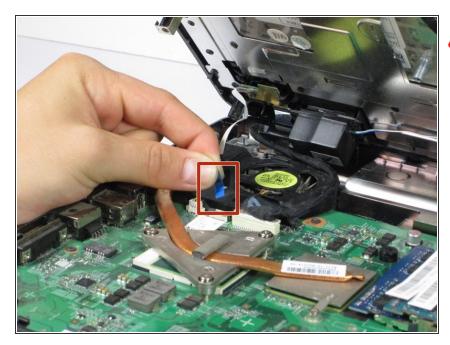


- Be careful when lifting off the keyboard panel. There are multiple delicate cables connecting the panel to the motherboard.
- Pull up on the blue plastic tab connected by the white strip to unhook the keyboard panel from the motherboard.

Step 7




 Flip up the small locking flap on the keyboard cable ZIF socket and disconnect the keyboard ribbon cable.

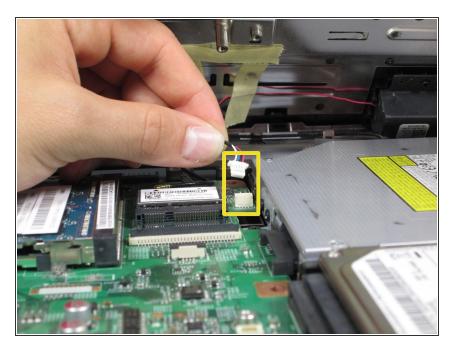

 Pull up on the wire tab with the blue, white, black, and red wires to detach the speakers from the motherboard.

Step 9

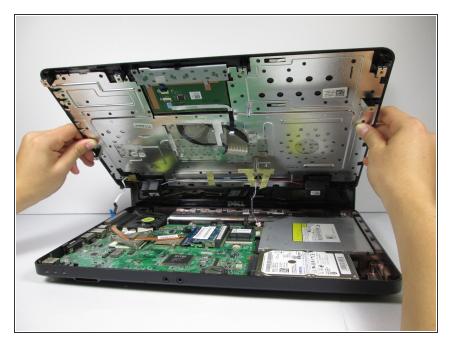

Remove the top keyboard panel.

Step 10 — Hard Drive



 Position your fingers on two sides of the hard drive in the bottom right corner of the computer.

Step 11



 Firmly push and slide the hard drive toward the right side of the laptop.



 Lift and remove the hard drive from the laptop.

To reassemble your device, follow these instructions in reverse order.