

Gateway NV52 Base Cover Replacement

This guide will help you how to replace the laptop's Base Cover.

Written By: Irma Marin



INTRODUCTION

This guide will be a prerequisite for other laptop's components.



TOOLS:

• Phillips #0 Screwdriver (1)

Step 1 — Base Cover



Remove the five identical 3/16"
Phillips screws that secures the hard drive and memory cover using a Phillips #0 Screwdriver.

Step 2



- Lift up the base cover from the the top with your hands to a 90 degree angle.
- Remove the base cover and place it in a safe and dry place.

To reassemble your device, follow these instructions in reverse order.