

Sony Ericsson Z500a Screen Replacement

This guide will guide you through replacing the...

Written By: Morgan



INTRODUCTION

This guide will guide you through replacing the screen in a Sony Ericsson Z500a.



TOOLS:

- T6 Torx Screwdriver (1)
- iFixit Opening Tool (1)

Step 1 — Keypad







- Remove the back cover by pulling it down, and then take out the battery.
- Using a T6 Torx screwdriver, remove the 4 screws.
- Keep the phone open with the back cover facing you.

Step 2




- Use the plastic opening tool and run it between the case and the body of the device to loosen the keyboard
- i There are 2 clamps that lock the keyboard to the case (1 on each side)



- Flip the phone over and lift straight up on the key pad to remove it.
- Be sure to hold the phone flat (parallel to the table) so that no loose parts fall out.


Step 4 — Logic Board

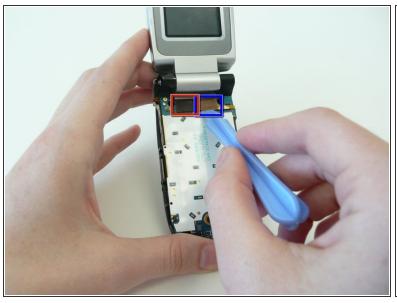




• Use the opening tool to remove the 2 ribbon wires (boxed in the photo) from the logic board.

↑ Gently lift the back of the logic board and then pull outwards. Be careful not to rip the ribbon wire.

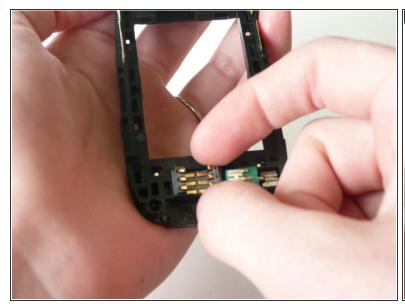

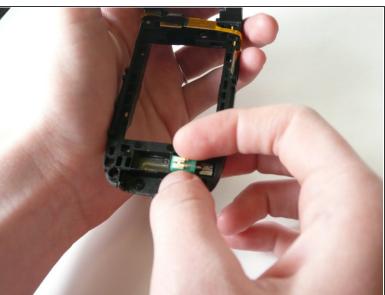

 Remove the black sim card reader and green vibrator before continuing to ensure they do not fall out.

Step 6 — Screen






- Close the phone, flip it over, grab the remaining gray covering of the phone and pull it straight up to remove it.
- (i) Be careful when pulling upward to ensure that you do not break the piece below it.
- Once the cover is removed, remove the black piece underneath.






- Remove the face of the phone by sliding it down.
- Unscrew the 4 screws connecting the screen to the base using a T6 Torx Screwdriver.


Step 8

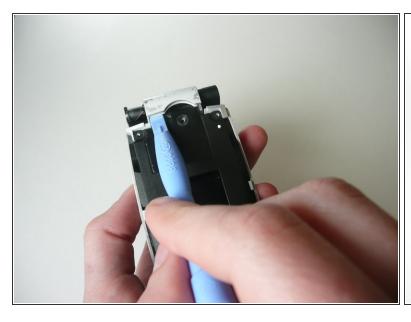




Use the opening tool to pry up the edge of the remaining silver hinge cover. Once it is loose, pull it
off the rest of the way

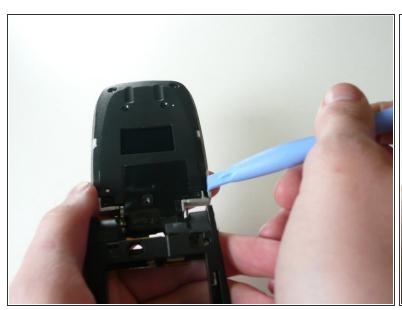

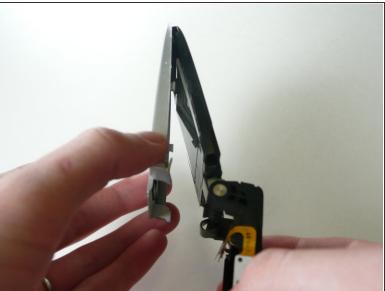


- To remove the plastic cover on the screen, run the opening tool along the sides between the cover and the body of the phone (like you did for the keyboard) and gently pry upward until it is loose.
- (i) Like the keyboard there is one clamp on each side.
- Grab the cover at the bottom of the screen (near the hinge) and pull outward while leaving the top (near the speaker) connected.

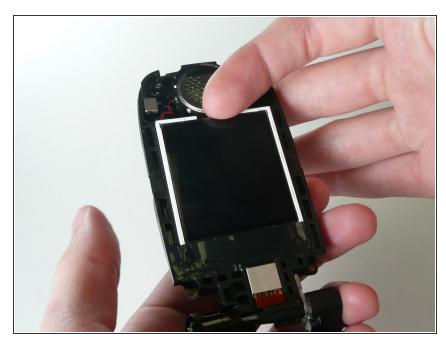

- Remove the tape on the bottom of the screen so that the screen will be able to come out.
- There is a finger notch on the top of the screen, gently pull out halfway.

Step 11

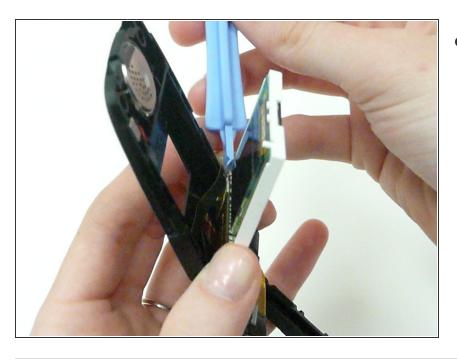

 Use the opening device to remove the ribbon wire where it connects to the screen.

To reassemble your device, follow these instructions in reverse order.