



# 1996-1998 Subaru Legacy Engine Air Filter Replacement

Replace the engine air filter.

Written By: Tim Asp





## TOOLS:

- [Flathead Screwdriver](#) (1)
-



## Step 1 — Engine Air Filter



- Unclip the power from the tube-thingy

## Step 2



- ★ Loosen the clamp

### Step 3



- Remove the old air filter.

### Step 4



- Install the new air filter.

To reassemble your device, follow these instructions in reverse order.