



Removing DVD Drive from Acer Aspire 5100

Instructions for removal of DVD drive from Acer Aspire 5100 laptop.

Written By: luis




INTRODUCTION

This guide will assist in disassembly and removal of DVD drive from the Acer Aspire 5100 laptop.

TOOLS:


- [64 Bit Driver Kit](#) (1)
-

Step 1 — Removing DVD Drive from Acer Aspire 5100

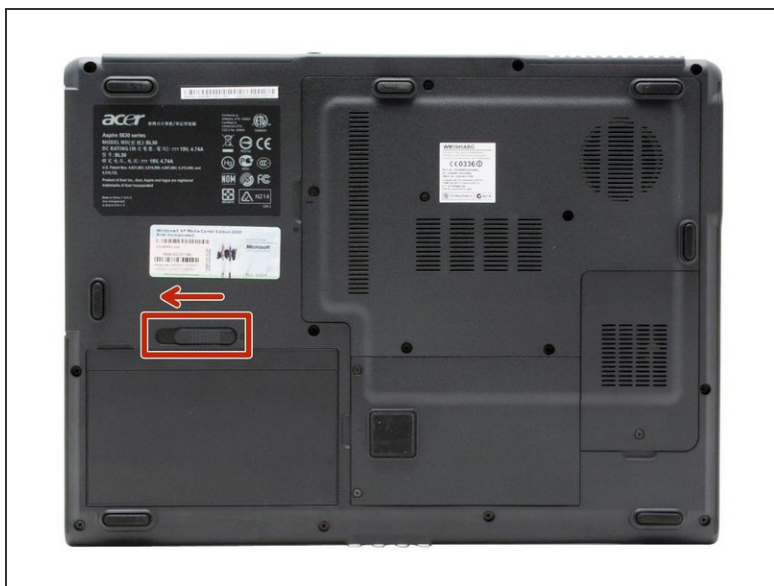



- Locate tab with battery symbol on back of laptop. Slide to left to eject battery.

Step 2

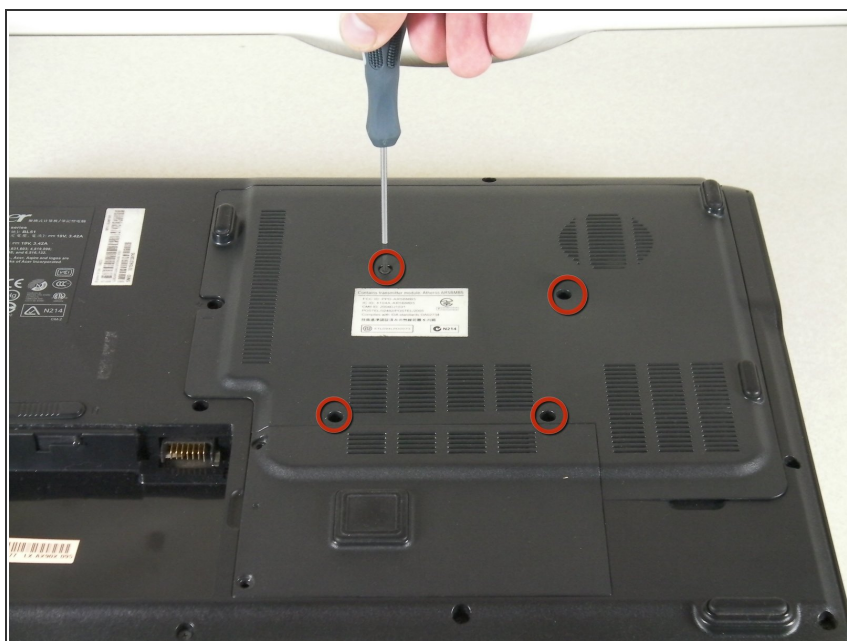



- Locate cover on back of laptop, diagonal to battery compartment. Remove four screws securing cover.

Step 3

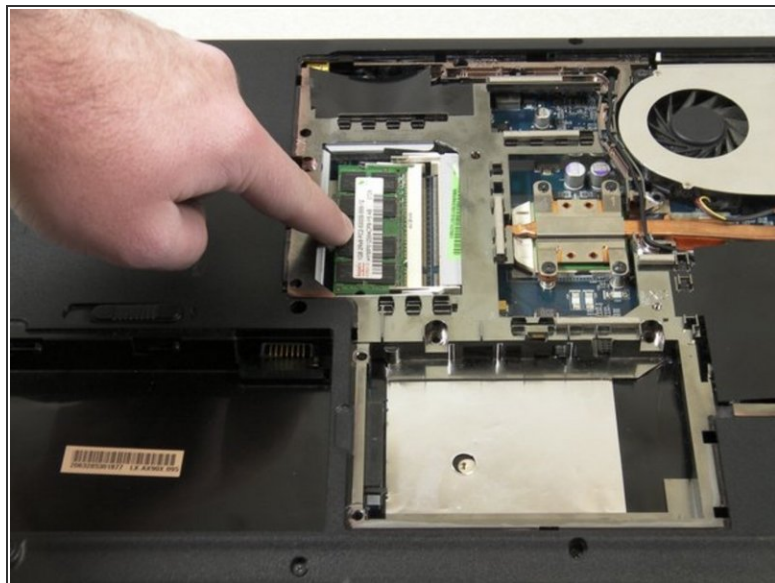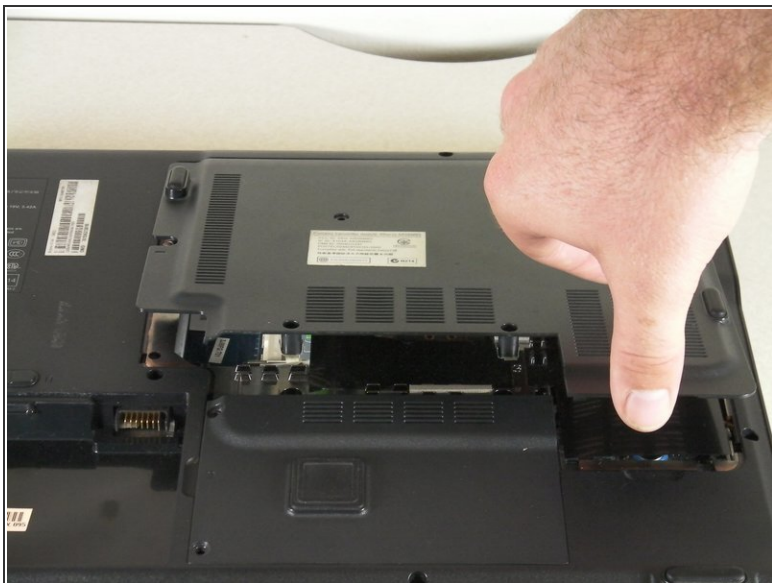

- After removing screws, carefully detach cover. You will see the cooling fan in the corner.

Step 4

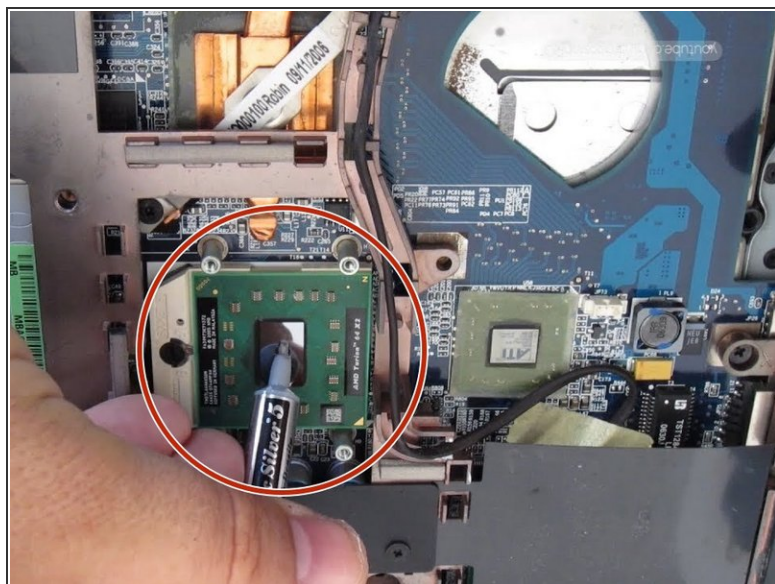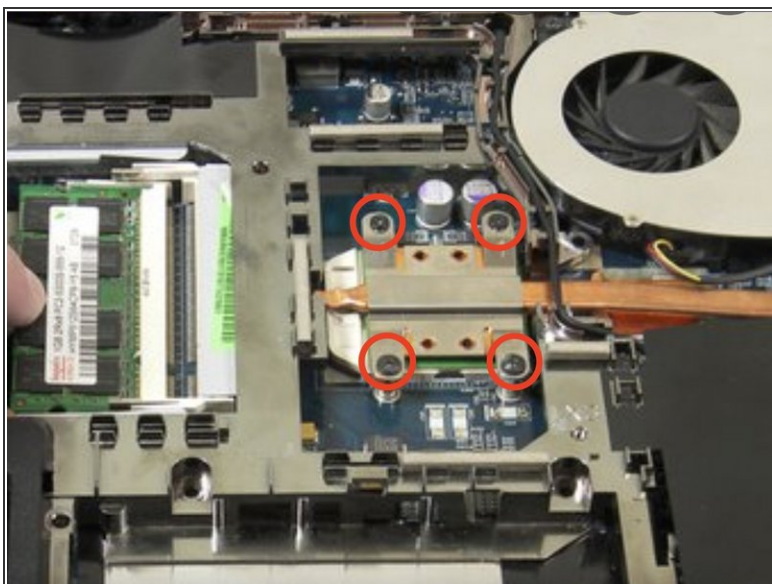

- Opposite the cooling fan is the component that contains the RAM card. Remove the screws holding the component in place. Carefully detach the component to expose the RAM card.

Step 5



- Locate the DVD drive and remove screw securing drive. Carefully push drive out from laptop.

To reassemble, follow above steps in reverse.