

# **Toshiba Satellite A215-S7425 RAM Replacement**

Written By: Marianne



#### TOOLS:

Phillips #1 Screwdriver (1) Anti-Static Wrist Strap (1)

### Step 1 — Battery



- Turn off the computer.
- Disconnect the charging cable from computer.
- ⚠ Failure to unplug the cable could result in electric shock.
- Flip the computer upside down.

#### Step 2



- Slide latches labeled #1 and #2, located outside the battery cover, away from each other.
- (i) Latch #1 will click over and stay while latch #2 will have to be held for battery to release.

# Step 3



• Gently lift and pull the battery out of the device.

# Step 4 — RAM



 Locate the RAM vented plastic cover in the center of the device.

#### Step 5



• Loosen **1** Phillips 4.2 mm size captive screw and lift cover off device to expose 2 RAM sticks.

#### Step 6



- Locate 2 metal pinchers on either side of the 1st RAM stick.
- Use a finger from each hand to push the 2 pinchers simultaneously away from the stick of RAM and towards the exterior of the case.
- The RAM stick will automatically rise up. Gently pull out the RAM stick with one hand.

The use of a <u>anti-static wrist strap</u> while working with the RAM is advise to prevent electrostatic discharge(ESD) from damaging the RAM.

# Step 7



- To remove the 2nd RAM stick, repeat previous steps.
- ② You will be unable to remove 2nd RAM stick if the first one is not removed first.

To reassemble your device, follow these instructions in reverse order.