


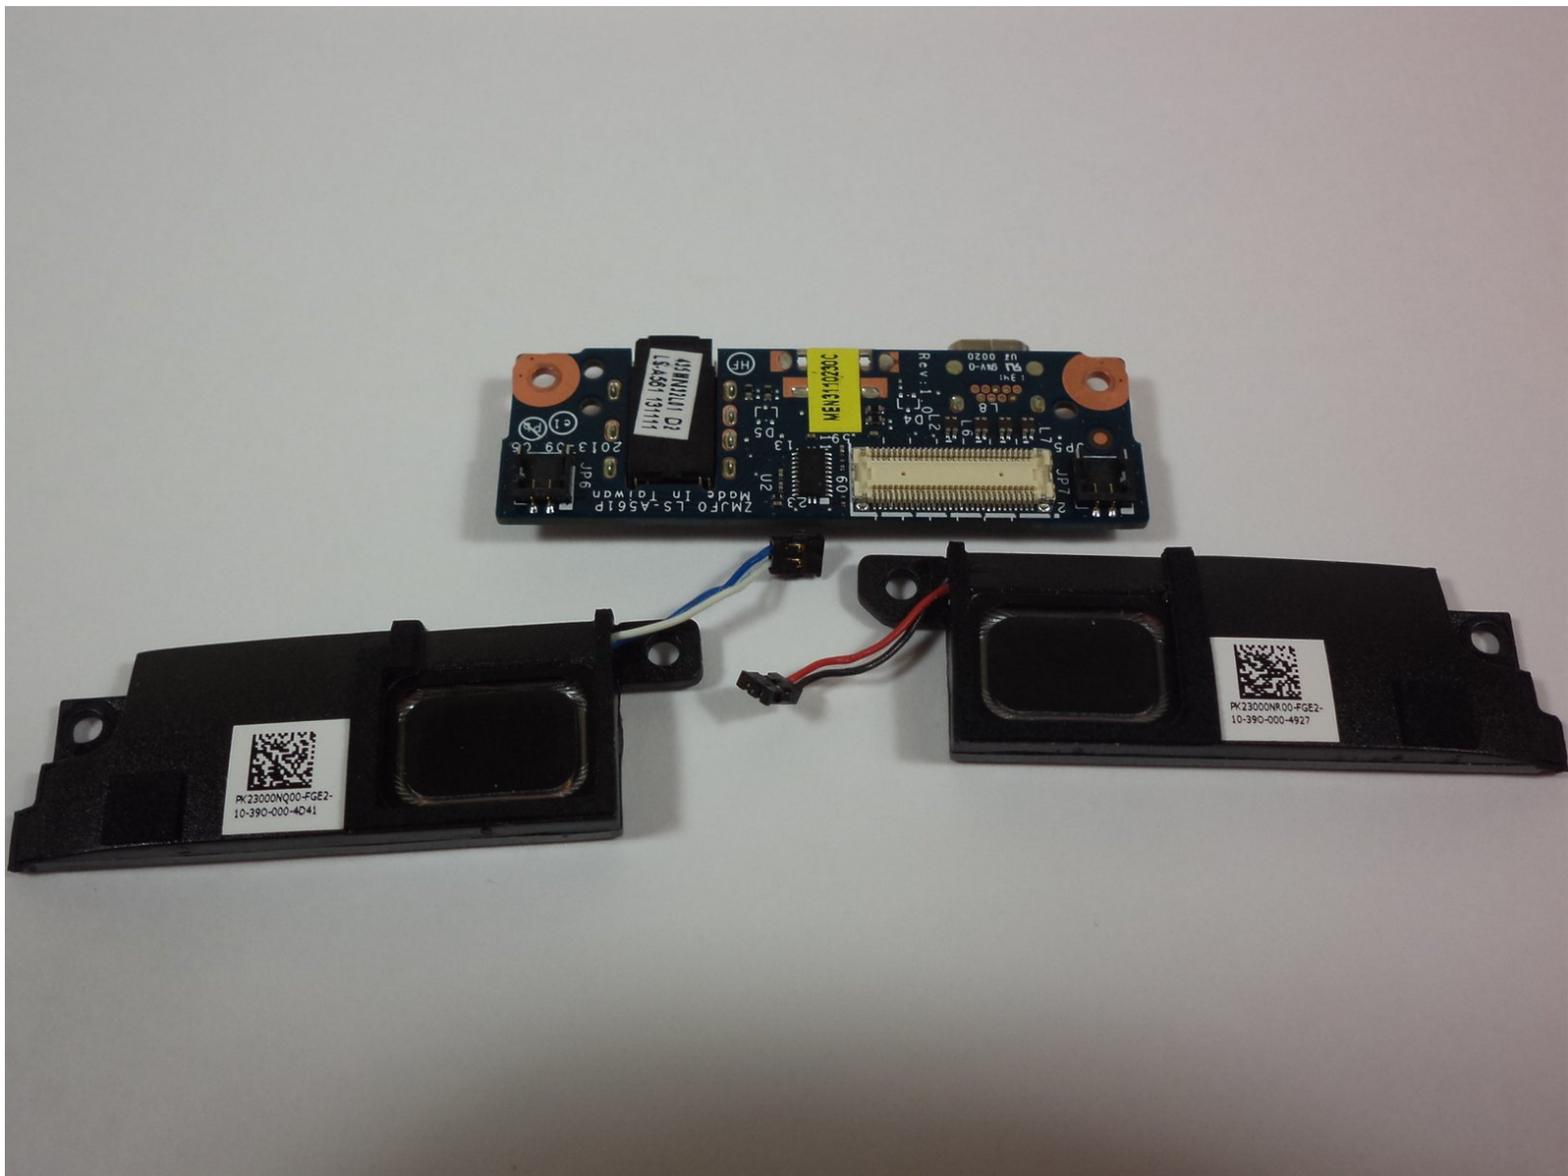

HP Slate 8 Pro Speakers Replacement

This guide will help you to disassemble and replace faulty speakers from your HP Slate 8 Pro tablet

Written By: Jose Revelo



INTRODUCTION

If you are having problems with your speakers, you should consider replacing them.

TOOLS:



- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [8" Needle Nose Plier](#) (1)
-

Step 1 — Remove back cover




- Use plastic opening tool to pry back panel off.

Step 2 — Detach IO Board from system

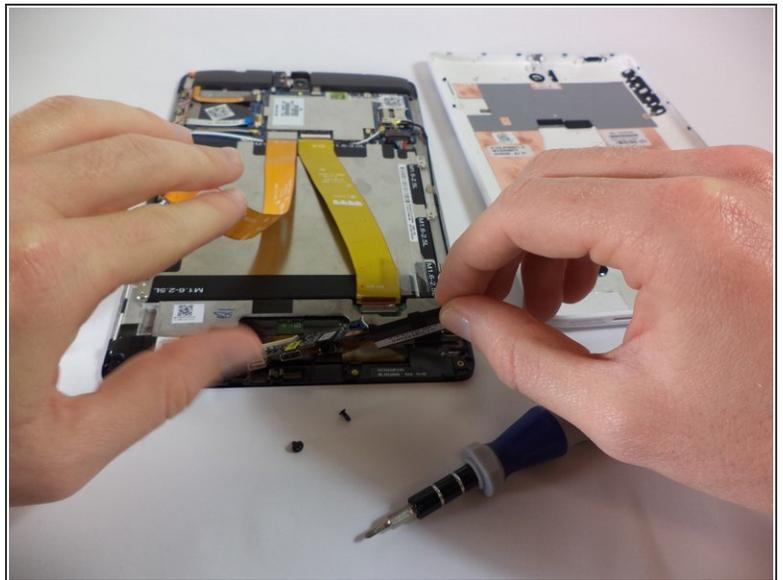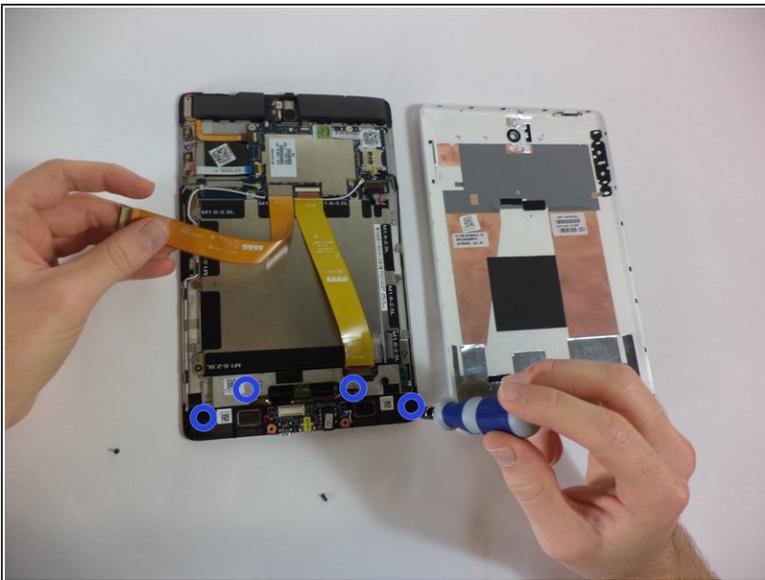


- Remove the orange and yellow ribbon cables.
- detach the screws along the IO board

Step 3 — Remove the IO board and the speakers

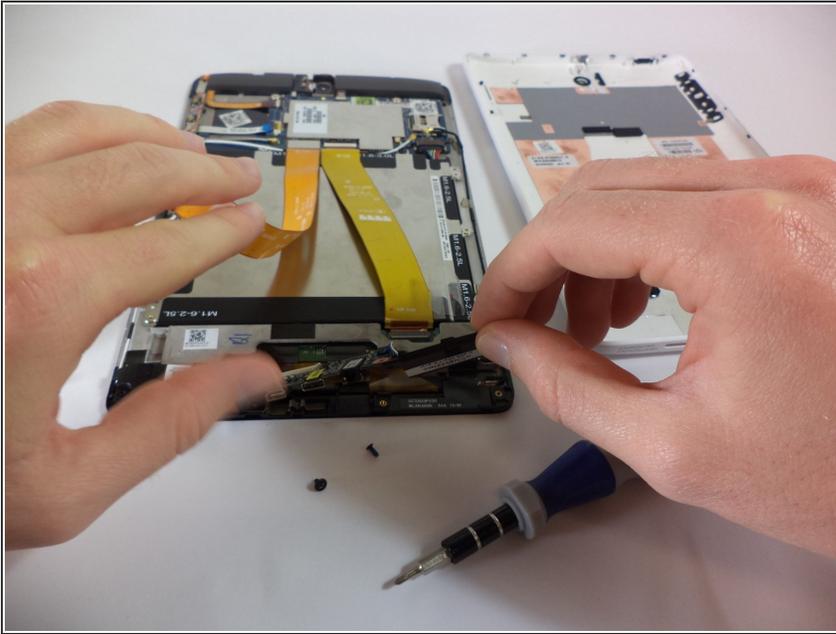


- Remove the IO board and the speakers circuit. Note that they are held together.

Step 4 — Detach the speakers from the IO board.

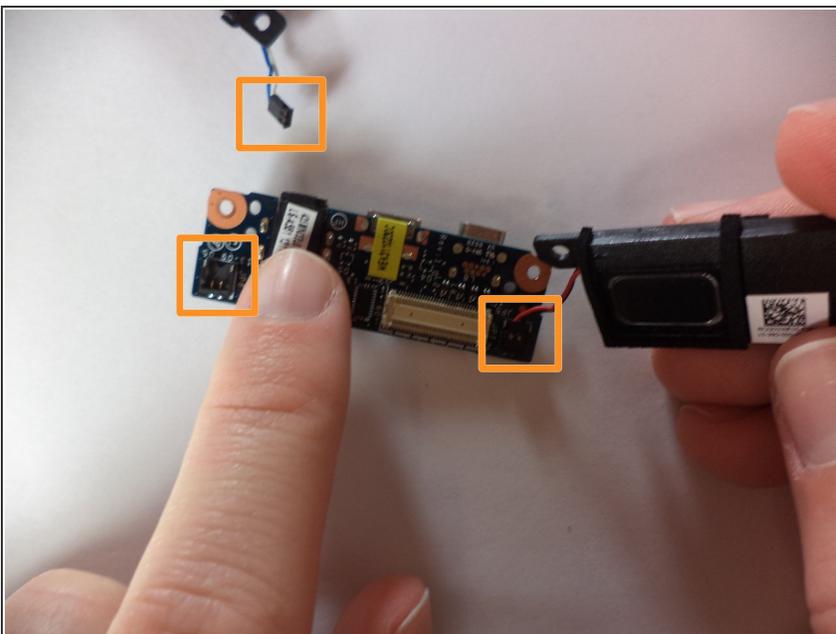



- The tablet has two speakers. Each speaker is located to both sides of the IO board.
- Detach the speakers from the cables that connect the speakers and the IO board. You will find more details in step 5 and 6.

Step 5 — Remove the wires of the speakers from the IO board.

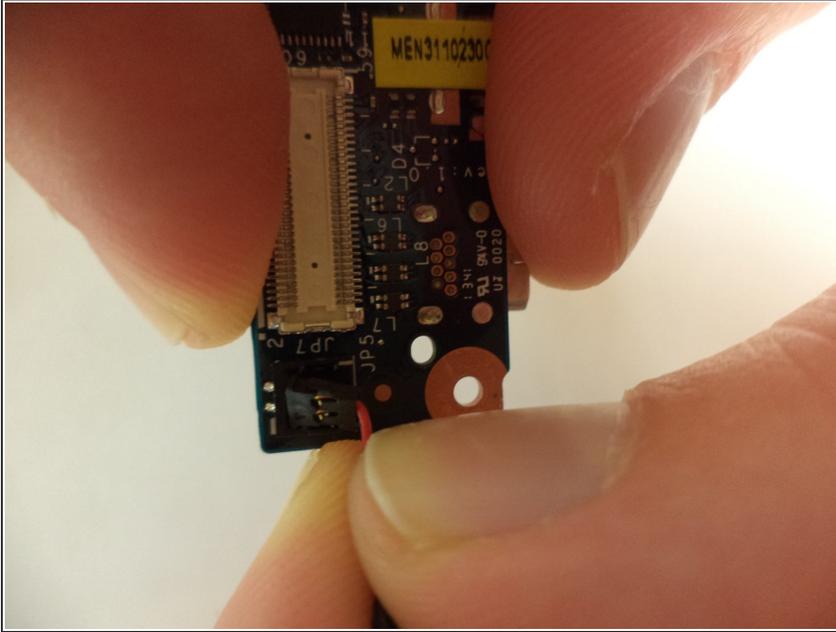

- To remove the cables that connect the speakers and the IO board, apply a subtle pressure to pull the cable out.

Step 6 — Replace your speakers with the new parts

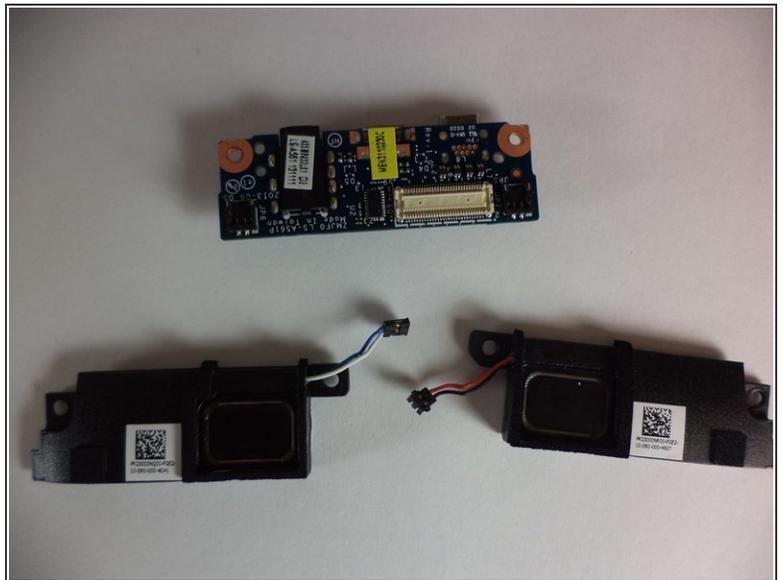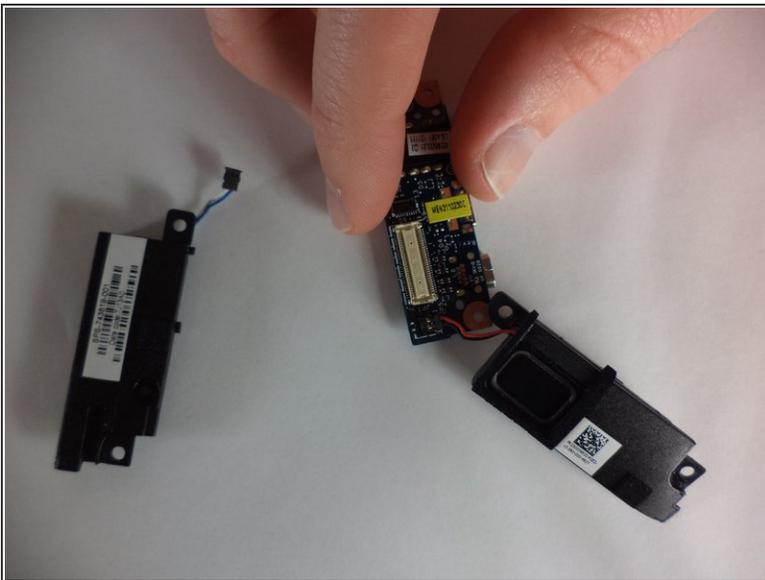

- Once you detach the speakers from the IO board, you should have three pieces as shown.
- You are ready to replace the speakers.

To reassemble your device, follow these instructions in reverse order.