



# Samsung Captivate Glide Screen Replacement

Touch screen replacement for the Samsung Captivate Glide.

Written By: Tyler Moore



---

# INTRODUCTION

How to replace the screen on a Samsung Captivate Glide.



## TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Heat Gun](#) (1)
-

## Step 1 — Motherboard



- Remove back cover using fingernail or plastic opening tool. The cover pulls up and off.

## Step 2

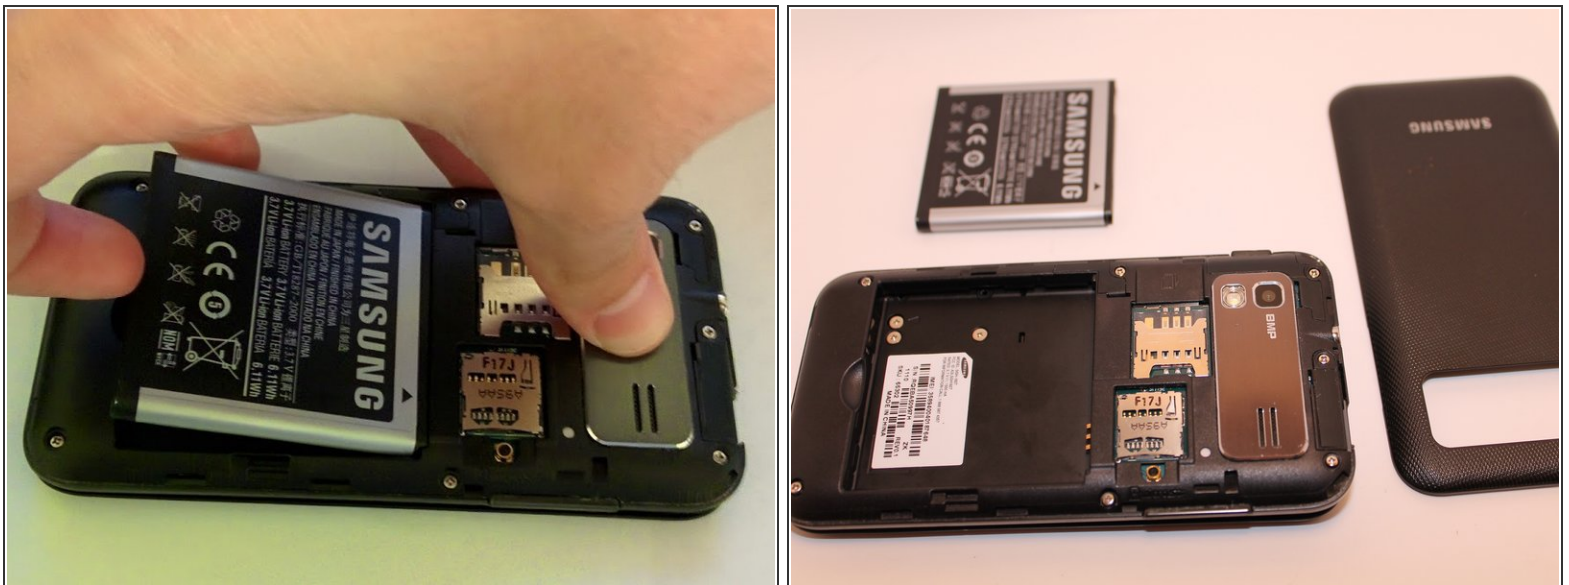

- Remove battery with plastic opening tool or finger.

## Step 3



- Remove the seven screws from backplate using the #00 screwdriver.


## Step 4



- Remove the back plate using the plastic opening tool.
- There is a lip on each side, and both must be pried up.
- ⓘ You can work your way around the edges after prying the two sides.




## Step 5

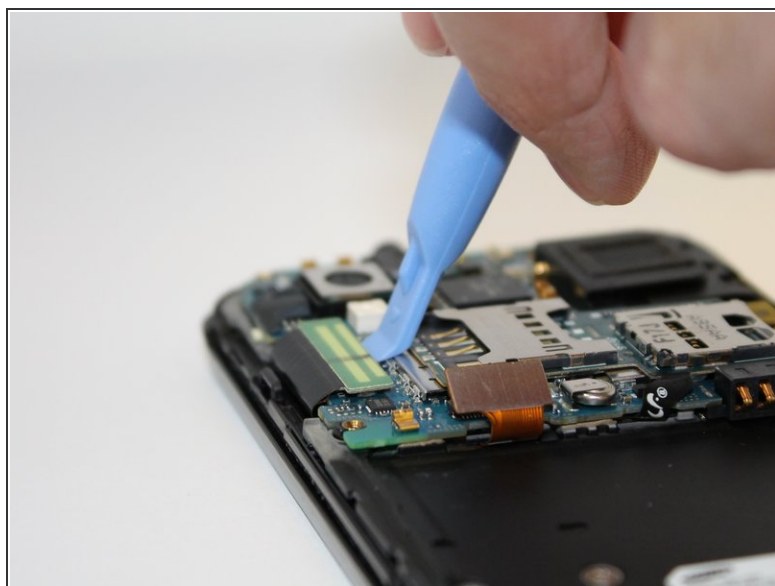

- Use the plastic opening tool to detach the two tabs connecting the motherboard to the base of the phone.

## Step 6

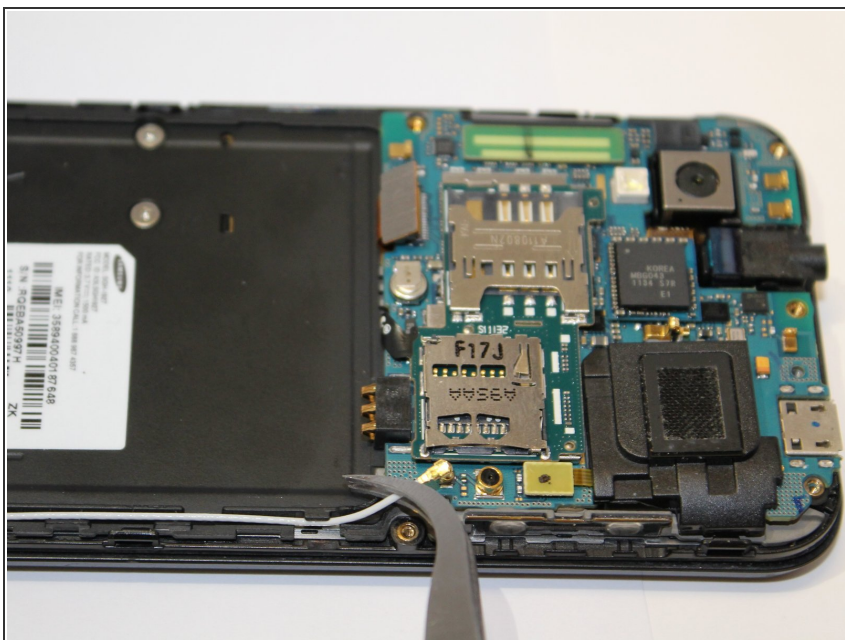


- Disconnect the antenna cable from the motherboard using tweezers.

## Step 7



- Remove the single screw connecting the motherboard to the base of the phone by using the #00 Phillips screwdriver.


## Step 8

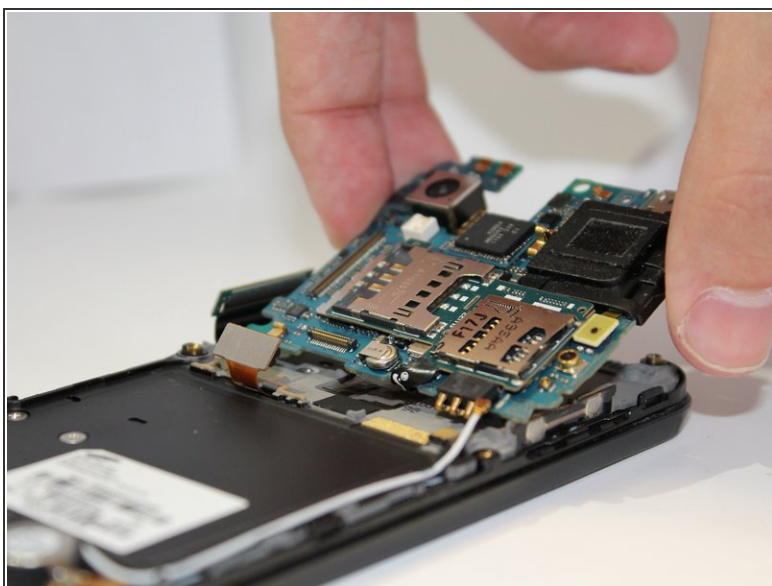

- Lift the motherboard out of the base of the phone.




## Step 9 — Screen

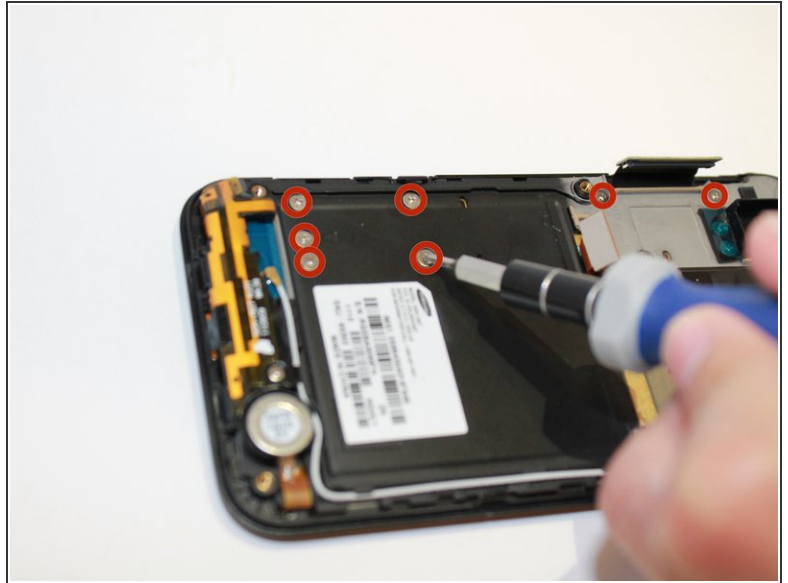


- Remove the eight screws with the #00 screwdriver.

## Step 10

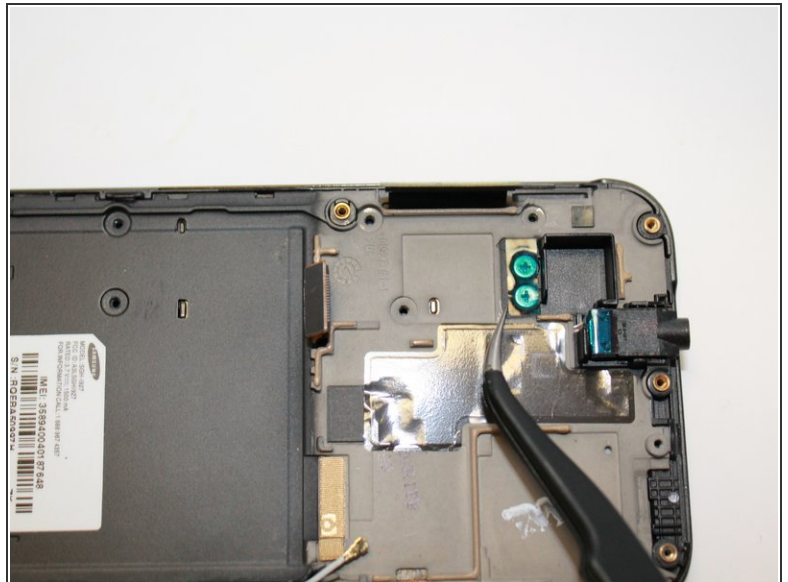


- Remove blue tape using the tweezers.

## Step 11

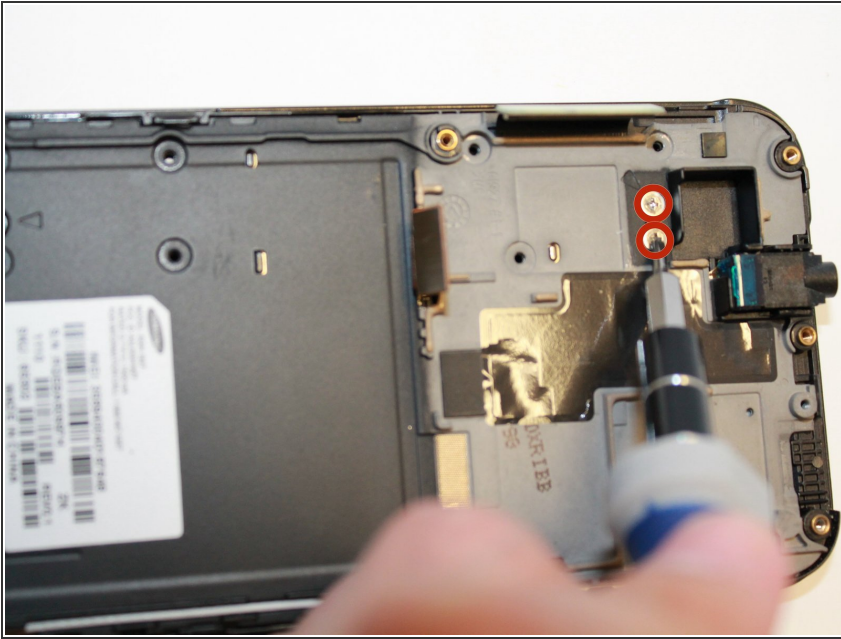

- Remove screws with the #00 screwdriver.


## Step 12

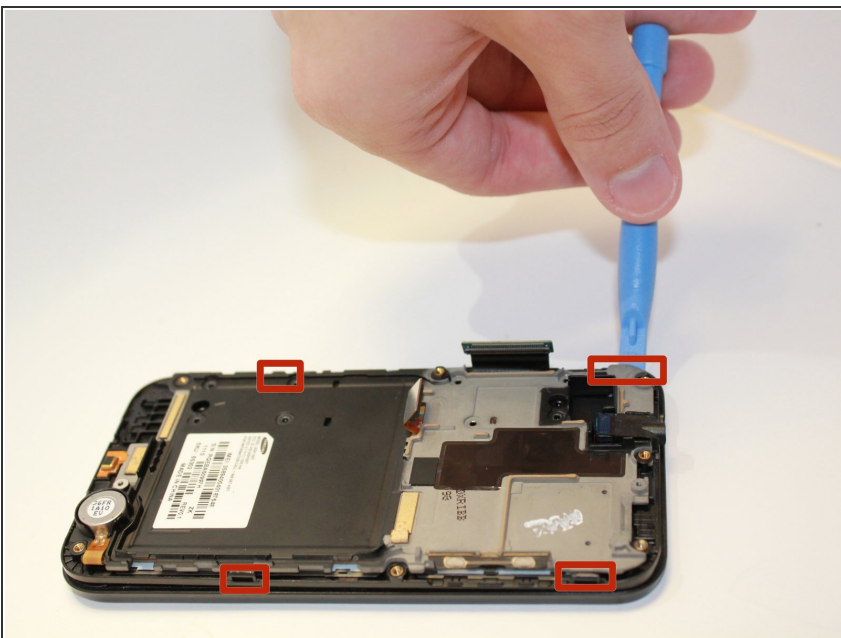

- Using the plastic opening tool, remove the back plate by prying on the four main points.
- You may encounter difficulty at certain points. Work the plastic opening tool along the edge to keep back plate from closing again.





## Step 13

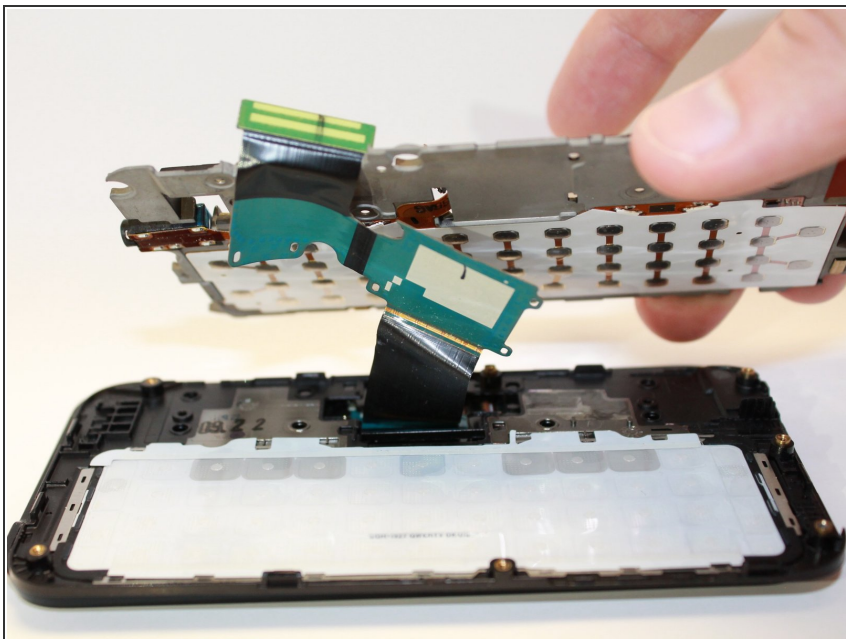



- Lift the back plate.
- To remove to slide flex cable, gently peel back from the back plate and remove back plate.

## Step 14

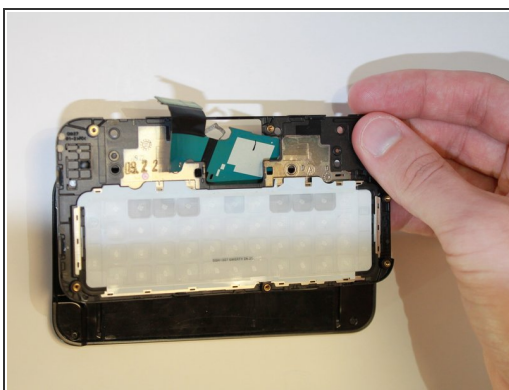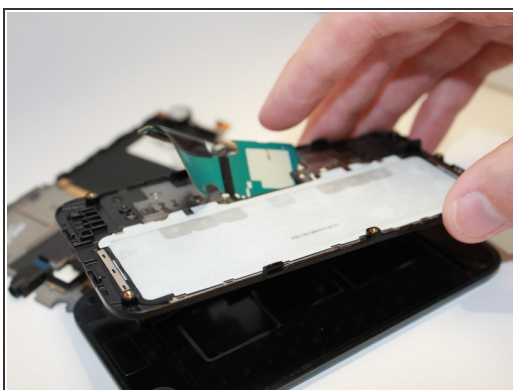


- Slide the flex cable through the slot. Be careful to not tear the cable.
- Set the front plate down.

## Step 15

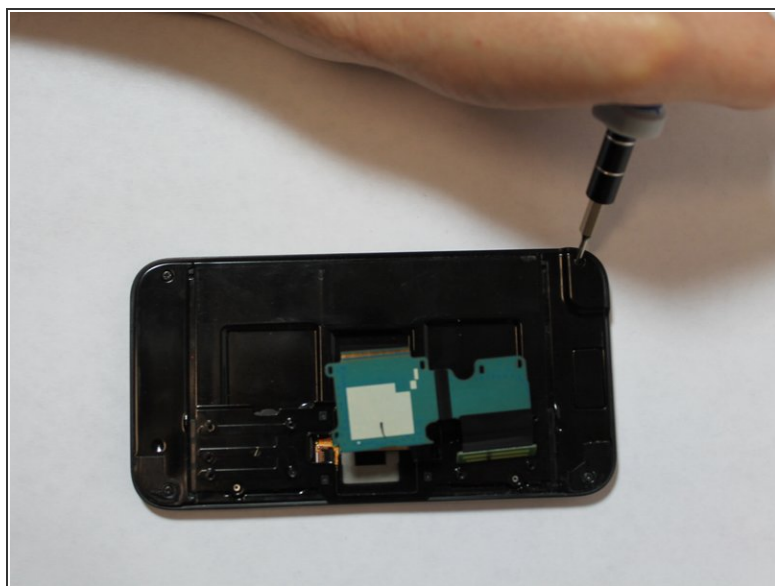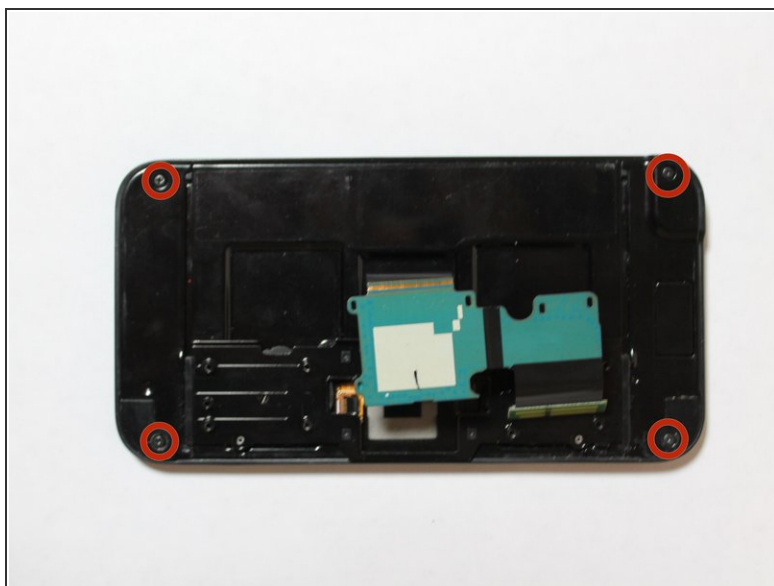




- Remove the four corner screws using the #00 screwdriver.

## Step 16

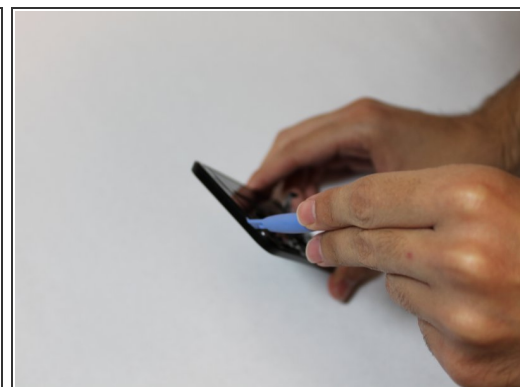



- Using the plastic opening tool, release all the clips on all four sides holding the screen assembly.
- You can now remove the back plate by sliding the flex cable through the slot.

## Step 17

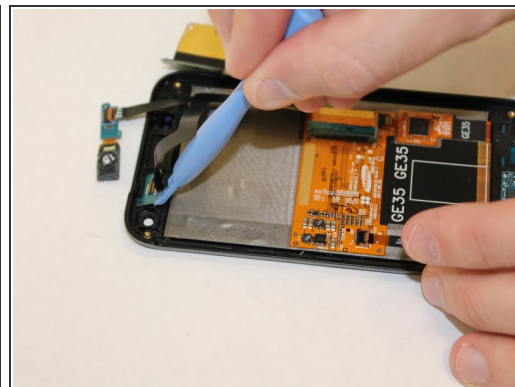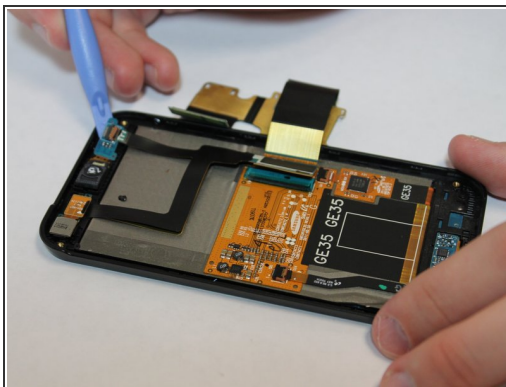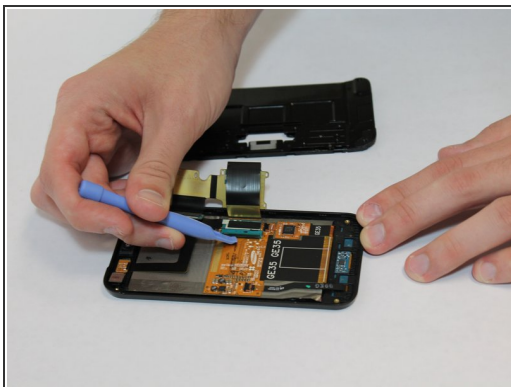

- Use the plastic opening tool to release the main jaw connector, front speaker and camera.

## Step 18

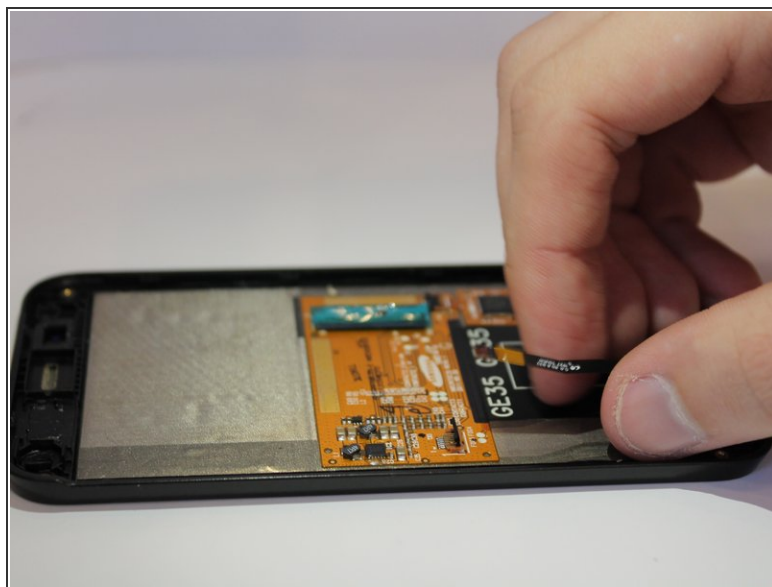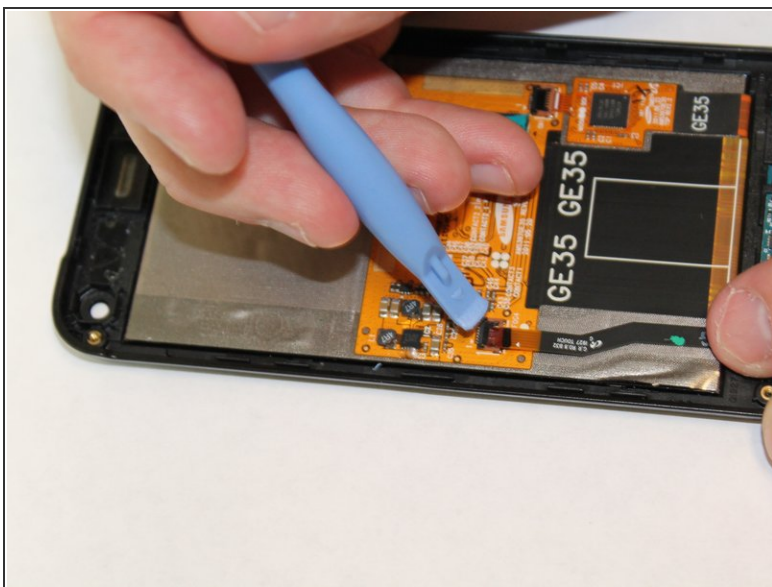

- By using the plastic opening tool you can release the keypad flex cable from the jaw connector clamp.




## Step 19





- Use a heat gun or blow dryer.
- Heat the outside edges using quick movements for about 45 seconds.

## Step 20

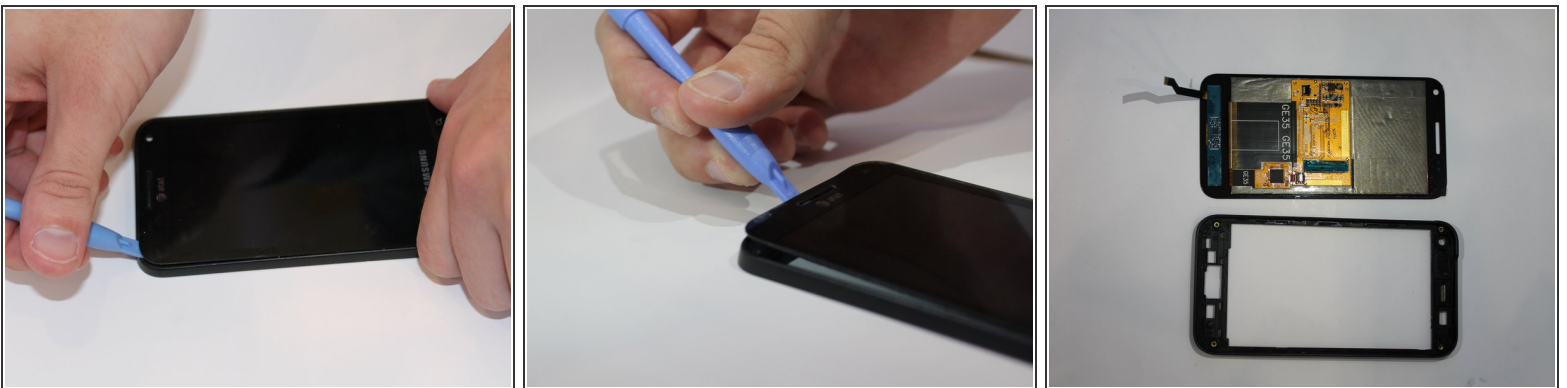

- Using the plastic opening tool to pry around the edges, release the touch screen from the screen frame.

## Step 21

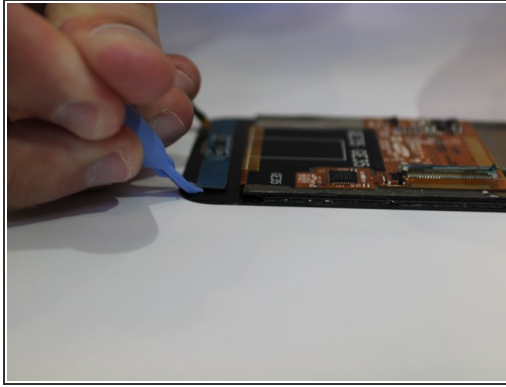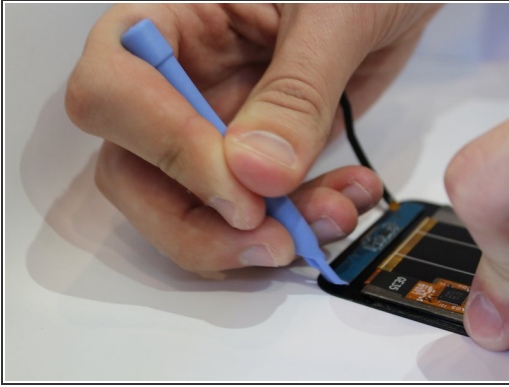

- While adhesive is still warm, use the plastic opening tool to gently remove the keyboard flex cable from the screen.
- You can now replace the screen assembly.

To reassemble your device, follow these instructions in reverse order.