




# Nerf Dart Tag Furyfire Pump Track Replacement

This guide will show you how to replace or remove the pump track of the gun

Written By: Bradley Penrow

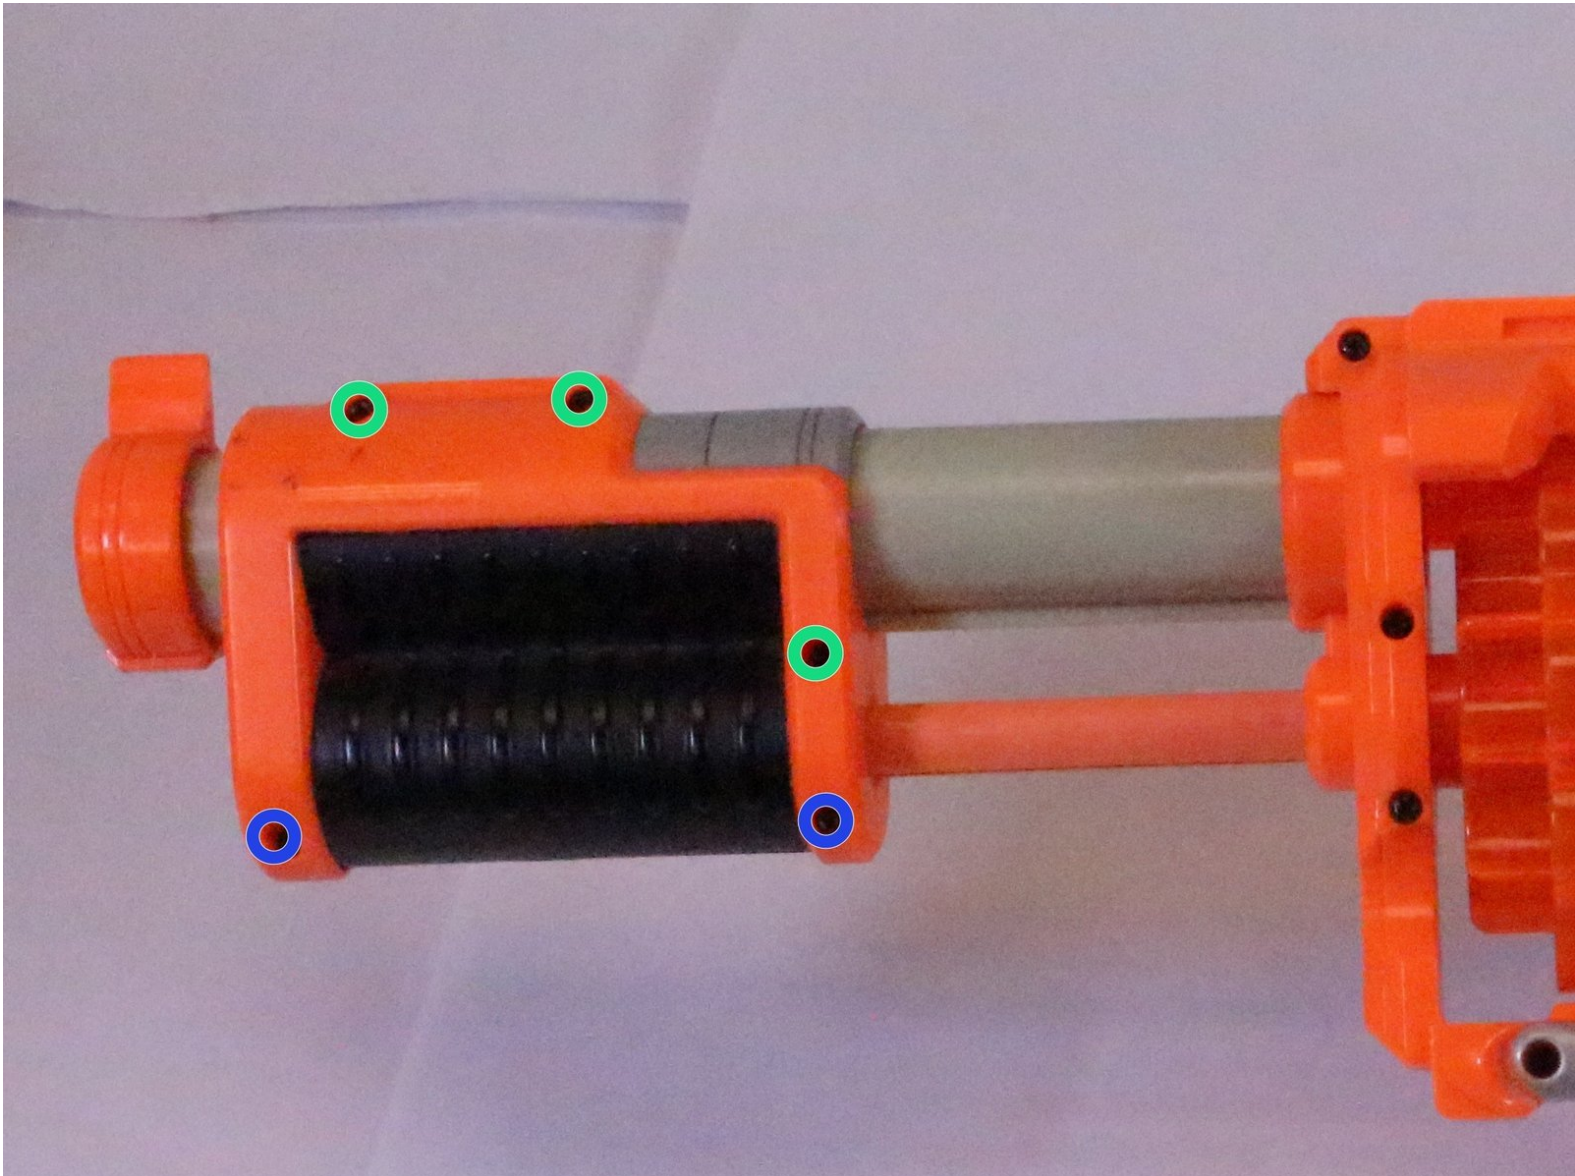

## INTRODUCTION

This guide will show you the necessary steps to removing the pump track on the Furyfire. The pump track is the piece the user cocks the gun with in order to fire. Knowing how to remove the pump track can help with problems such as a jammed pump track or a free moving pump track. Common causes of a jammed pump track are improperly placed darts or misalignment of the pump track. Common causes of a free moving pump track is a broken spring or the gun being cocked already.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Remove the screws



- Using a 00 Phillips screwdriver, remove all screws from the front panel. The screws have a length of .95 cm.

## Step 2 — Remove Panel



- After the screws have been removed, gently lift the panel from the gun and set it aside.



### Step 3 — Remove Black Cylinder




- Locate the black cylinder connected to the large spring near the top of the device.
- Once located, push the black cylinder against the spring and lift it out of the device.


### Step 4 — Remove Spring



- Using your hand, lift the large spring and attached plastic stabilizing piece out of the gun and set aside.


 Ensure that the small spring connected to the stabilizing piece remains connected.

## Step 5 — Remove Pump Handle

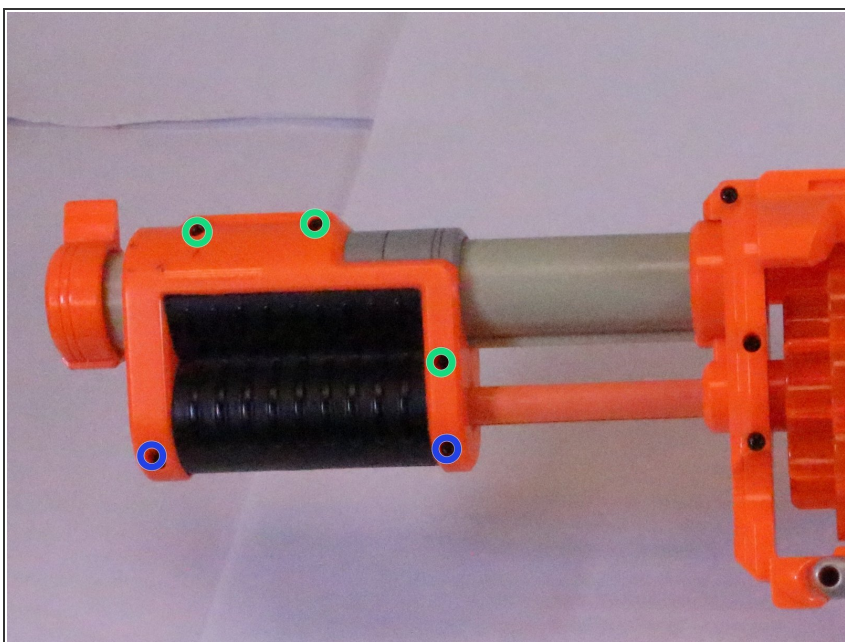

- Remove the two screws circled in blue. They are .95 cm in length.
- Remove the three screws circled in green. They are .7 cm in length.



## Step 6 — Remove the Pump Handle

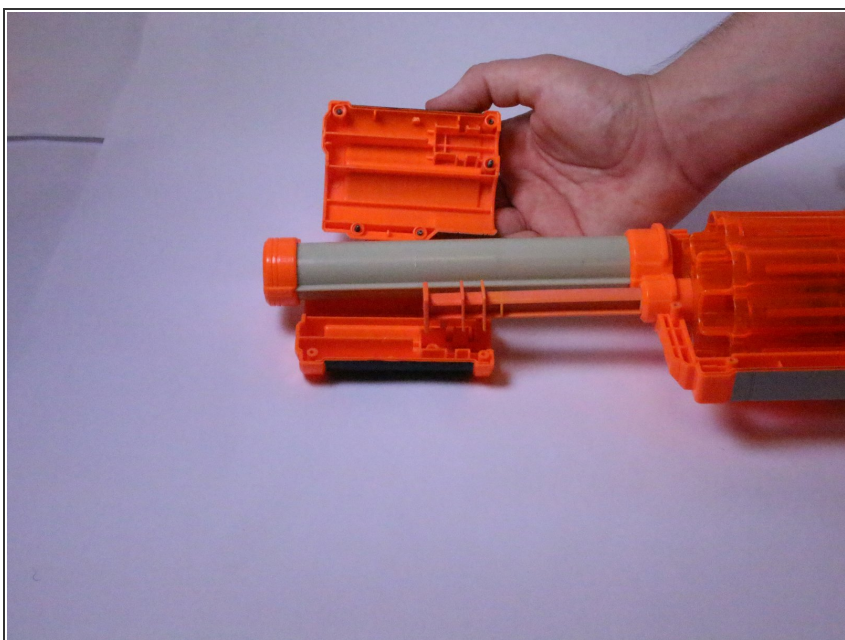

- Once all of the screws have been removed lift the pump handle off and set it aside.




## Step 7 — Remove Attached Spring

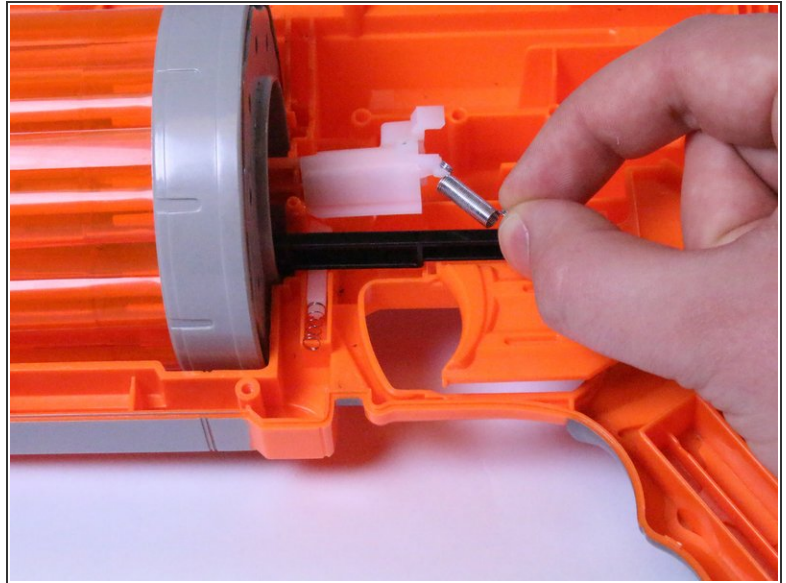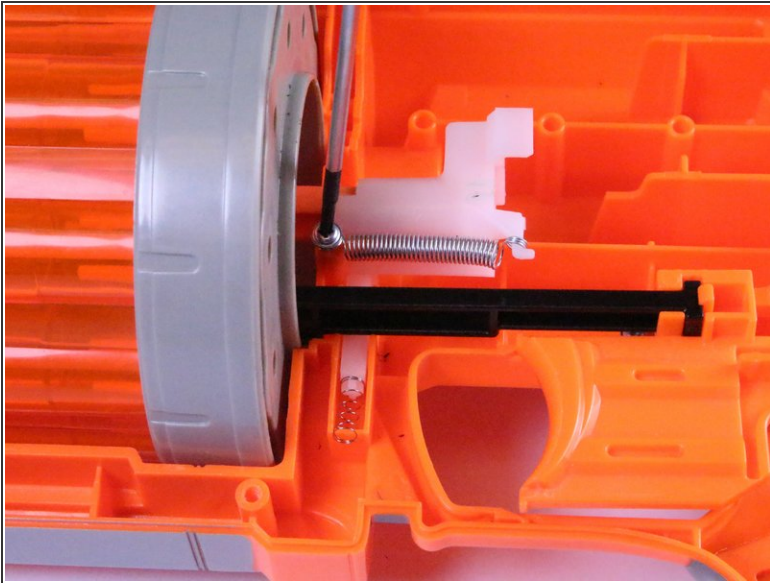

- In order to remove the white plastic holder, you must remove the spring that keeps it in place. Using a 00 Phillips screwdriver, carefully remove the screw while holding the spring in place.

## Step 8 — Disengage White Piece

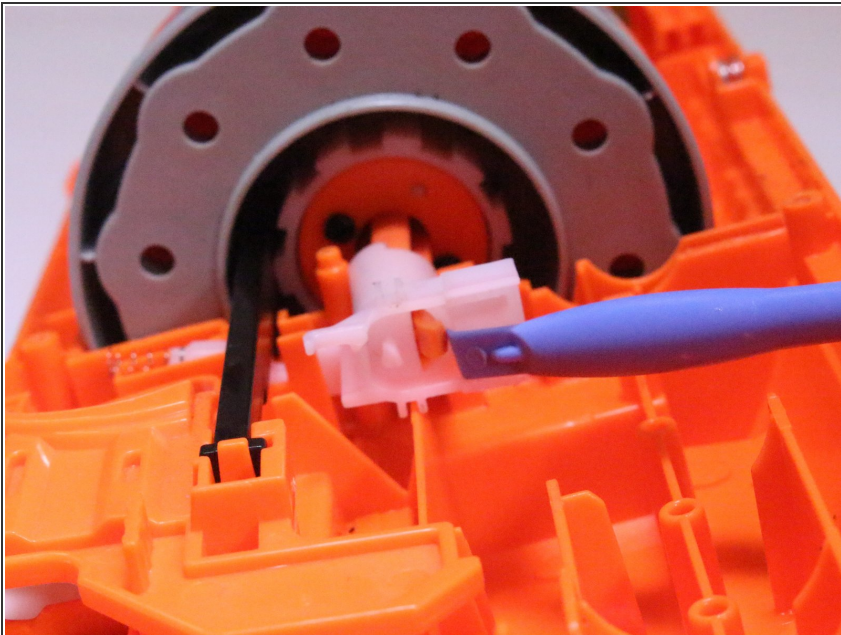

- Using a plastic opening tool, lift the white piece out of the gun and set it aside.

## Step 9 — Remove the Pump Track



- Using your hand, slide the track out of the gun by pulling it away from the device.

To reassemble your device, follow these instructions in reverse order.