



Nerf Dart Tag Furyfire Chamber Replacement

This guide will show you how to replace the rotating chamber of the device.

Written By: Bradley Penrow



INTRODUCTION

This guide will show you the necessary steps to replacing the chamber. The darts to be fired are loaded into the rotating chamber. Knowing how to remove the rotating chamber can help with problems such as a jammed gun or a dirty chamber. Common causes of a jammed gun are improperly placed darts or misaligned parts.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Remove the screws



- Using a 00 Phillips screwdriver, remove all screws from the front panel. The screws have a length of .95 cm.

Step 2 — Remove Panel



- After the screws have been removed, gently lift the panel from the gun and set it aside.

Step 3 — Remove Black Cylinder




- Locate the black cylinder connected to the large spring near the top of the device.
- Once located, push the black cylinder against the spring and lift it out of the device.


Step 4 — Remove Spring



- Using your hand, lift the large spring and attached plastic stabilizing piece out of the gun and set aside.


 Ensure that the small spring connected to the stabilizing piece remains connected.

Step 5 — Remove Pump Handle

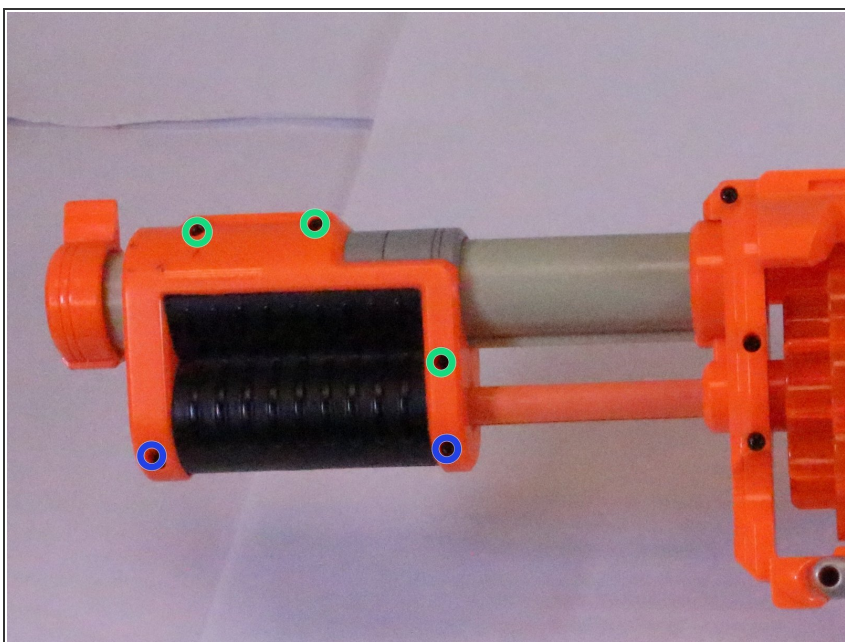


- Remove the two screws circled in blue. They are .95 cm in length.
- Remove the three screws circled in green. They are .7 cm in length.

Step 6 — Remove the Pump Handle

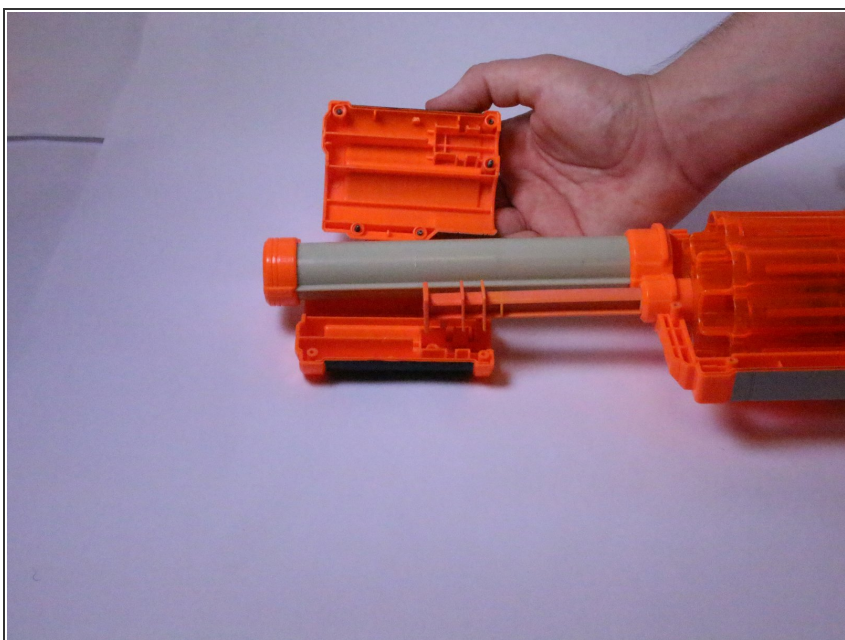


- Once all of the screws have been removed lift the pump handle off and set it aside.

Step 7 — Remove Attached Spring

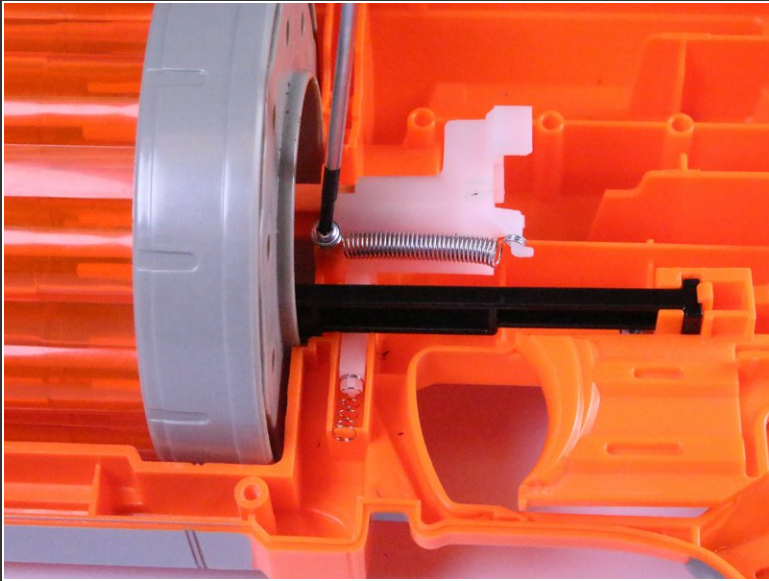

- In order to remove the white plastic holder, you must remove the spring that keeps it in place. Using a 00 Phillips screwdriver, carefully remove the screw while holding the spring in place.

Step 8 — Disengage White Piece

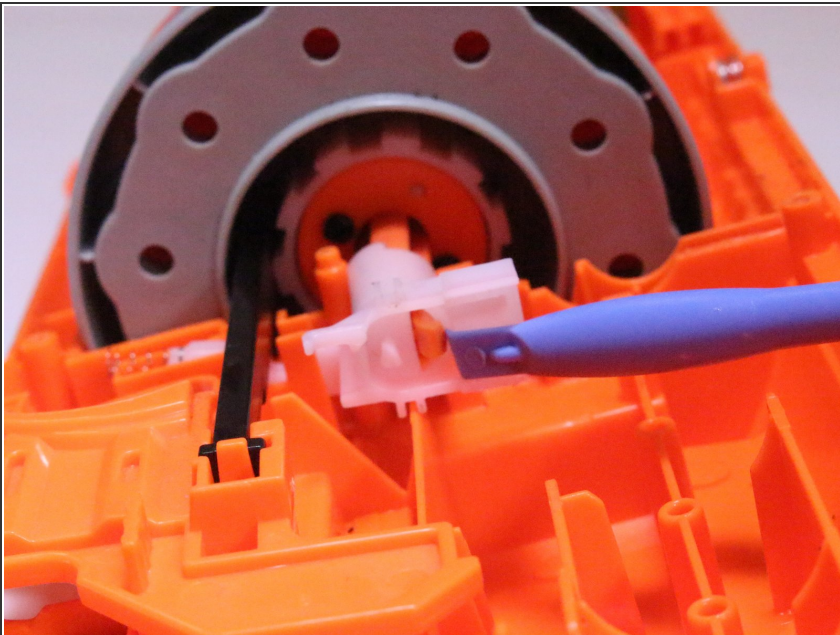


- Using a plastic opening tool, lift the white piece out of the gun and set it aside.

Step 9 — Remove the Pump Track



- Using your hand, slide the track out of the gun by pulling it away from the device.

Step 10 — Detach Black Piece from Trigger

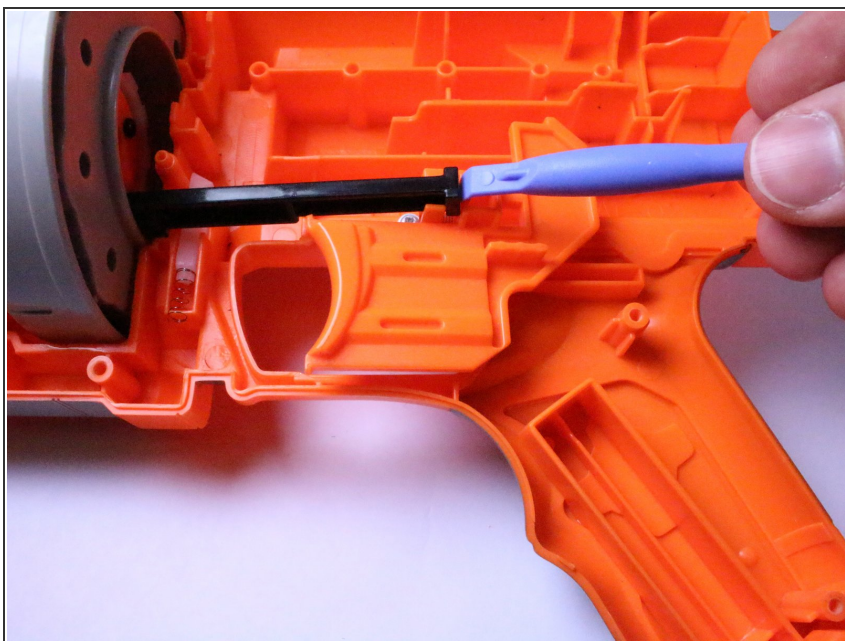

- Using a plastic opening tool, detach the black piece from the trigger. You do not need to remove the black piece from the gun.

Step 11 — Remove Trigger



- Once the black piece has been detached, the trigger can be lifted out of the device.

Step 12 — Remove Black Connector



- Once the trigger has been removed, simply pull the black connector out of the chamber. Set it aside.

Step 13 — Separate Barrel and Chamber from the Main Body



- With your hands gently grasp the barrel and chamber of the gun, and pull it away from the main body.

Step 14 — Separate Barrel and Chamber



- Using your hands, remove the barrel from the rotating chamber.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-15 01:52:00 PM (MST).

