



Dell Inspiron M5010 CC/DVD Drive Replacement

This guide will demonstrate how to remove the back cover and remove the CD/DVD drive.

Written By: April Poucher






TOOLS:


- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery




 Make sure laptop is powered off before removing the battery.

● Slide both arrow tabs towards the outer edge of the computer to release the battery.

 Battery is not shown.

Step 2 — CC/DVD Drive

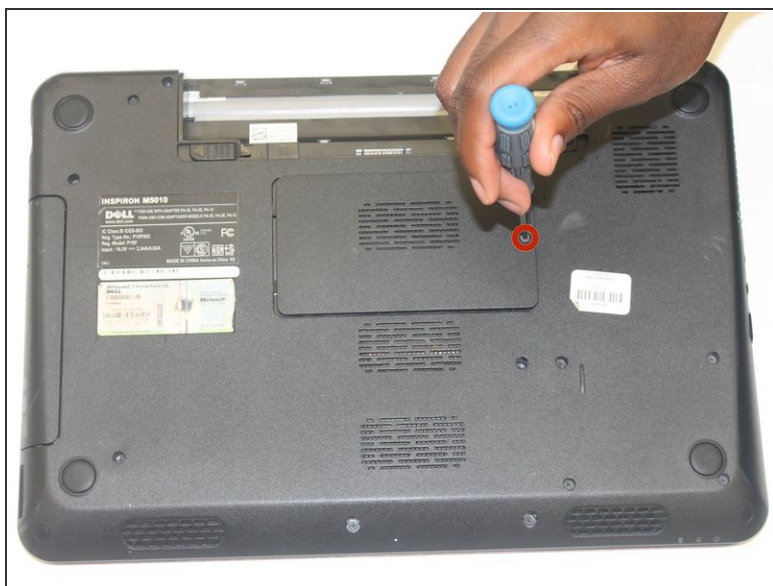

- Using the Phillips #000 screwdriver, remove the 6 mm Phillips #000 screw holding in the back cover.
- Lift the back cover away from the computer and remove it.

Step 3



- Remove the 6 mm Phillips #000 screw using the Phillips #000 Screwdriver.

Step 4



- Pull the CC/DVD drive from computer.

To reassemble your device, follow these instructions in reverse order.