


# Blu Studio 5.5 S Front Facing Camera Replacement

This guide involves removing the back case, battery, and inner back case to access the motherboard to remove and replace the front facing camera.

Written By: Cody Dyl

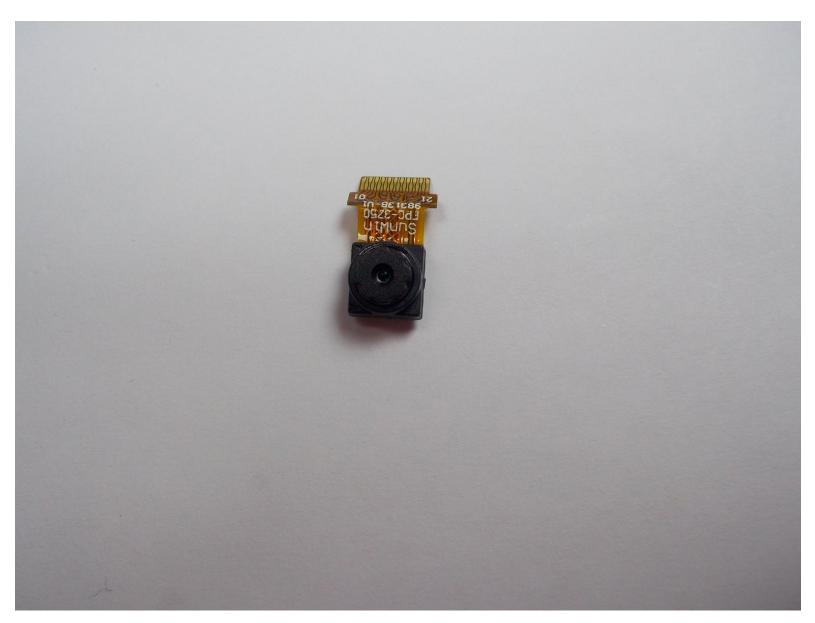

This document was generated on 2020-11-28 03:39:16 AM (MST).

## **INTRODUCTION**

In this guide you will learn where the front facing camera is located in the Blu Studio 5.5 S, along with how to remove and replace it.



## **TOOLS:**

- Spudger (1)
- Tweezers (1)
- Phillips #0 Screwdriver (1)

#### Step 1 — Back Casing



 In order to remove the back case, start by flipping the phone to the back side and look at it from the top.

#### **Step 2 — Applying Pressure**







- Place your finger in the small notch on the left side of the charging port (facing from the back).
- Once your finger is in the notch, pull the back case towards yourself to remove it.

#### Step 3 — Battery








- Once the back case is removed, locate the battery. It is the large brick embedded in the phone. It
  has BLU Products, a caution statement, and a barcode on it.
- Insert your finger into the notch near the lower left of the battery, apply pressure and lift up.

#### Step 4 — Midframe






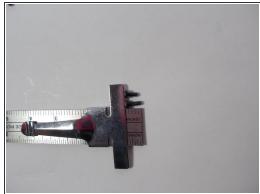


- The speaker is located behind the inner back case. Using a Phillips #0 screwdriver, unscrew the 10, 7mm screws.
- Using the Phillips #00 screwdriver, unscrew the two, 10mm screws at the bottom.

#### **Step 5** — **Aesthetic Bottom Case**

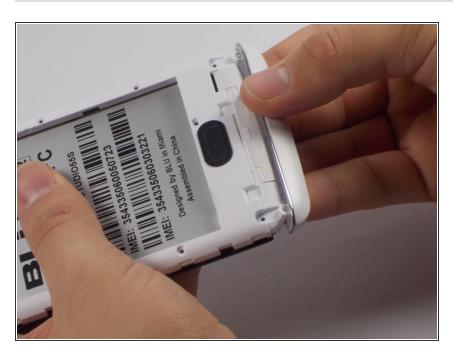

 Apply pressure and pop off the bottom aesthetic case, being careful not to break it.

## Step 6

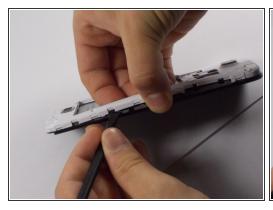






- Use the Spudger to pop the inner back casing off. Do this by lightly raising the side of the battery housing, then sliding the Spudger around the case.
- Pick up the inner back case and flip it over.


#### **Step 7** — Frontward Facing Camera



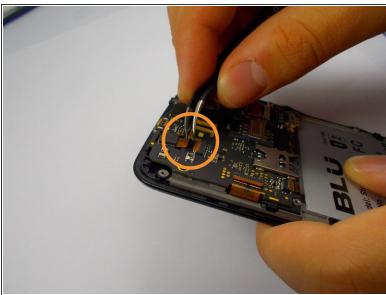

- The frontward facing camera is located in the top left of the phone. It is connected to the motherboard by a ribbon connector, and a prong system.
- Use a spudger to detach the front facing camera by flipping the orange tab on the top of the prong system.
- Once the orange tab is up, pull out the orange ribbon wire.

## Step 8

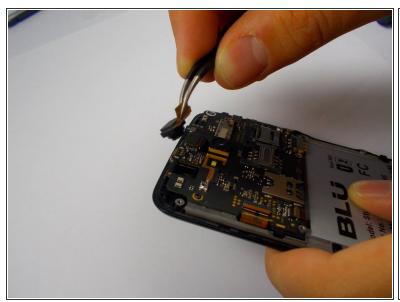



• Use tweezers to pick up the ribbon wire, and lift. The frontward facing camera will follow suit.

To reassemble your device, follow these instructions in reverse order.