



Eureka AirSpeed Bagless Zuum Vacuum Cyclone Replacement

If heavy debris cracks or damages the cyclone, this guide outlines the replacement of the vacuum's main suction component.

Written By: Celina Burchett



INTRODUCTION

If you determine that your vacuum is no longer picking up debris, this guide will help you to replace a damaged cyclone to increase the suction.



TOOLS:

- [T15 Security Torx Screwdriver](#) (1)
-

Step 1 — Cyclone



- Press the grey dust cup release button and gently pull the dust cup towards you.

Step 2



- Twist the large, black portion of the cyclone/dust cup to the right to unlock the black cover and cyclone from the clear dust cup.

Step 3



- Twist the clear collar to release the wash screen and small circular collar exposing the cyclone attached to the black head.

Step 4




- Lift the latch on the top of the black cyclone head to open. You can now see the foam filter inside the cyclone portion of the dust cup.

Step 5



- Remove the white filter by lifting the gray foam filter handle, exposing the screws attaching cyclone to the black head.

Step 6

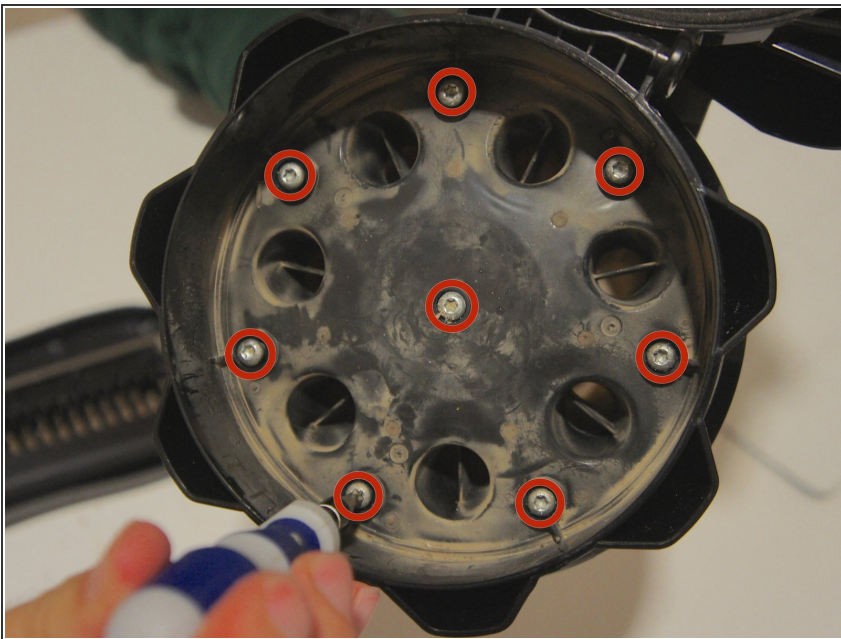

- Using a T15 Security Torx Screwdriver, remove the 8 screws.

Step 7



- Upon removal of the screws, the cyclone and black head cover will come apart.

To reassemble your device, follow these instructions in reverse order.