 




Replacing VuPoint DC-ST210-VP View Finder

This guide shows how to replace the view finder on a VuPoint DC-ST210-VP digital camera. This guide can also be used to clean the viewfinder.

Written By: Dorey Chiu

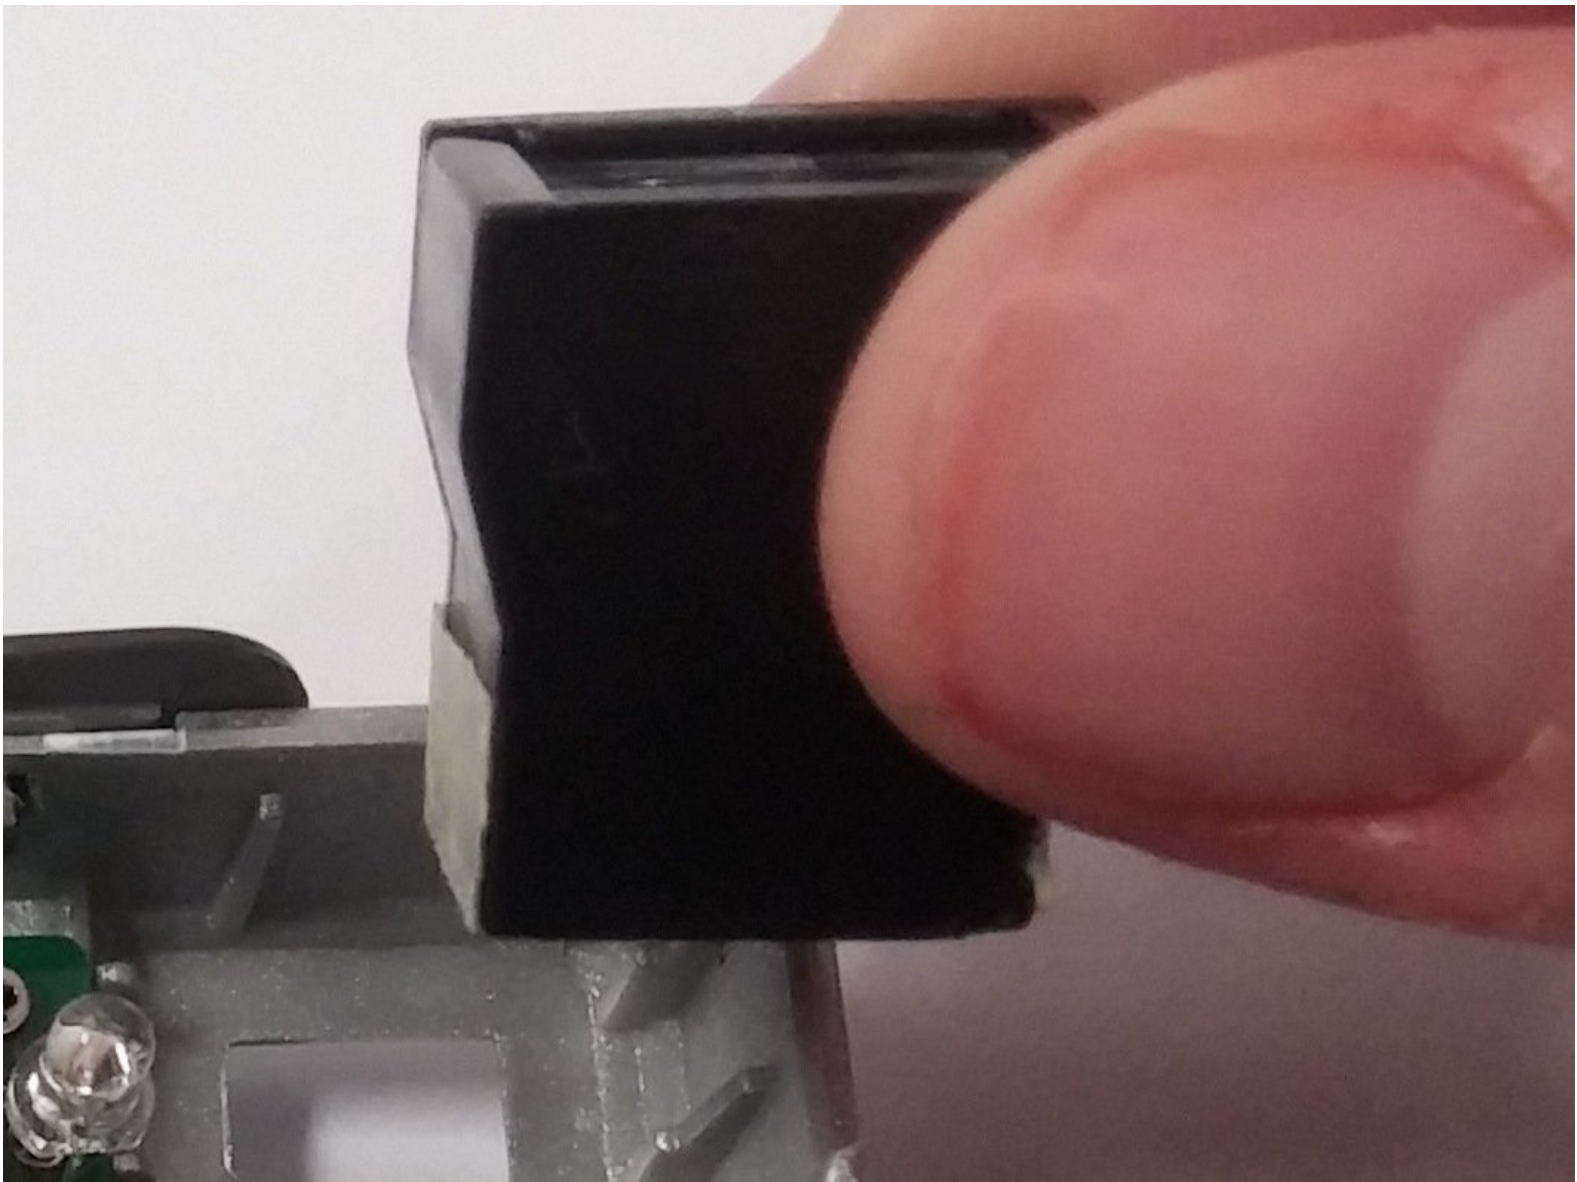



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Turn Off/Remove Batteries



 
- Hold the on/off button for 3 seconds until the screen is black.
- Remove batteries by placing thumb on battery plate cover sliding it down to expose batteries.
- Turn camera upside down to allow the batteries to fall out.

Step 2 — Remove Screws




- There are 5 (4.5mm in length) screws on the sides of the camera that need to be removed. Use a Phillips #000 screwdriver to remove all screws.
- Remove 2 screws on the right side of the camera, and store them on a magnetic mat.
- Remove 2 screws on the bottom of the camera, and store them on a magnetic mat.
- Remove 1 screw on the left side of the camera, and store it on a magnetic mat.

Step 3 — Pry Backplate Off

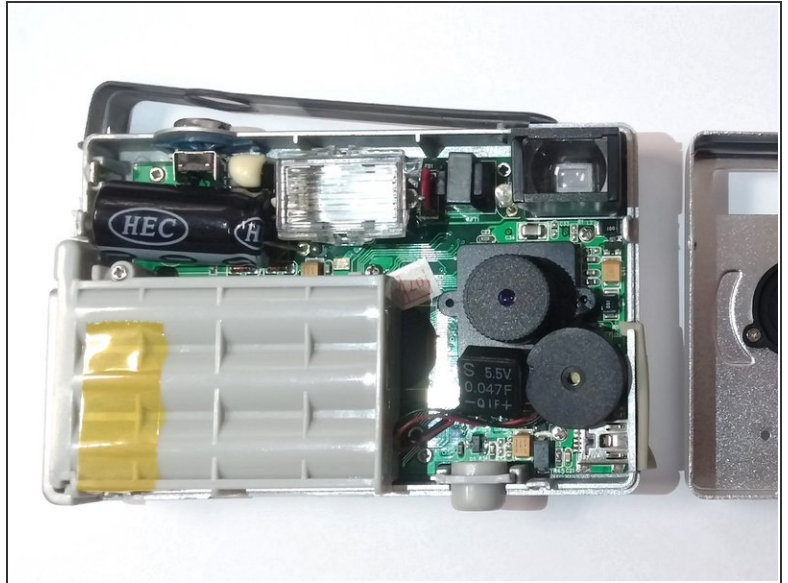

- Using a prying tool or fingernail, gently separate the back plate from the front plate, exposing the inside of the camera.

 Step 4 — Remove View Finder

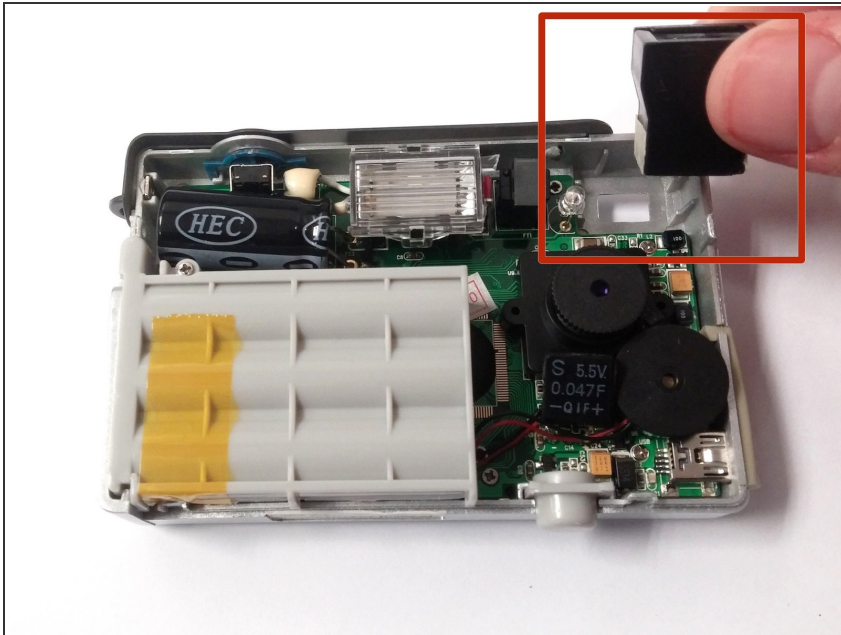

- Use fingers or tweezers to gently lift view finder out of socket.
- Clean with general lens cleaner and microfiber fabric as necessary and replace.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 04:00:47 AM (MST).

