



JD Razor 2000 Quick-Release Lever Replacement

Written By: Shane





TOOLS:

iFixit 1/4" Screwdriver Bits (1)

Phillips #2 Screwdriver (1)


Mako Driver Kit - 64 Precision Bits (1)



PARTS:



Razor Quick Release Level (1)

Step 1 — Unlocking the Lever

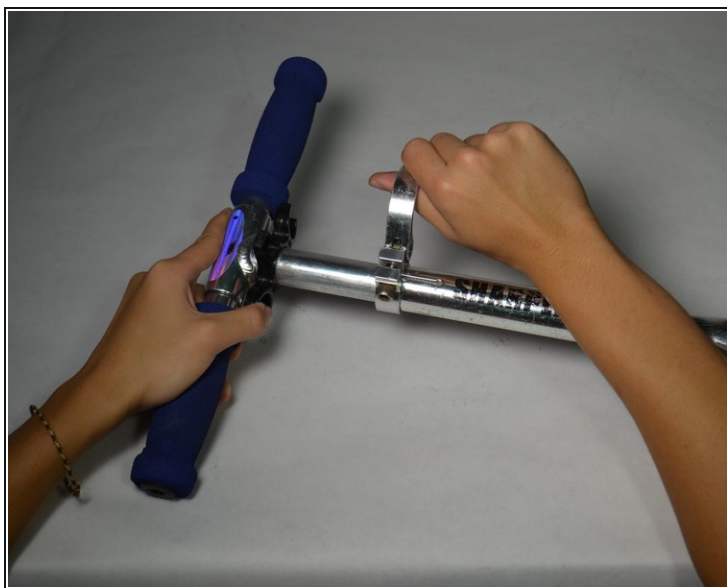




- Unlock the quick-release lever by turning the lever from a tightened position.

Step 2 — Loosening the Screw

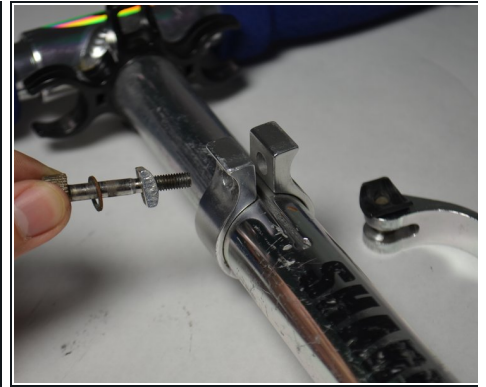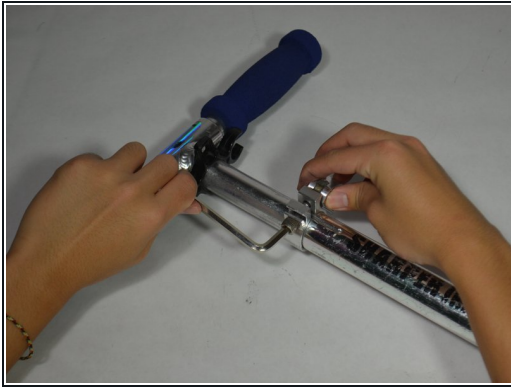

- Use a 7/32" Allen Wrench or T25 Screwdriver to loosen the screw shown.
- Be sure to fasten the opposite side of the screw before unscrewing.
- ☑ Remove the screw and note the order of the parts for reassembly.

Step 3 — Removing the Latch

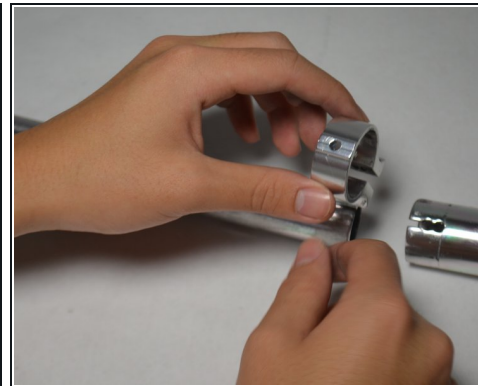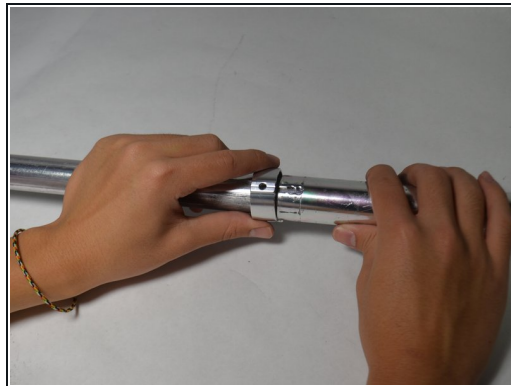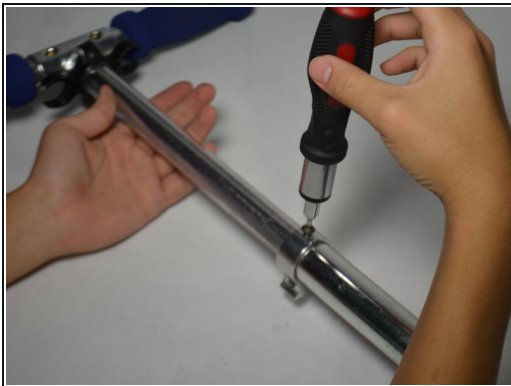

- Turn the quick-release lever over to reveal an 8mm screw.
- Use the Phillips #2 screw driver to remove the screw.
- After removing the screw, the circular latch will be detachable.

To reassemble your device, follow these instructions in reverse order.