



HP Photosmart Premium C309g Printhead Replacement

Replace the printhead in an HP Photosmart Premium C309g.

Written By: Laura



INTRODUCTION



If the printhead is bad, it will reflect on the quality of the printing. The printhead holds the ink and transfers characters and images to the paper. If the printing quality is not acceptable, the printhead may need replacement.

Step 1 — Printhead




- Open the top of the printer as shown.
- Locate the ink cartridges housed by the printhead.

Step 2

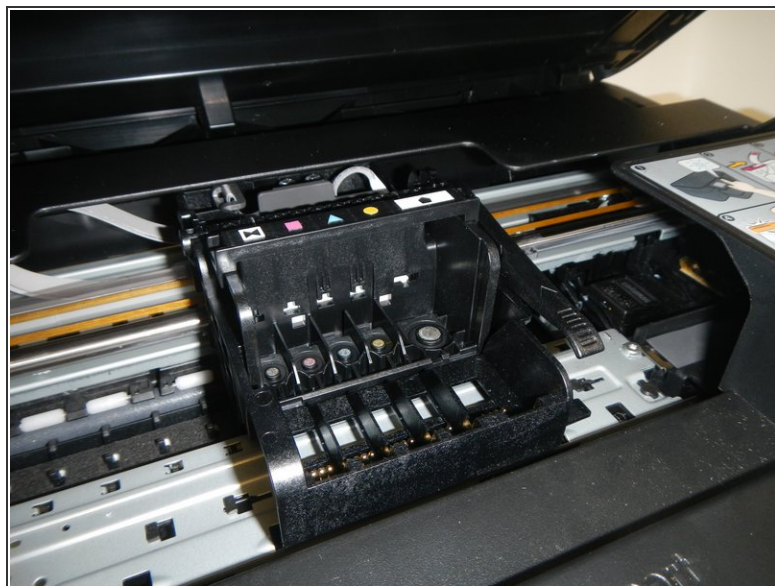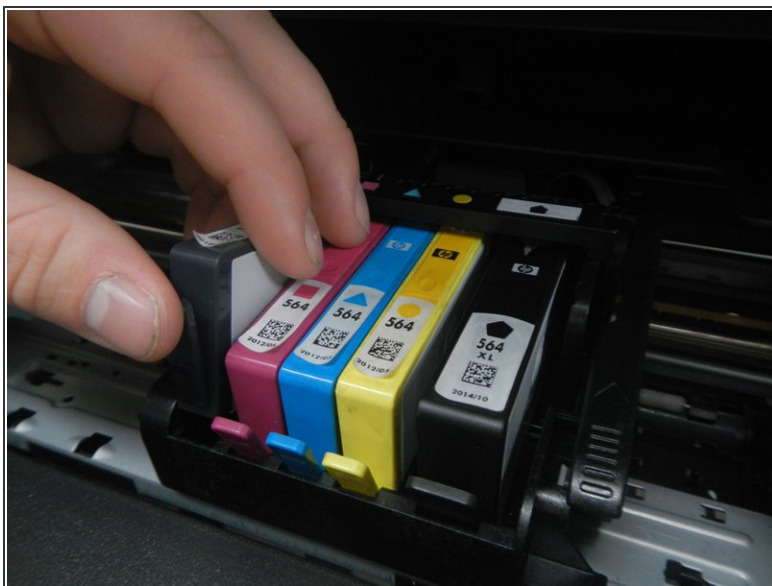


- Remove each ink cartridge by pushing the tab and lifting the cartridge.
- Set all 5 cartridges aside.

Step 3

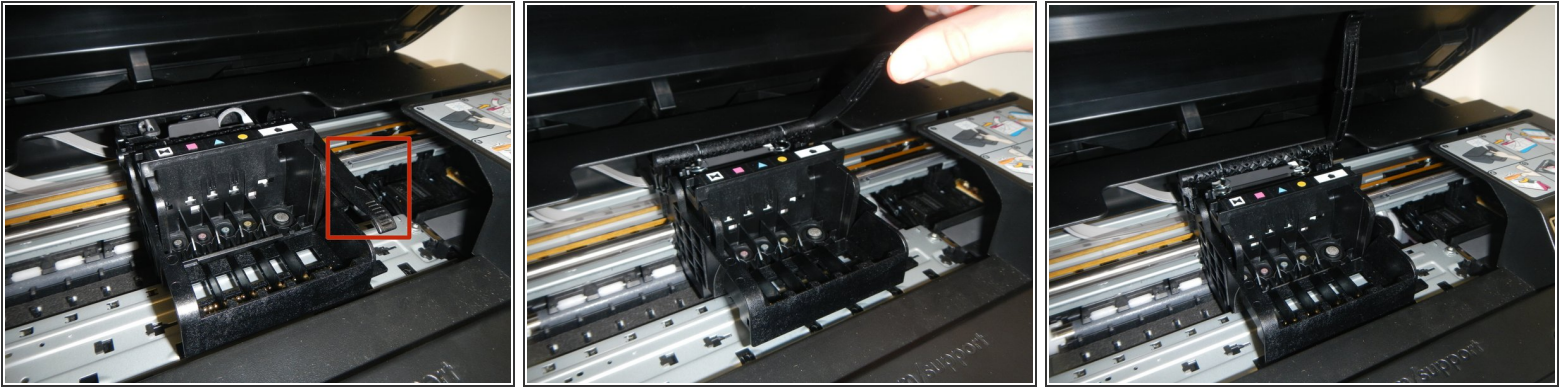

- Lift the lever located on the right side of the printhead.

Step 4

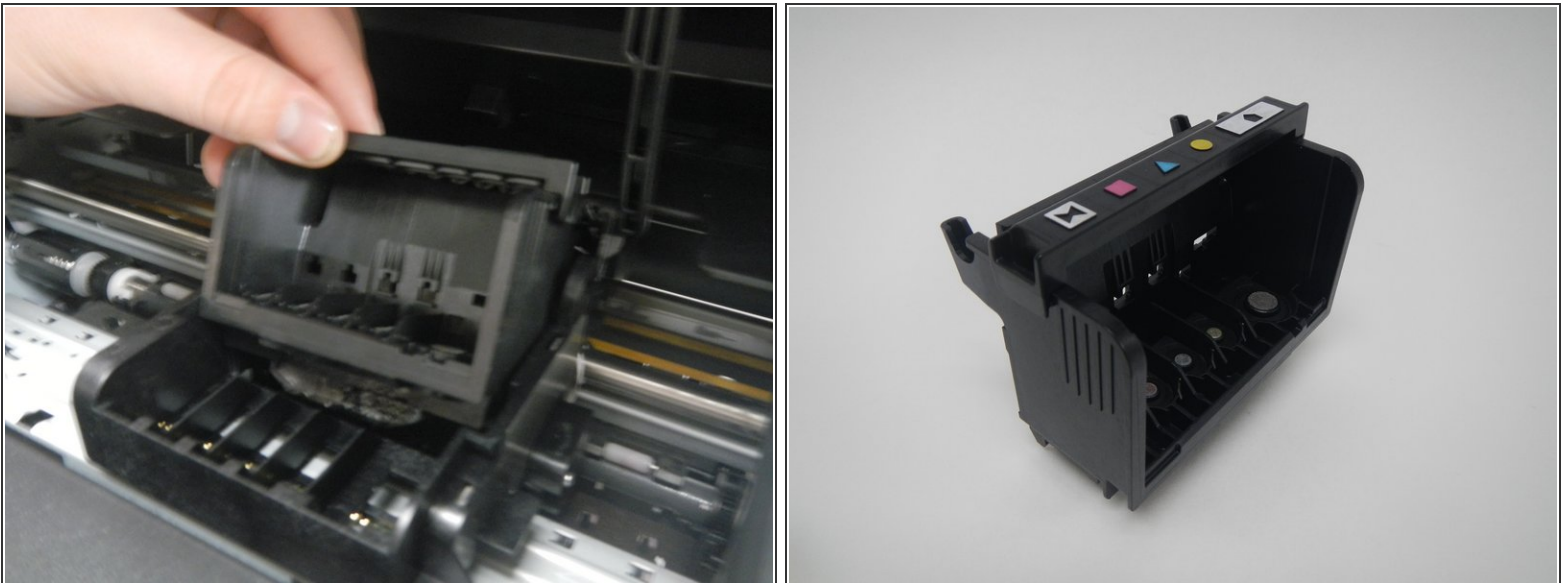

- Lift the printhead and remove it.

To reassemble your device, follow these instructions in reverse order.