



Blu Dash 5.0 Dual SIM Battery Replacement

This guide explains how to remove and replace the battery.

Written By: Dashaya Toney



INTRODUCTION

Outline what you are going to teach someone how to do.

TOOLS:

- [Spudger](#) (1)
-

Step 1 — Battery



- Find the small slot on the bottom left corner of the back panel.
- Slide the spudger into the small slot and lightly twist it. This will cause the corner of the back panel to pop up.
- When the back panel is loose enough, use your fingers to remove it completely.

Step 2



- With the back panel off, you should see a large white rectangle. This is the battery. Slide the spudger under the indent on the bottom right of the battery and pull it up.

To reassemble your device, follow these instructions in reverse order.