



Nook HD+ Speaker Replacement

A speaker replacement guide for the Nook HD+.

Written By: Alex Pelicas



INTRODUCTION

Steps to replace a broken speaker in the Nook HD+ tablet.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [64 Bit Driver Kit](#) (1)



PARTS:

- [AAC121217U22A](#) (1)

Step 1 — Take off the Top Frame




- Wedge the plastic opening piece underneath the bottom left hand corner of the front frame
- Pry open the front frame.

Step 2 — Remove the screws




- Remove every visible screw tying the chassis to the bottom frame using a T-4 screwdriver bit.

Step 3 — Remove the Battery

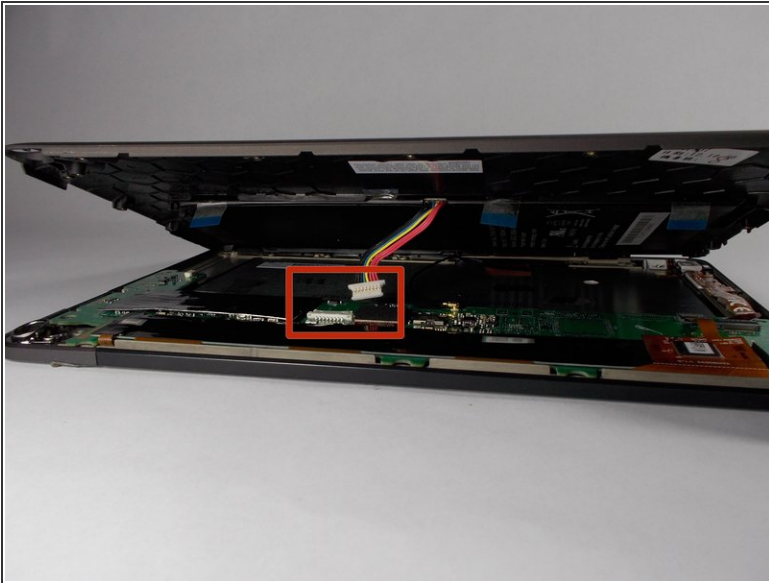

- Carefully remove the bottom frame from center chassis.
- Detach the battery ribbon from the motherboard.
- Flip the center chassis onto the screen side with the hole positioned on the bottom right hand corner.

Step 4 — Unscrew the speaker

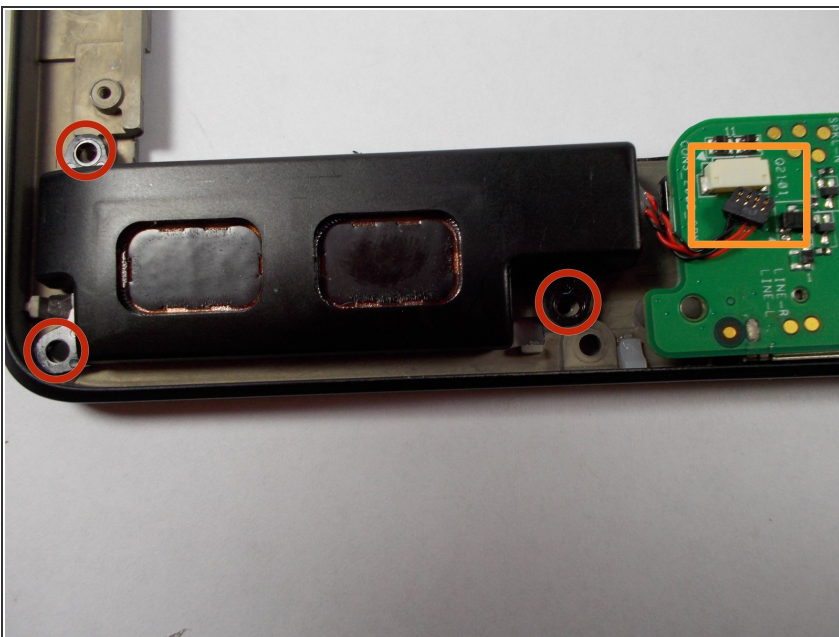

- In the bottom left hand corner remove the 3 screws that are attached to the speaker
- Disconnect the small red and black ribbon connected to the speaker from the white clip on the motherboard.
- Replace old speaker with new speaker then follow instructions in reverse order to reassemble

To reassemble your device, follow these instructions in reverse order.