



# Polaroid a520 LCD Screen Replacement

How to replace the LCD screen if it is broken...

Written By: Dani



---

## INTRODUCTION

How to replace the LCD screen if it is broken or cracked.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery



- Place your thumb on the battery cover and push left towards the arrow.

**i** The cover will release and pop open.

## Step 2



- Remove the batteries from the camera.

## Step 3 — Casing



- Remove four 3 mm screws on the right side of the camera using a Phillips #1 screwdriver.
- ⓘ This will release the front and back casings.

## Step 4




- Use your nail or a flat object to pry up the edge of the front casing. Push the casing up and back.
- ⓘ Repeat this step for the back casing.

## Step 5 — LCD Screen



- Under the screen, locate the black plastic strip that sits above the white plastic strip.

## Step 6

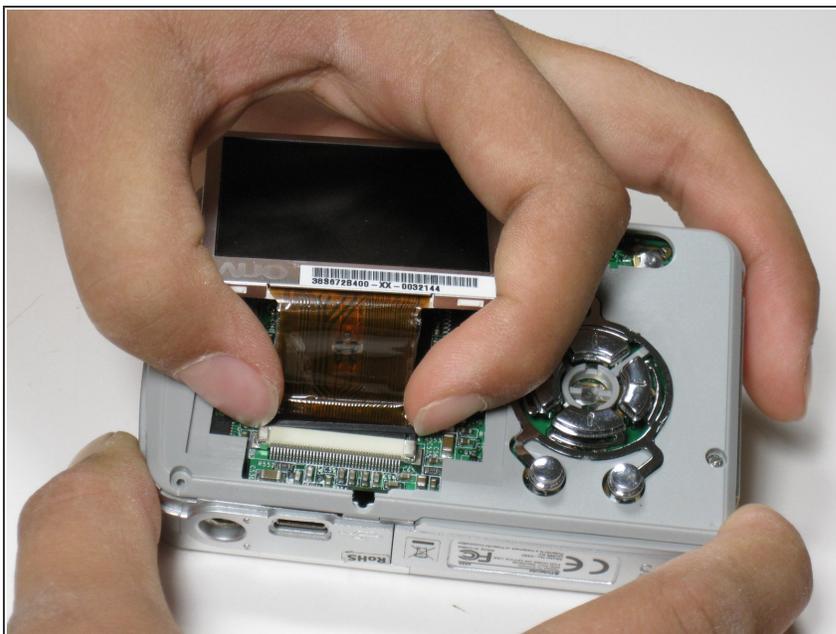

- Pull both sides of the black piece upward-about a mm.
- ⚠ The black plastic piece is not meant to come all the way off, just enough to release the screen.
- Once the piece is lifted carefully slide the screen out of the slot.

To reassemble your device, follow these instructions in reverse order.