


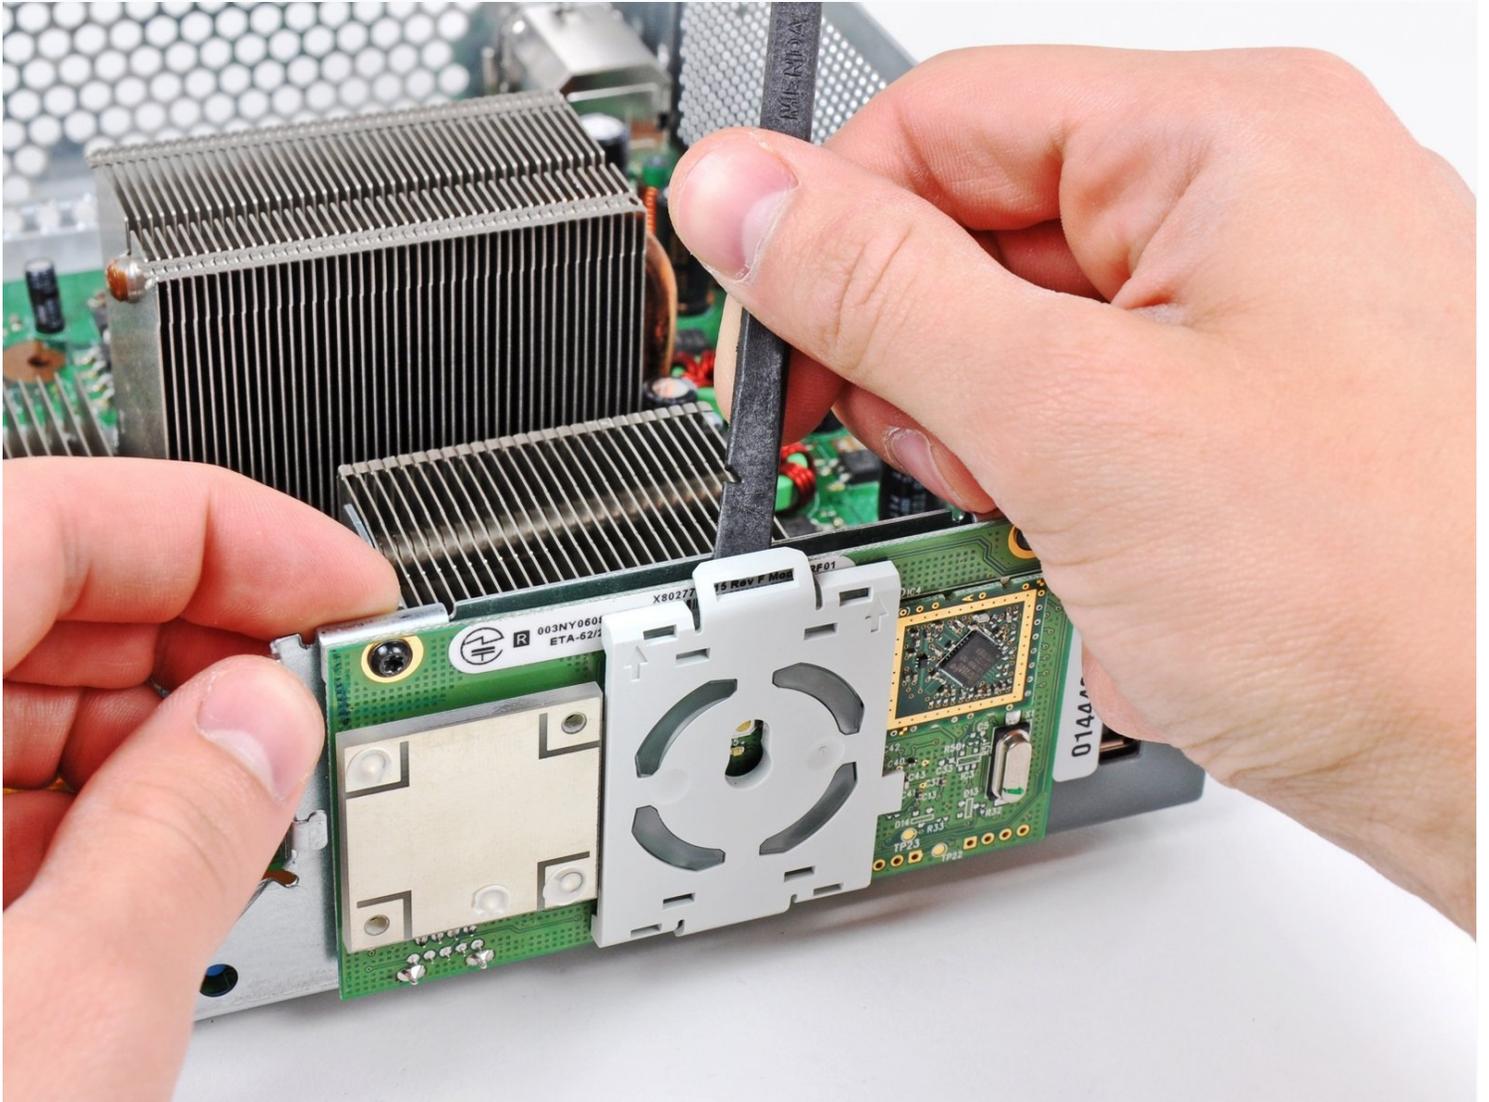

Xbox 360 Motherboard Replacement

This guide is an internal prereq.

Written By: Walter Galan



INTRODUCTION

This guide is an internal prereq.


TOOLS:

TR8 Torx Security Screwdriver (1)
TR10 Torx Security Screwdriver (1)
Spudger (1)

PARTS:


Xbox 360 Jasper Motherboard and Paired Optical Drive (1)
Xbox 360 Falcon Motherboard and Paired Optical Drive (1)
Xbox 360 Xenon Motherboard and Paired Optical Drive (1)

Step 1 — Motherboard

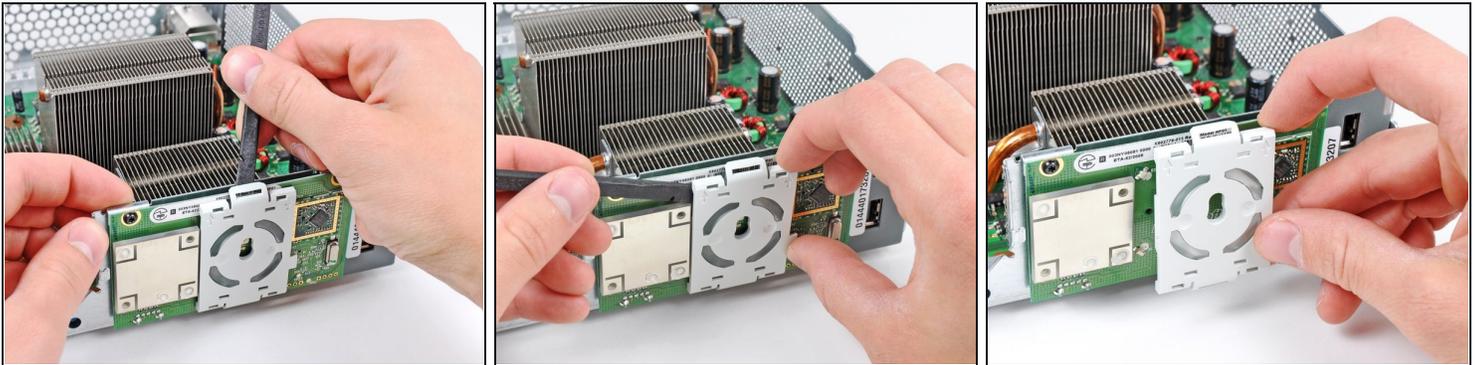


- Use the flat end of a spudger to release the clips securing the RF module shield along the top and the left edge of the RF module.
- ⓘ It may be easier to use your fingernail to release the clips from the RF module.
- Remove the RF module shield from the console.

Step 2

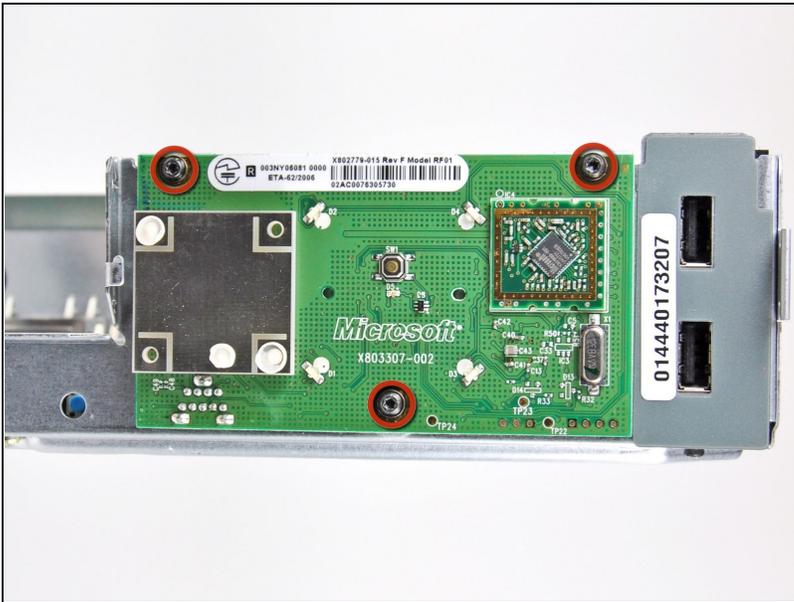


- Remove three 5.6 mm T8 Torx screws securing the RF module to the metal chassis.

Step 3

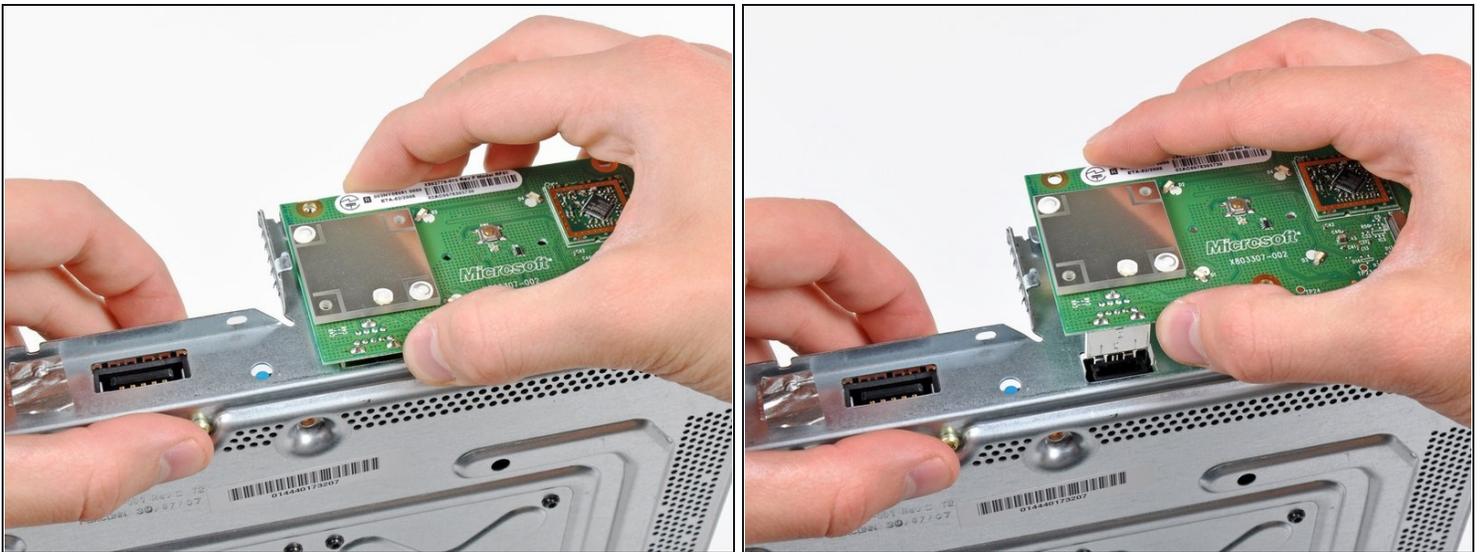


- Grasp the RF module and lift it straight up to disconnect it from its socket on the motherboard.
- Remove the RF module from the console.

Step 4

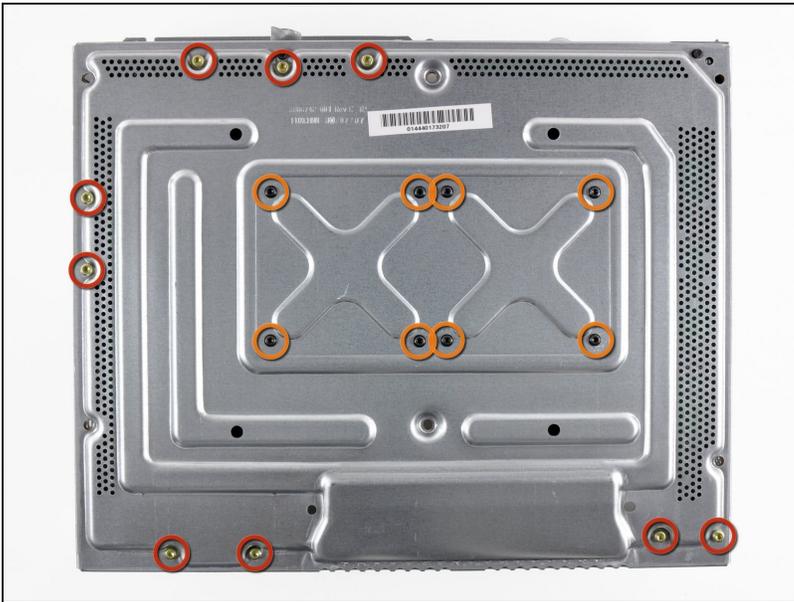

- Remove the following screws securing the motherboard to the metal casing:
 - Nine gold 11 mm T10 Torx screws.
 - Eight black 5.6 mm T8 Torx screws.
- ☑ If you are reassembling your Xbox 360 after installing the Red Ring of Death Fix Kit, the eight T8 Torx screws circled in orange are not reused.

Step 5

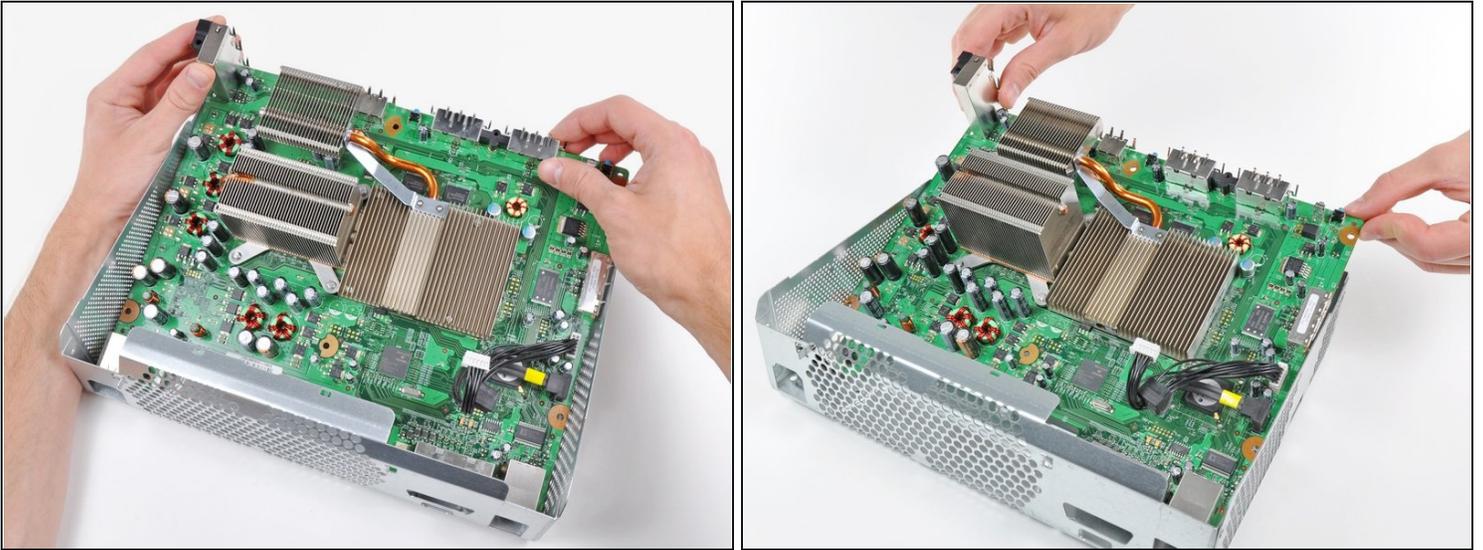

ⓘ Turn the Xbox over, being careful not to let the motherboard fall out of the chassis.

- Lift the motherboard assembly from its front edge.

⚠ Be careful not to damage the sockets as you rotate the motherboard away from the metal casing.

- Remove the motherboard assembly from the metal casing.

To reassemble your device, follow these instructions in reverse order.