



Sony Cyber-Shot DSC-W120 Battery Replacement

Follow the steps below to replace your Sony Cyber-Shot DSC-W120 battery.

Written By: Athena Moore



INTRODUCTION


This guide will explain how to safely remove the battery of your Sony Cyber-Shot DSC-W120 so you can replace it or clean the port.



PARTS:

- [New Sony Cyber-Shot DSC-W120 Battery](#) (1)
-

Step 1 — Battery

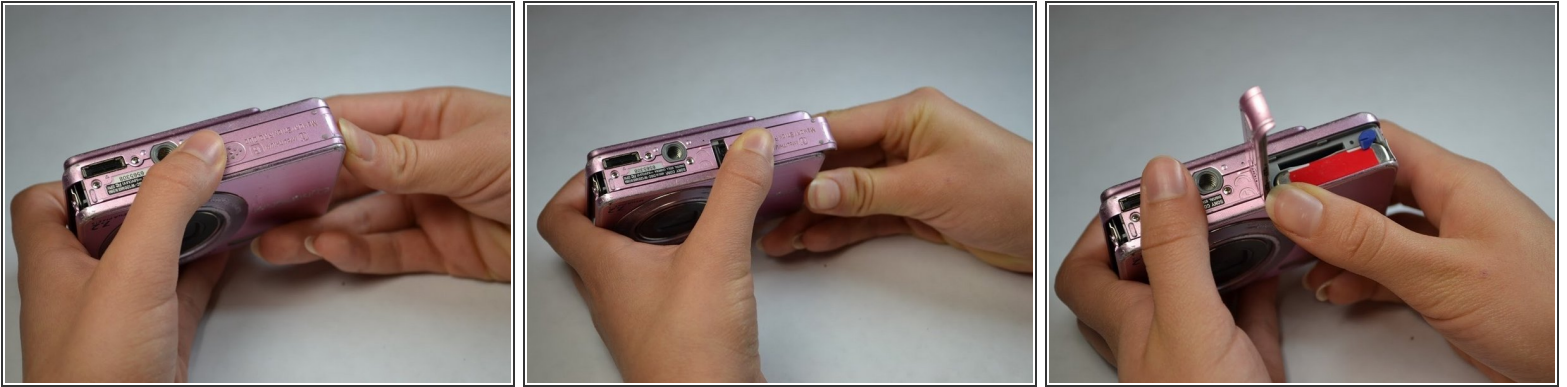

- Turn the camera upside down.
- Slide the lock bar to the right and flip the bar up displaying the battery in the slot.

Step 2



- Flick the blue clip allowing the battery to pop up.
- Take the battery out and replace it with a new one.

To reassemble your device, follow these instructions in reverse order.