



# Canon PIXMA iP3600 Printhead Replacement

How to replace the printhead.

Written By: Caitlyn



## INTRODUCTION

If your printed documents or images are becoming distorted due to a dysfunctional printhead, use this guide to replace the printhead.

## Step 1 — Ink Cartridges



- Press the power button to turn on the printer.

## Step 2



- Pull down the front output tray cover.

## Step 3



- Lift the printer lid.

## Step 4



- Allow the belt, containing ink cartridges, to adjust and center so that the ink cartridges are visible.

## Step 5



- Push in the white clip to release the ink cartridge from the printhead.
- Lift the ink cartridge from the printhead.
- Repeat this process for the remaining ink cartridges.
- You have successfully removed all ink cartridges.

## Step 6 — Printhead




- After removing all ink cartridges, lift the printhead lock lever.

## Step 7



- Pull up and lift out the black piece that previously held the ink cartridges. This is the printhead.

## Step 8

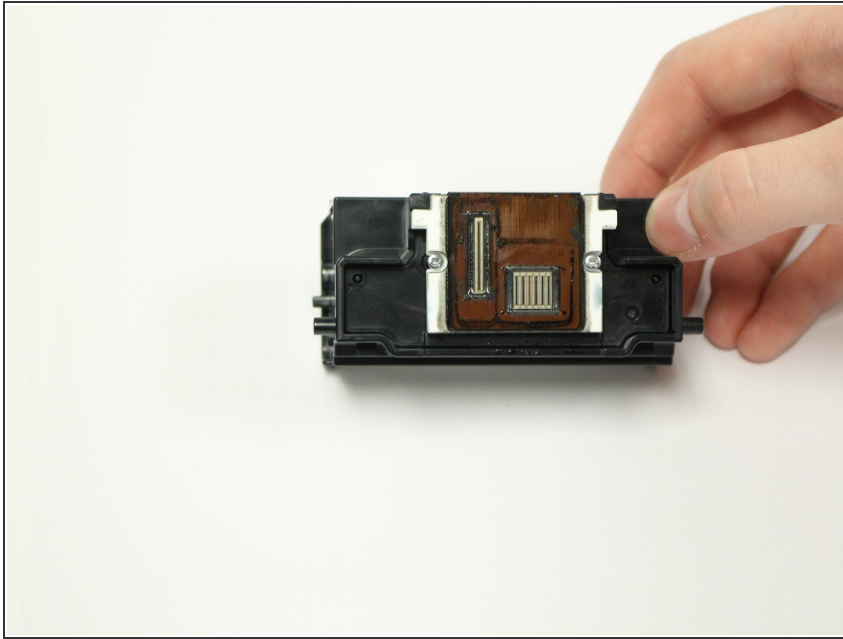

- You have successfully removed your printhead.

To reassemble your device, follow these instructions in reverse order.