



Kodak EasyShare Z740 Button Replacement

This guide will show how to replace the button pad on the back of the camera.

Written By: Kirsten Price



INTRODUCTION

The button pad lets the user control actions on the LCD screen. The arrow pad allows the user to move up, down, left, right, and select.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Slide the door on the bottom of the camera in the direction of the open symbol with your finger.
- Release and the door will pop open.

Step 2



- Slide the battery out.

Step 3 — Lens Cover




- Remove lens cover from the camera by squeezing the protruding button on each side of the cover and pulling.

Step 4




- Pull the lens cover string toward the ground so that the loop underneath the metal slab is on top of the cover string.
- Push up so that the string starts to come out of the top of the loop.
- Grab the string from above the loop and pull.

Step 5

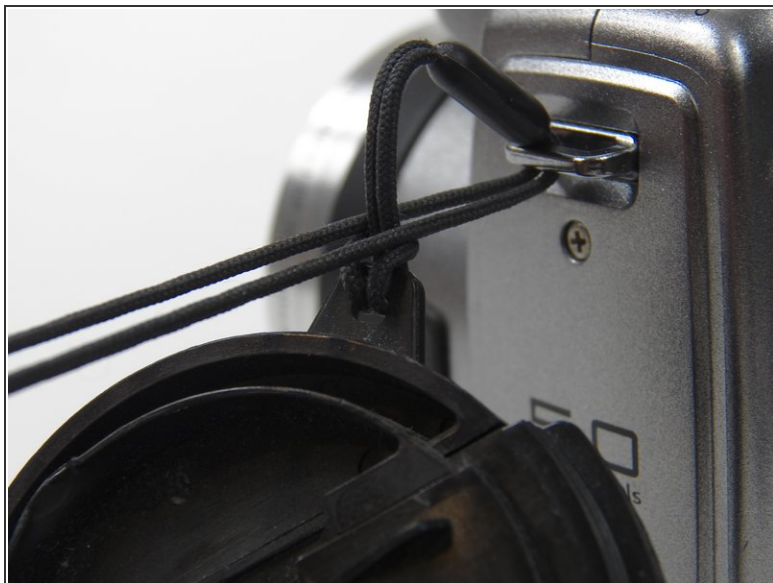

- Feed the string on top into the metal slab while pulling the loop toward you until the plastic piece stops you from pulling any further.

Step 6

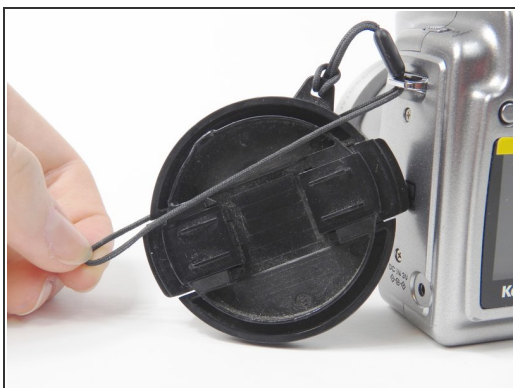

- Separate the two pieces of the loop and pull the lens cover up in between them.

Step 7




- Pull the lens cover and the sting will come out of the metal slab.

Step 8 — SD/MMC



- Flip open the door on the right side of the camera, when looking at the LCD screen.

 This door has a memory card and A/V OUT symbol on it.

Step 9



- Gently push SD/MMC to eject.


Step 10



- Pull SD/MMC out of the camera.

Step 11 — Back Cover



 Place lens cover back on the lens to prevent scratches or debris but leave string detached.


- Remove a total of six 3.968mm Phillips #00 screws. Two each from the left side, bottom, and right side.

Step 12





- Pull the back cover away from the front cover.
- You may need to use a plastic opening tool as a wedge if it does not come apart by easily.

Step 13

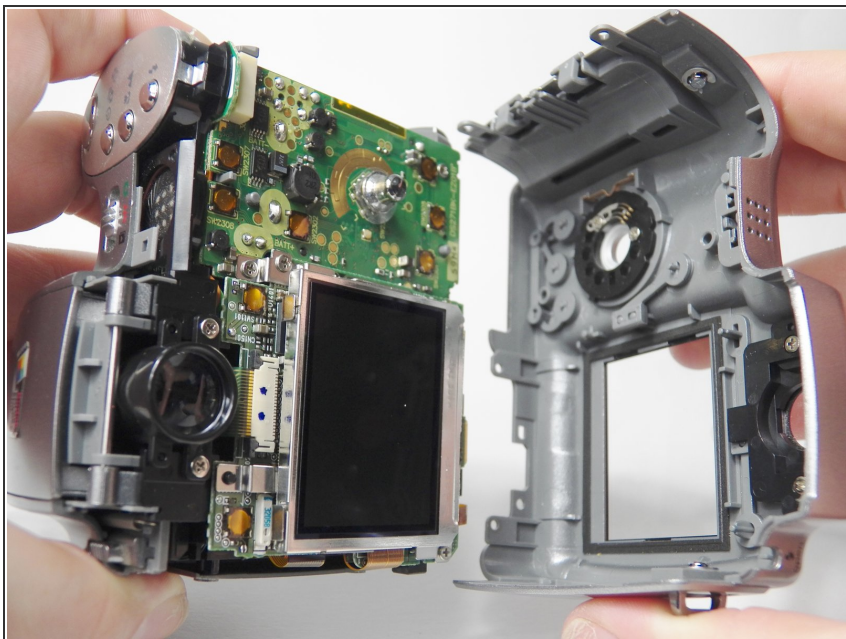



- Separate the back cover from the front cover.

Step 14 — Button Pad

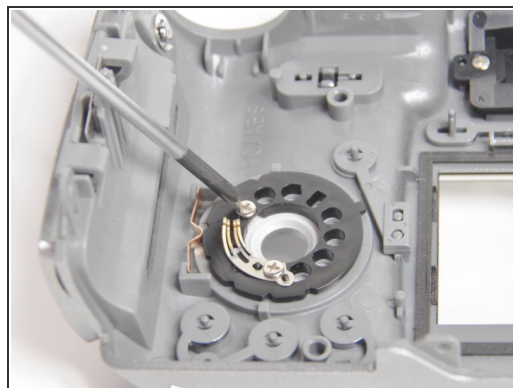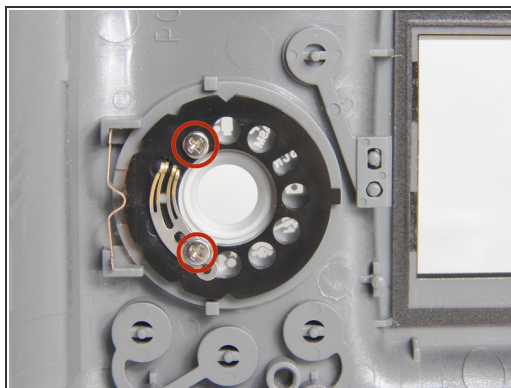



- Remove two Phillips #00 screws from the inside of the button pad on the back cover.

Step 15

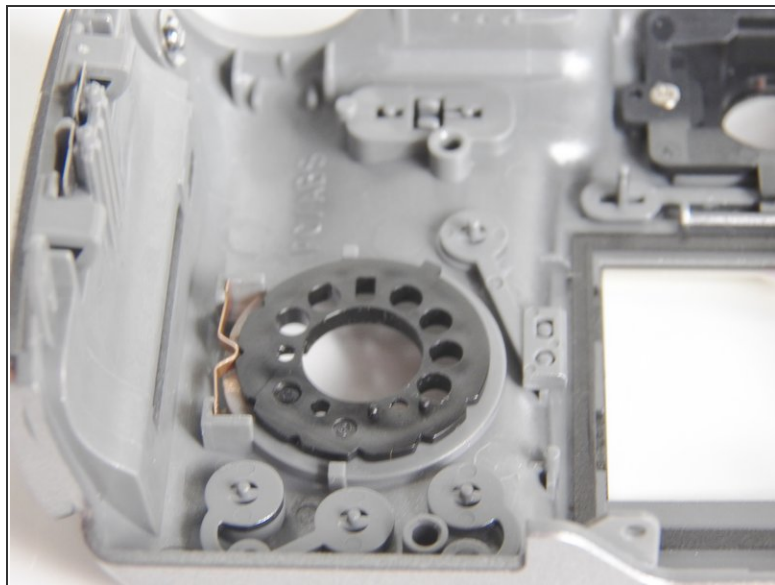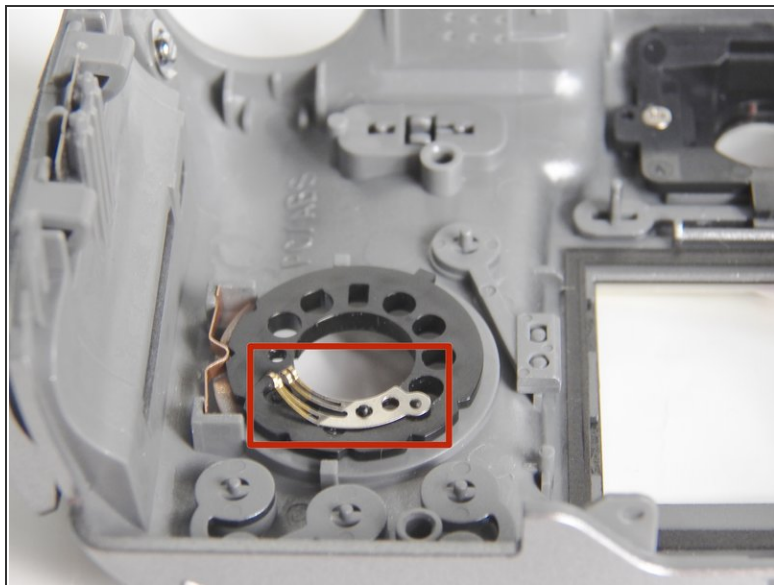

- Remove the metal piece shown.

Step 16

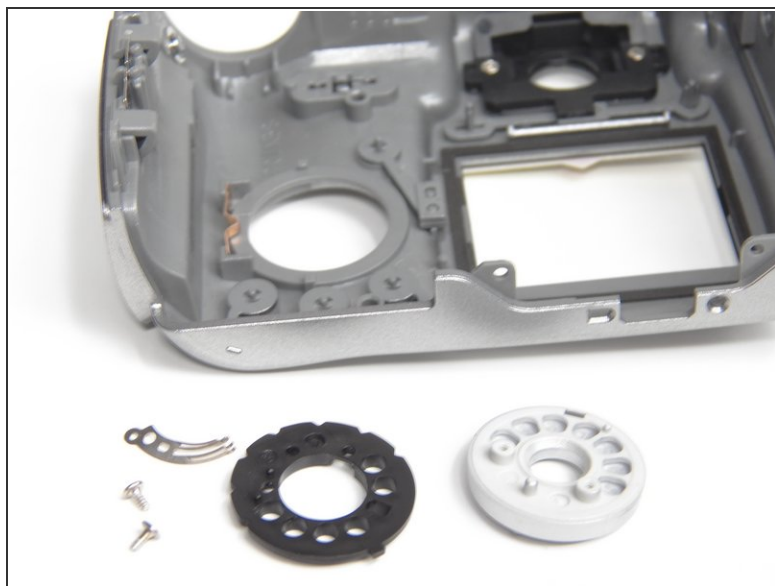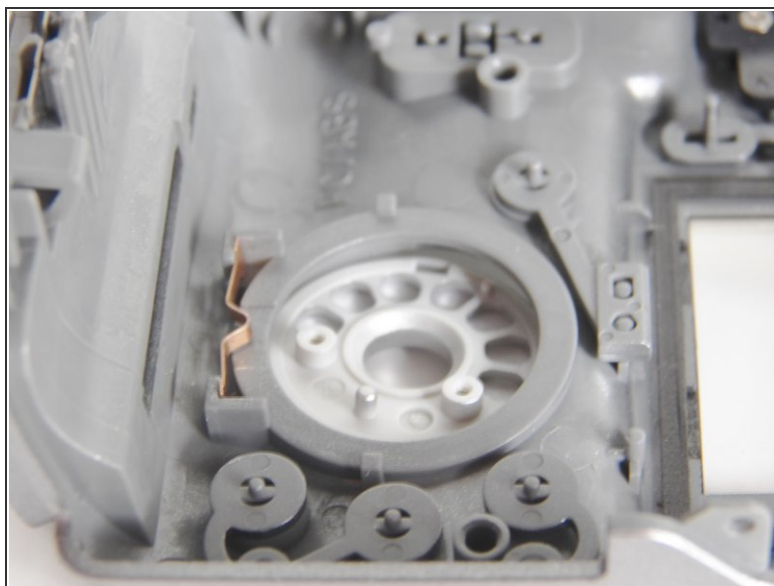

- Remove the black ring from the back and the white button pad will fall out from the front.

To reassemble your device, follow these instructions in reverse order.