




# Nikon Coolpix P100 Display Screen Replacement

Written By: Rikki Brown




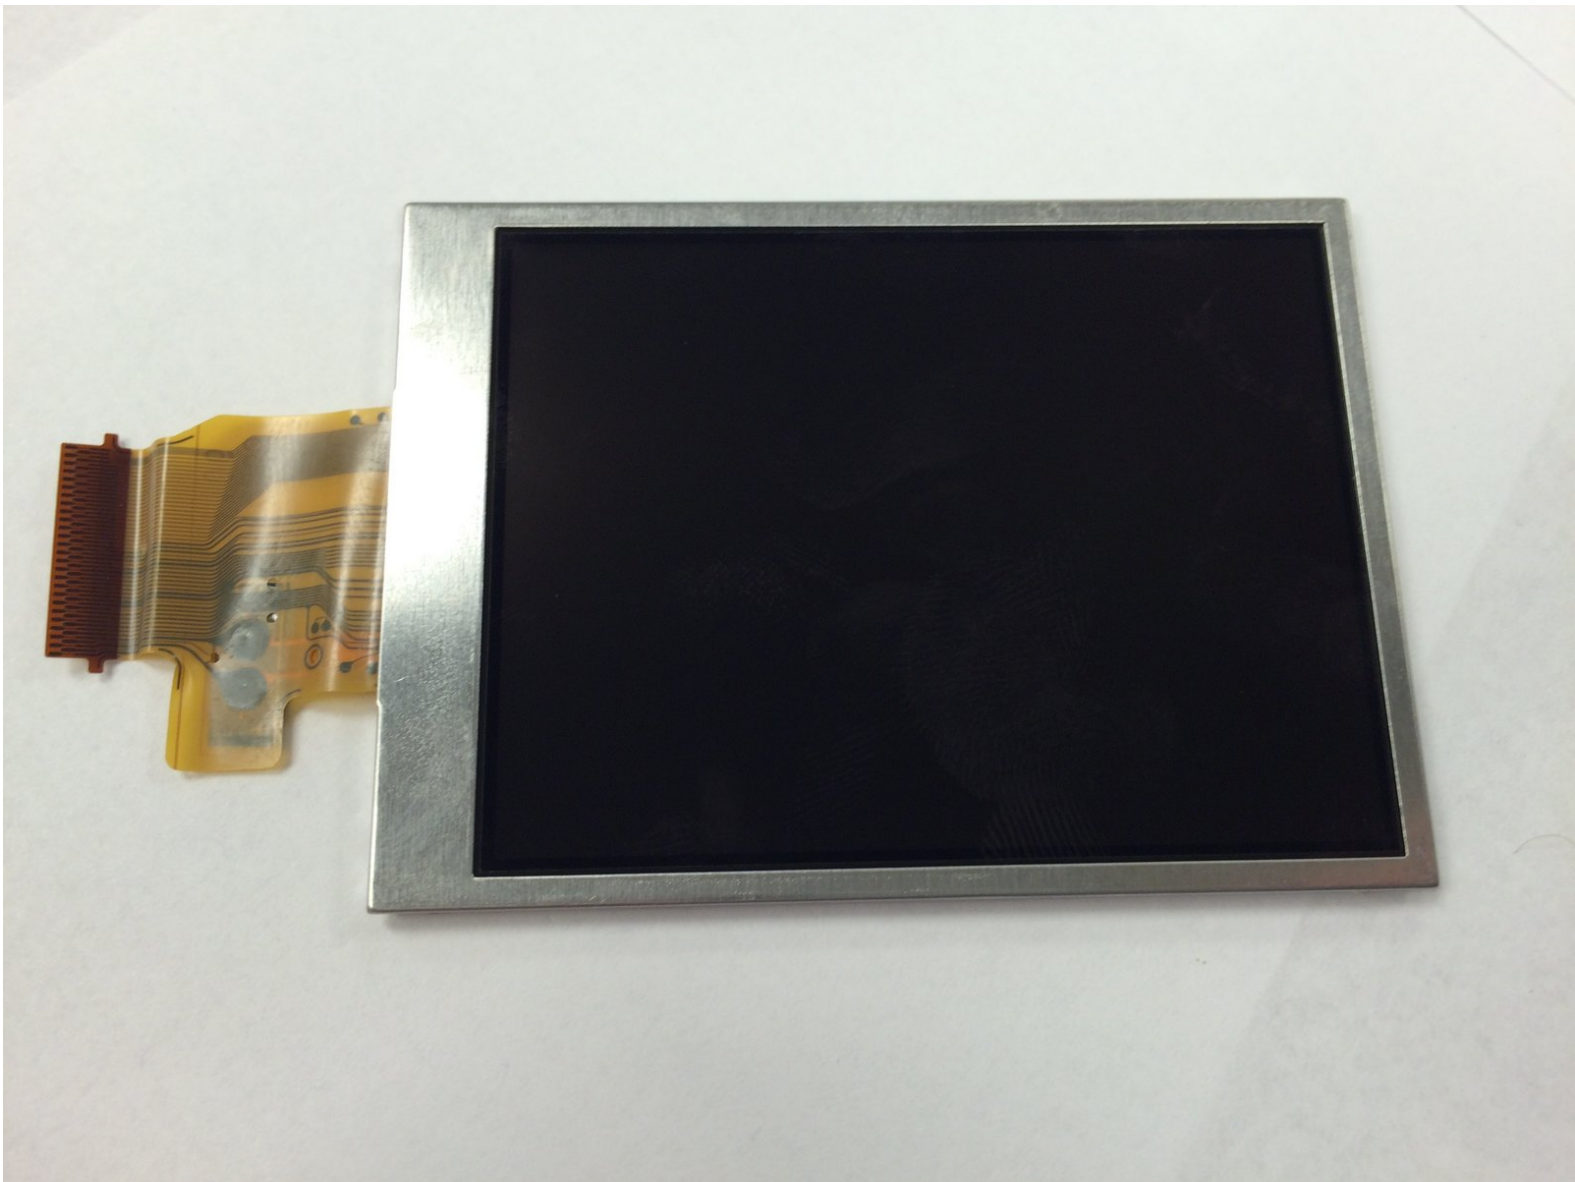

## TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)

## Step 1 — Display Screen

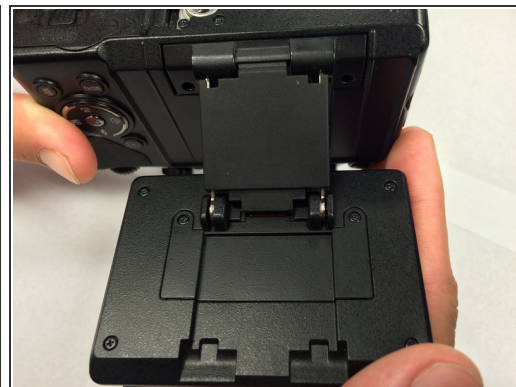

- Flip the camera upside down so that the side with the serial number is face up.
- Pull back the display panel. Orient the panel so that you are able to view the back of it.


## Step 2

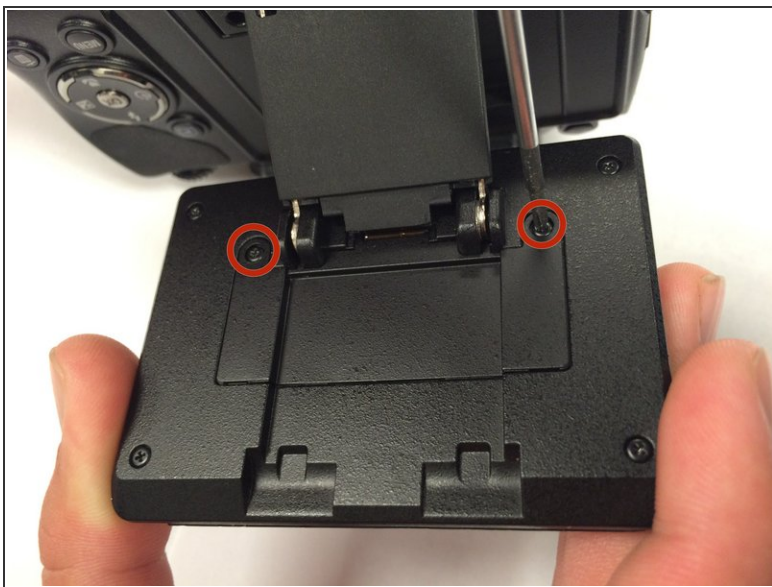

- Remove the two screws closest to the piece connecting the panel to the camera with a Phillips #1 screwdriver.




### Step 3

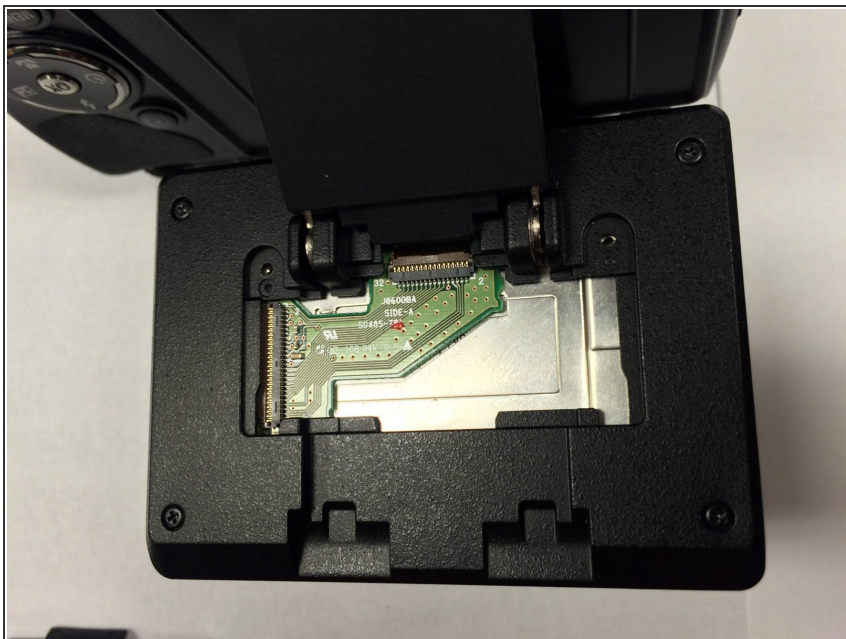


- Remove the cover that was unscrewed in the last step.

### Step 4

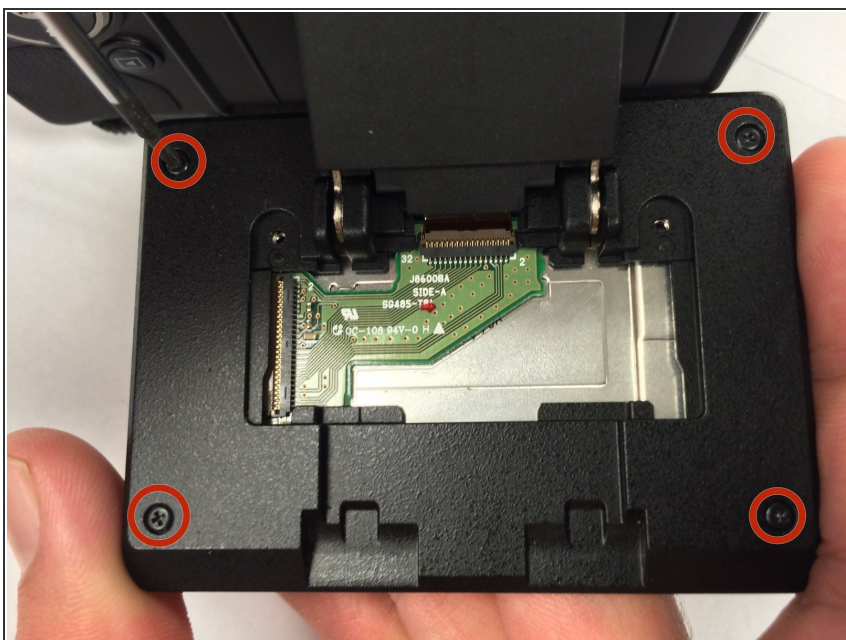


- Remove the remaining four screws on the outermost corners of the panel using a Phillips #1 screwdriver.

## Step 5

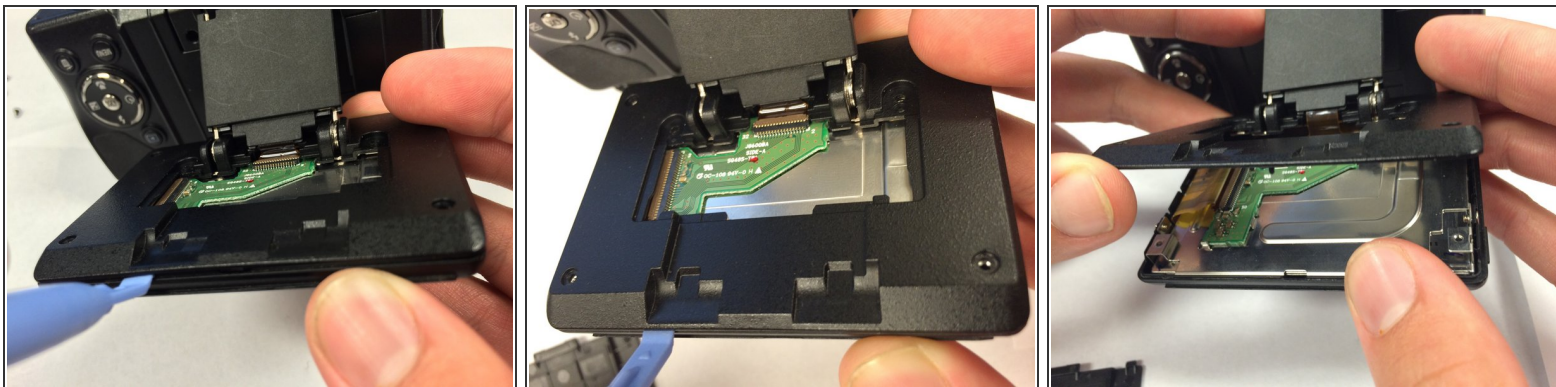

- Use a plastic opening tool to pry open the back panel of the display screen.


## Step 6

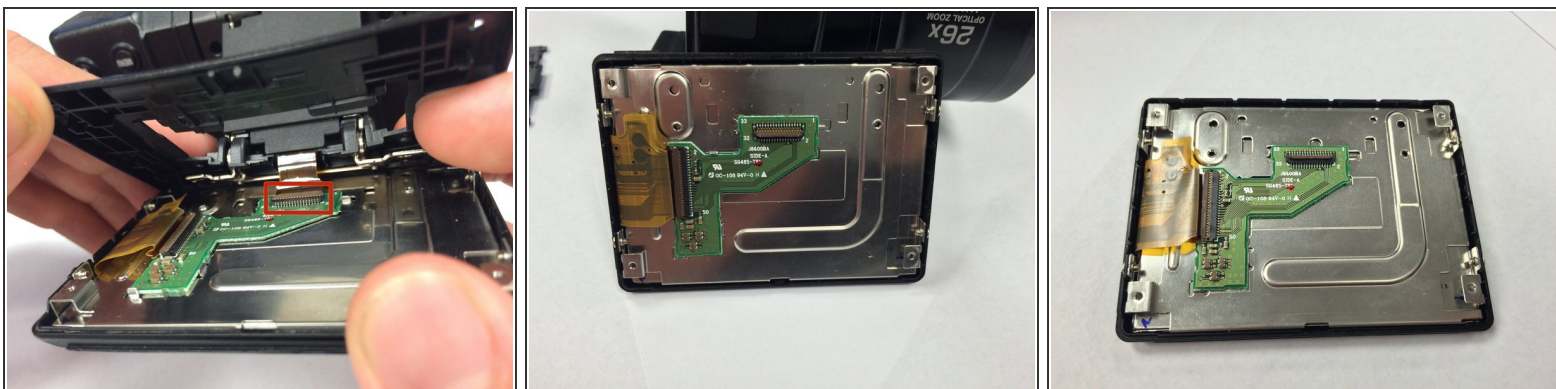

- Carefully unhook the ribbon that attaches the panel to the camera.
- Remove the top black panel cover.




## Step 7

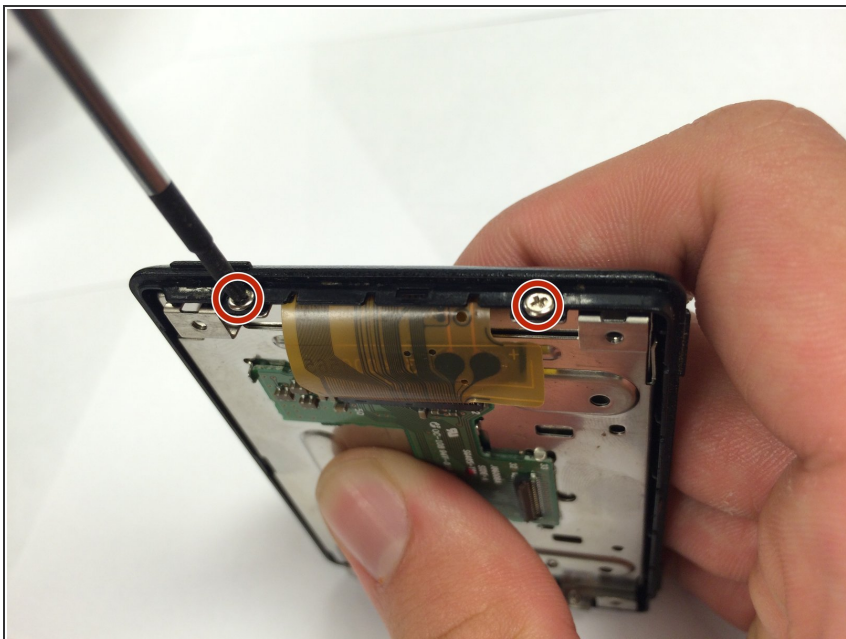

- Remove the two screws on the panel that are closest to the ribbon cable using a Phillips #1 screwdriver.

## Step 8

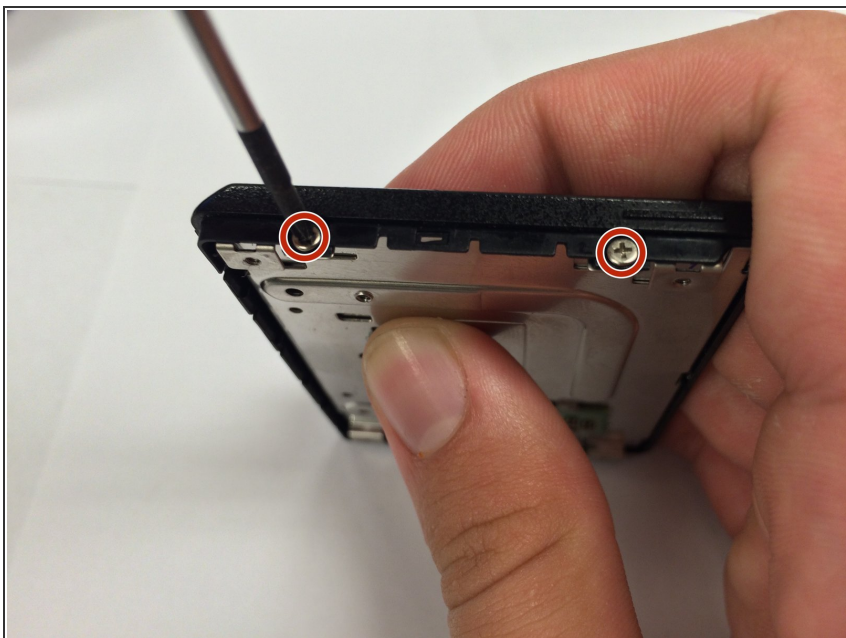



- Remove the other two screws on the opposite side of the panel using a Phillips #1 screwdriver.

## Step 9



- Separate the metal portion of the screen from the plastic portion.

## Step 10

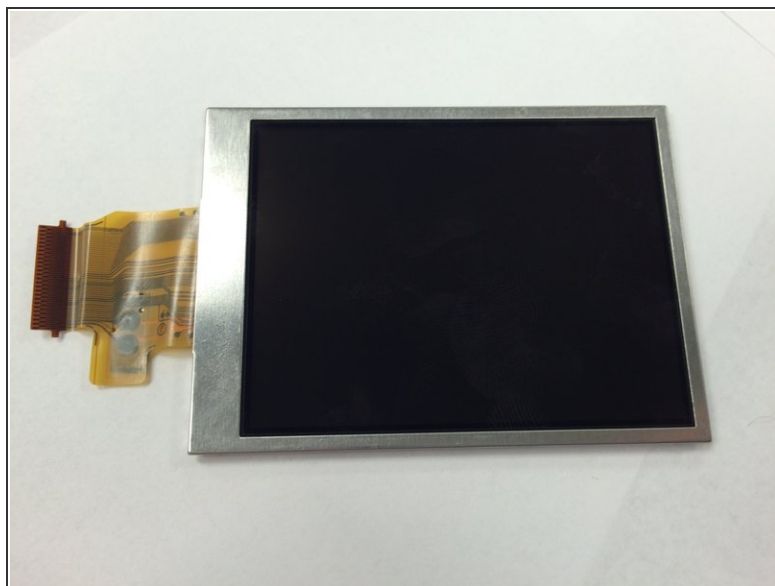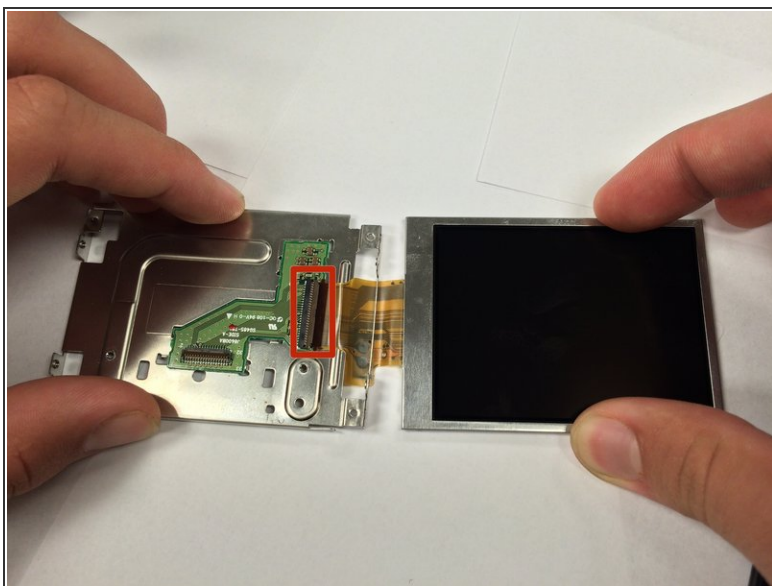

- Carefully remove the ribbon connector cable from the metal portion of the display.
- Remove the display from the rest of the device.

To reassemble your device, follow these instructions in reverse order.