


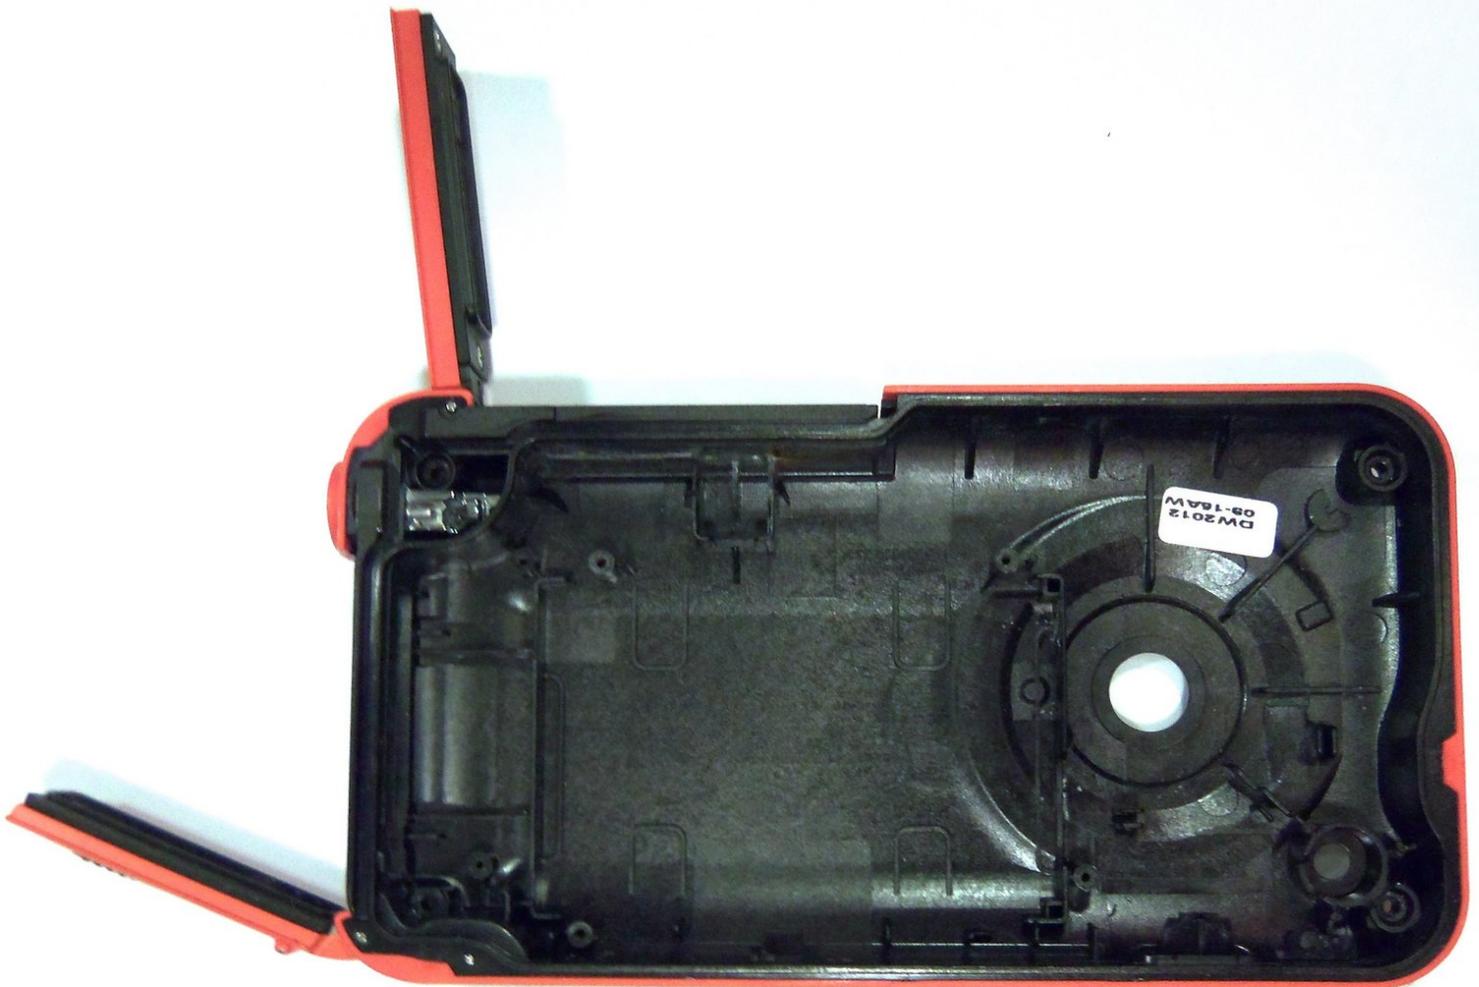

# Samsung HMX-W300 Front Case Replacement

Demonstrates how to replace the front case of...

Written By: Robert



## INTRODUCTION

Demonstrates how to replace the front case of the camera through pictures and words. Replacement of the rear case requires disassembling battery housing and battery from front case.

---

### TOOLS:

- [1.5mm Hex Screwdriver](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tool](#) (1)
-

## Step 1 — Disassembling Samsung HMX-W300



- To remove the wristband of the device, grab the middle loop and pull the band through.

## Step 2




- Remove four screws with a Hex 1.5 mm screwdriver.

### Step 3



- Open the HDMI door on the side of the camera.
- Remove the single screw using a Phillips #00 screwdriver.


### Step 4

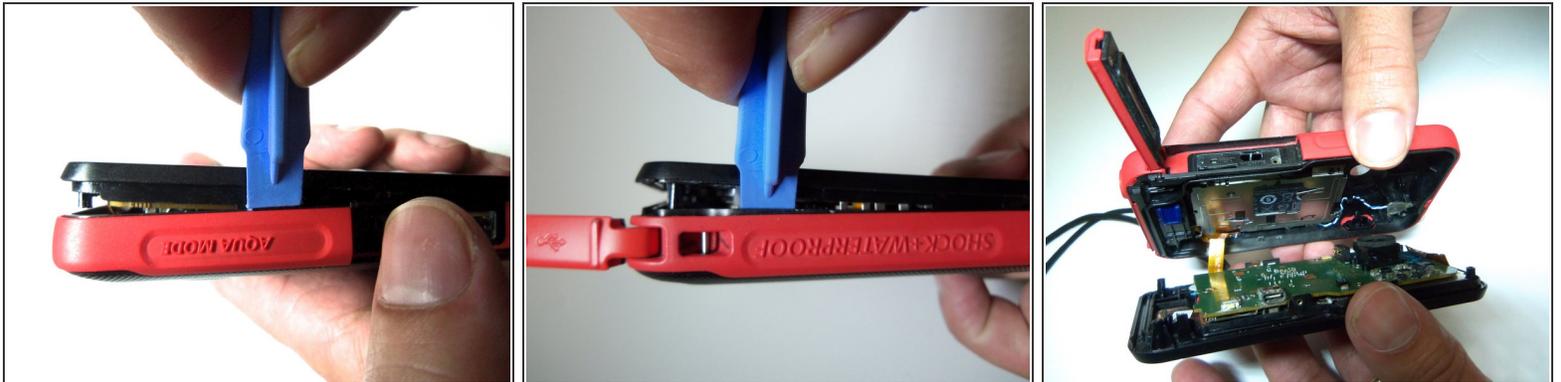

- Use the iFixit opening tool on both sides on the device. Pry apart both sections with light force.


**⚠ Do not apply too much force. There is a wire that attaches the front case with the rear case that can be damaged.**

## Step 5

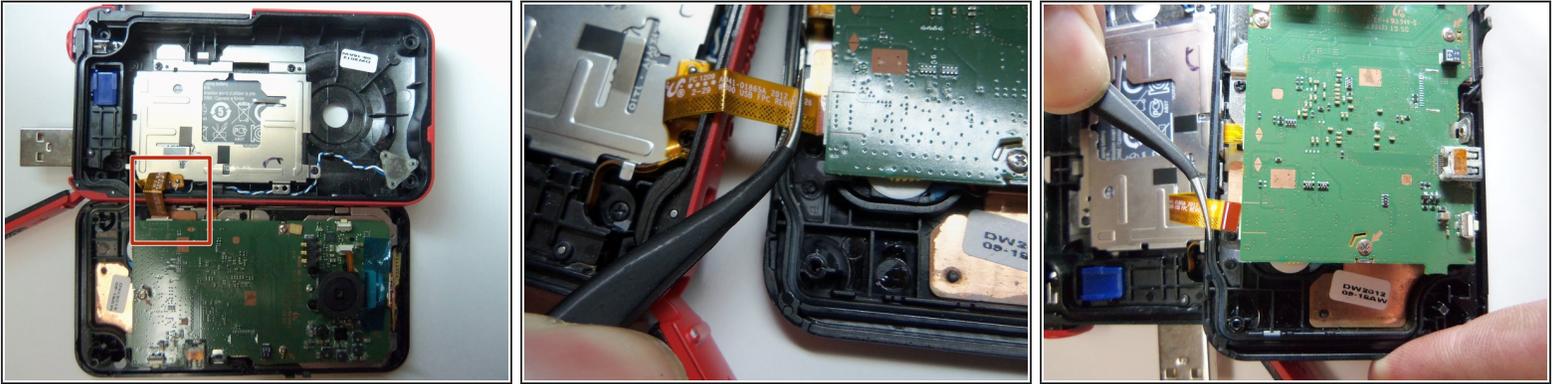


- Pull the wire ribbon out with a pair of tweezers.

## Step 6 — Battery

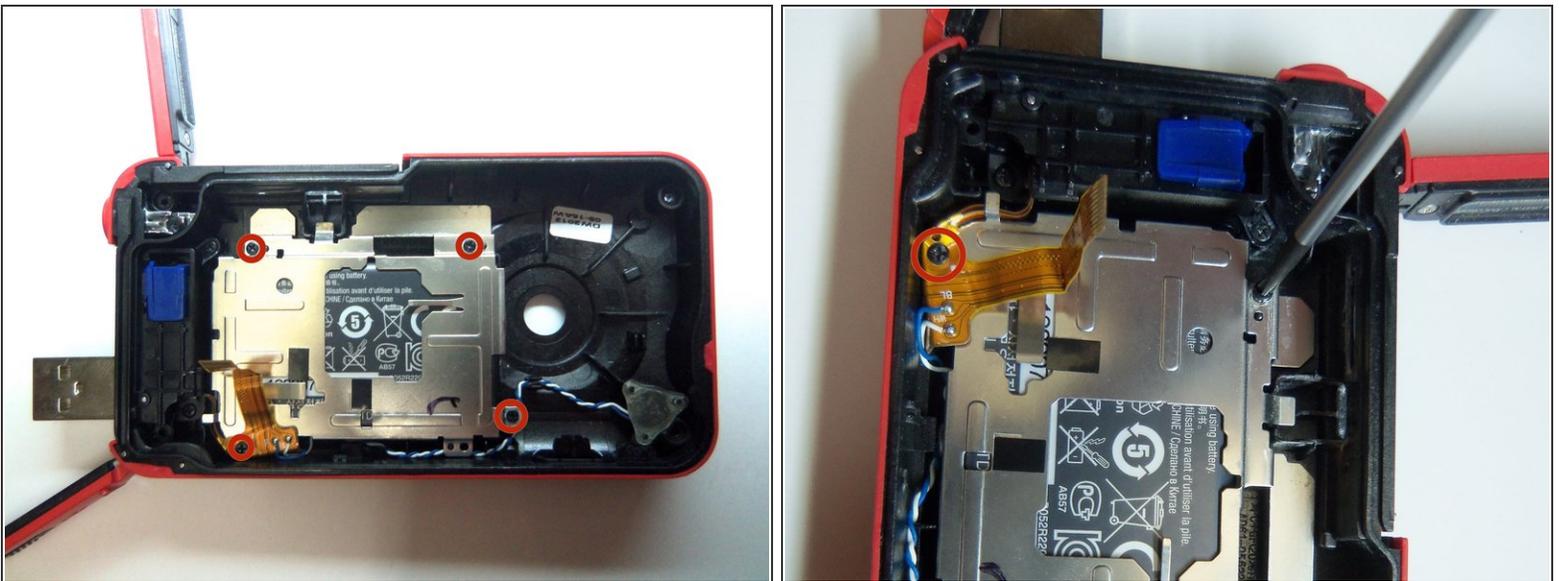


- Remove the four screws from the battery housing using a Phillips #00 screwdriver.

## Step 7

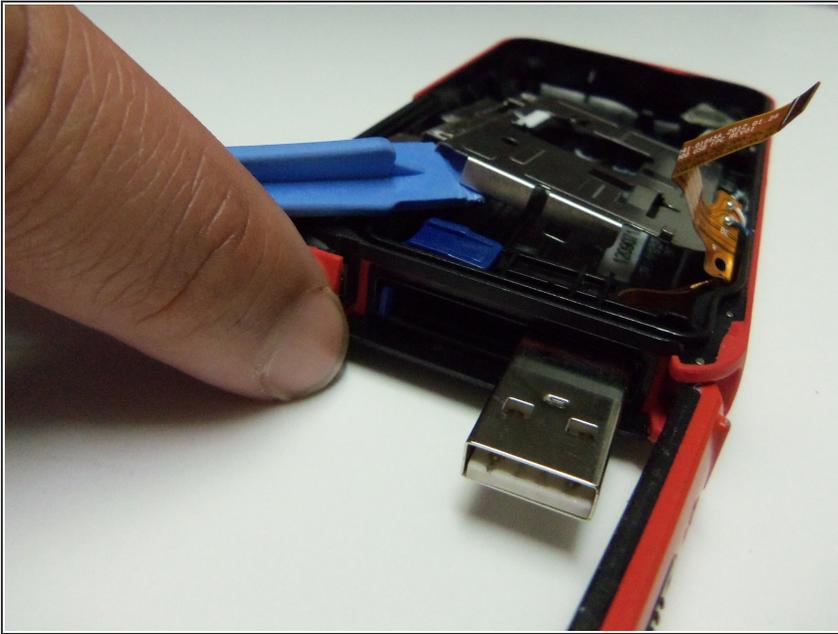

- Use the iFixit opening tool to pry the battery housing open.

## Step 8

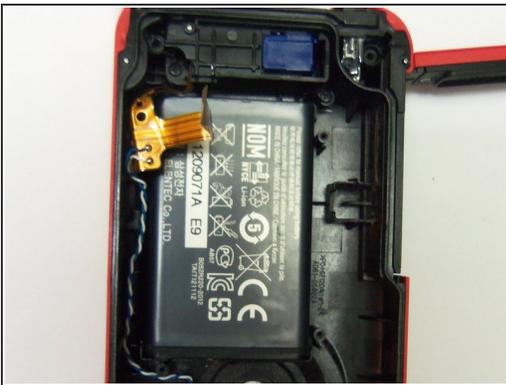

- After removing the battery housing, take the battery out.

## Step 9 — USB Port




- Use an iFixit opening tool to pry up the plastic cover.
- Use tweezers to remove the wire from the slots.

## Step 10




- Remove both screws from the USB port using a Phillips #00 screwdriver.

## Step 11

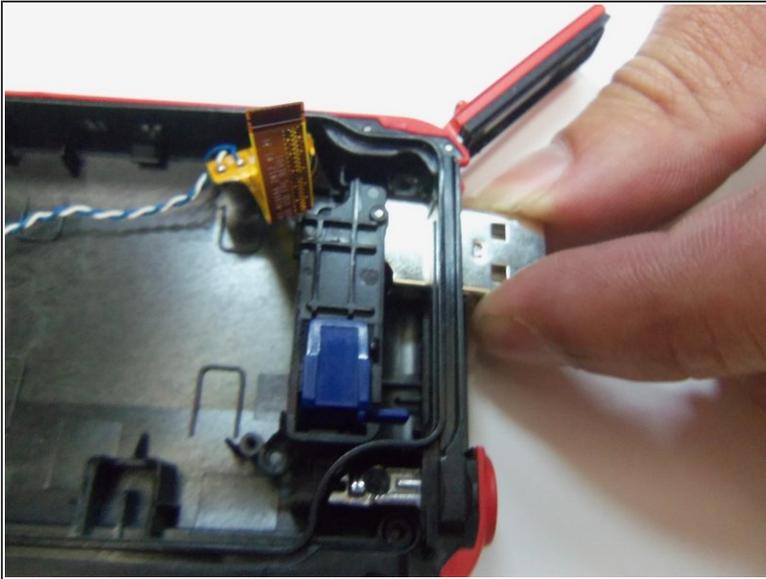

- Push the USB port inside the case to remove it from the device.

## Step 12 — Front Case

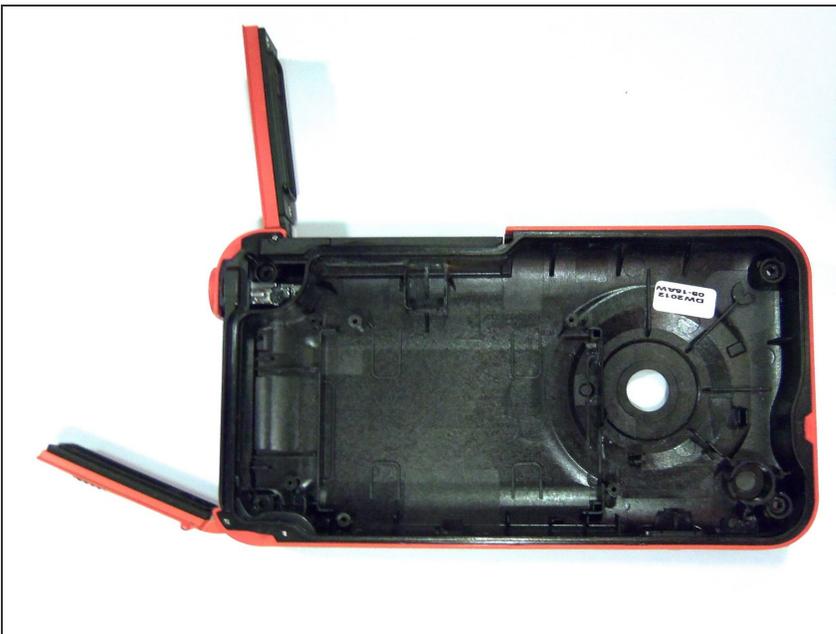

- The front case is separated from the rest of the device.

To reassemble your device, follow these instructions in reverse order.