

Sony Alpha NEX-6 Lens Replacement

A quick and easy guide to managing the camera lens.

Written By: Clayton Dale



INTRODUCTION

This guide provides a step-by-step procedure for safely removing the lens of a Sony Alpha NEX-6 camera.

Step 1 — Finding the Release Button



- Turn the camera with the lens facing up.
- Find the lens release button located along the side of the silver lens mount.

Step 2 — Removing the Lens





- Press and hold the lens release button while rotating the lens counterclockwise.
- Lift the lens when it is no longer attached to the camera.
 - To replace the lens, align the white dot on the lens with the white dot located on the silver lens mount. (See image two)
 - Insert the lens and rotate it clockwise until it is locked in place.

The procedure to disassemble this lens is different from reassembly. This guide encompasses both processes.