



Nostalgia Electrics PCM805 Extractor Head Replacement

This guide shows removing the extractor head.

Written By: Carlton



INTRODUCTION

Use this guide to replace your extractor head if it is damaged.

Step 1 — Bowl



⚠ Make sure that the device is unplugged and has not been used recently because the extractor head and bowl can be very hot.

- Place the device on a steady table.
- Lift and remove the rim.

Step 2



- Twist the bowl clockwise until it is free of the groove and lift to remove.

Step 3 — Extractor Head



- Firmly grip the extractor head and slowly lift vertically to remove from the device.

To reassemble your device, follow these instructions in reverse order.