




# Disassembling Canon PowerShot A590 IS

## Front Cover

This guide will instruct the user on how to...

Written By: Zach

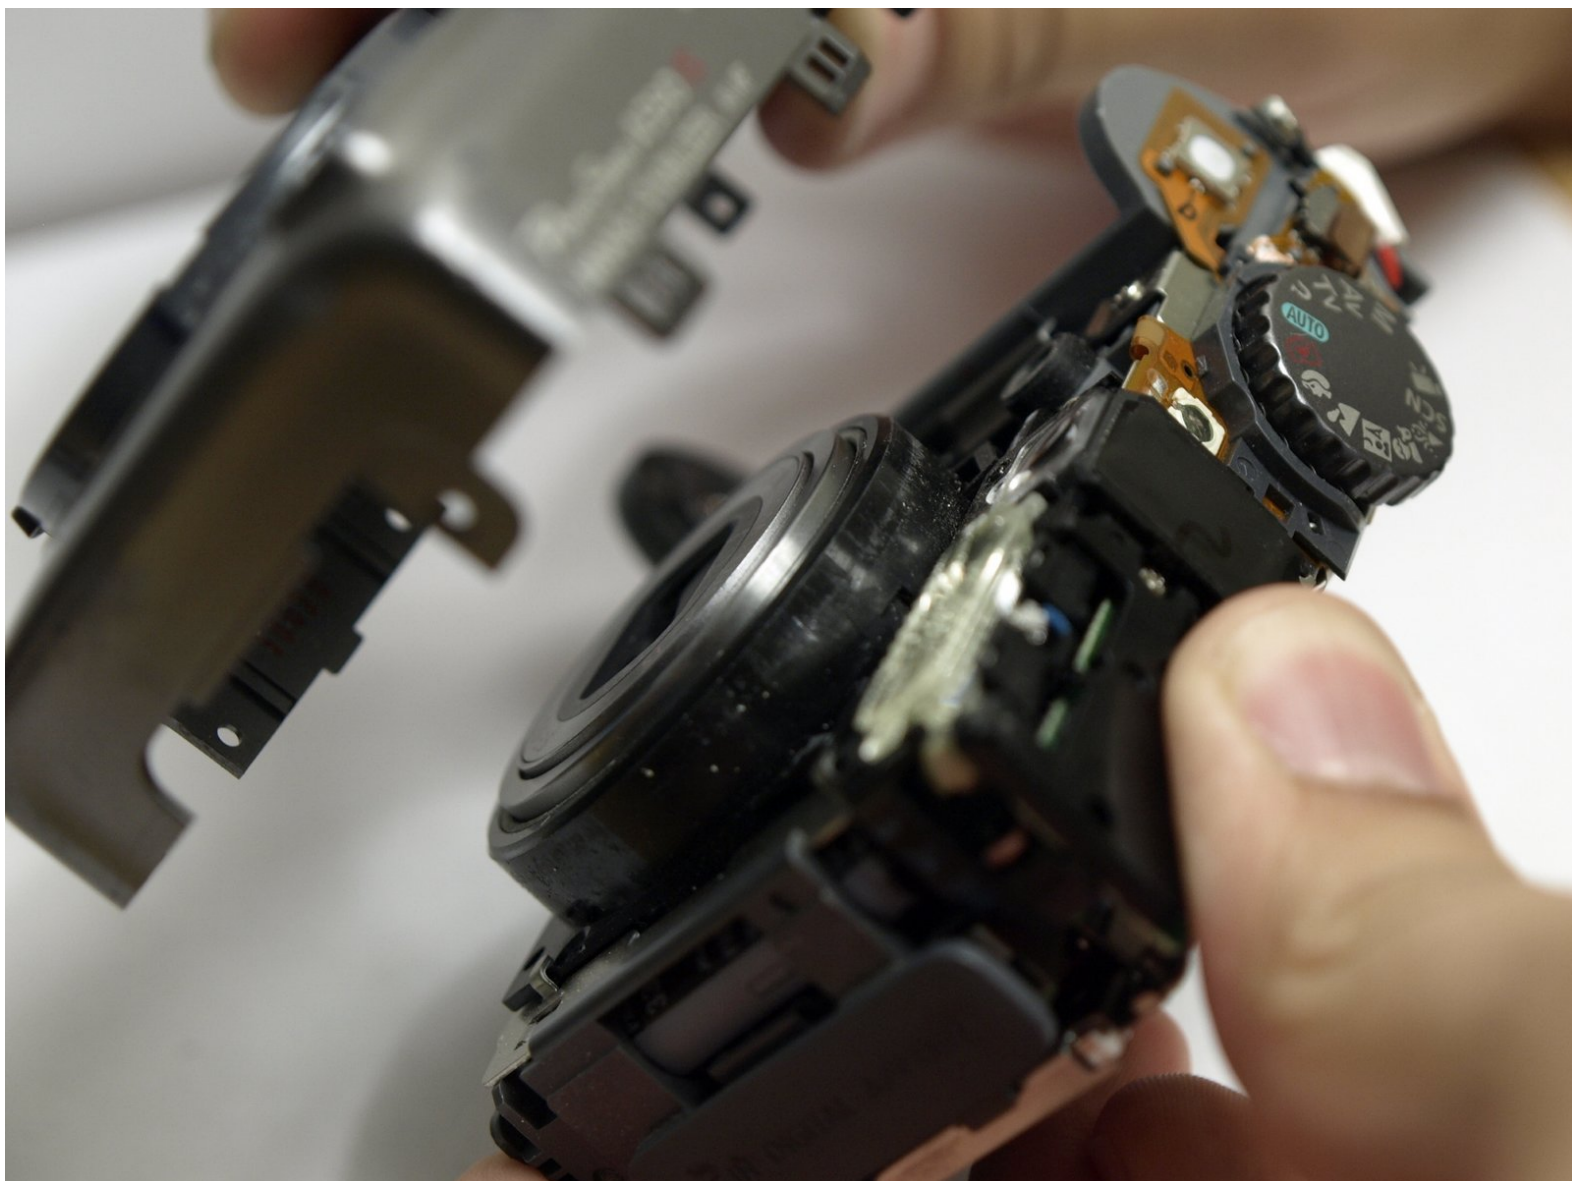

---

## INTRODUCTION

This guide will instruct the user on how to remove the front cover of the Canon A590 IS.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Batteries




**i** The battery hatch is on the bottom of the camera.

**⚠ CAUTION:** Locate the switch to open the hatch and push gently toward the front of the camera. Too much force can break the hatch.

- While the switch is pushed forward, pull the cover away from the camera.

## Step 2

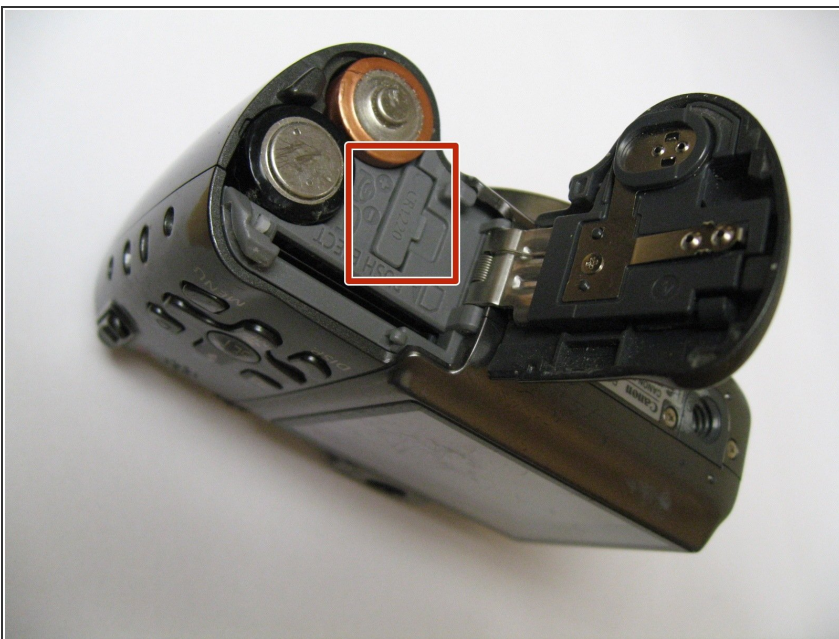

**i** This camera requires AA batteries.

- To remove batteries, simply allow them to fall out of the camera.
- Use a fingernail to lift the clock battery out of the camera.



### Step 3



- ★ When replacing the AA batteries, verify they are oriented correctly by following the (+) and (-) signs on the camera.

### Step 4 — Back Cover



- Remove the screw located under the rubber flap on the left side of the camera using a Phillips #00 screwdriver.

## Step 5




- Remove the two screws located on the other side of the camera using a Phillips #00 screwdriver.

## Step 6



- Remove the three screws located at the bottom of the camera using a Phillips #00 screwdriver.

## Step 7

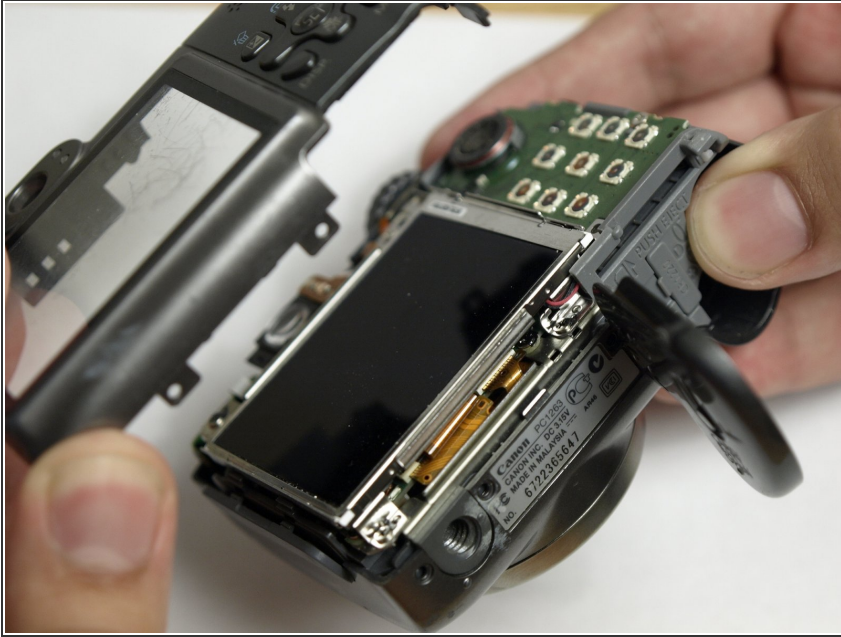

- Open the battery cover.
- Using the iFixit opening tool, push up gently around all edges of the camera.


## Step 8 — Remove Lens Cover



- Press and hold down the button shown in the blue circle.
- While pressing the button, rotate the lens cover in a counter-clockwise direction to remove it.



## Step 9 — Remove Front Cover

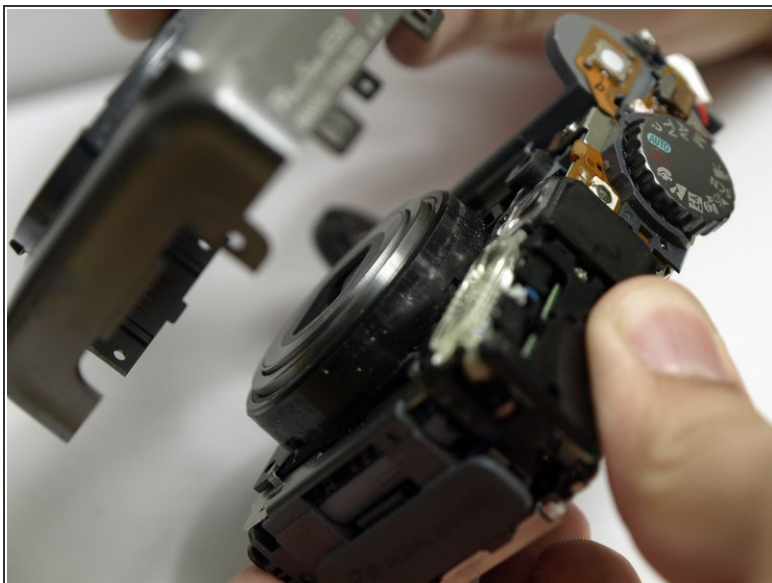

- Remove the front cover of the camera.
  - ⓘ This may require a bit of force.

To reassemble your device, follow these instructions in reverse order.