



Nikon Coolpix P90 Memory Card Replacement

The Nikon Coolpix P90 is only compatible with...

Written By: Elizabeth Kamine



INTRODUCTION

The Nikon Coolpix P90 is only compatible with SD and SDHC memory cards. It is not compatible with Multi Media Cards (MMC).

Step 1 — Camera Base



- Use your finger to push the latch of the compartment door to the center of the camera body, per image 1.
- Push the door open, and remove the existing battery with your fingers, per images 2-3.

Step 2 — Memory Card



- Gently push the memory card down into the compartment until it clicks to unlock.
- Release and pull memory card out with your fingers.

To reassemble your device, follow these instructions in reverse order.