

Garmin eTrex Vista H Replacing Antenna Replacement

The replacing antenna guide shows step by step...

Written By: Taylor Hershey



INTRODUCTION

The replacing antenna guide shows step by step how to install a new antenna.

🖌 TOOLS:

Tweezers (1) Spudger (1) Tweezers (1) 64 Bit Driver Kit (1)



Step 1 — Removing Battery

• Flip the device to the backside, and locate the metal tab at the center of the back cover.

Step 2



• Lift the metal tab up, and rotate it counterclockwise. This will unlock the back case cover.

Step 3



• Lift the battery plate off to either insert or remove 2 AA batteries.

Step 4 — Disassembling the Garmin eTrex Vista-H Outer Case



• With the wedge side of a spudger (or a small, flat head screwdriver), remove the black rubber case support from the device body.

Step 5




• With the pick side of a spudger (or <u>tweezers</u>), peel the sticky tape from the device.

Step 6



- Split the front and rear panels by inserting a small pointed tool (such as a pen point or a screwdriver tip SL1.5) in the 5 plastic tabs along the sides of the device.
- ⚠ Do not remove the back panels quickly. If too much force is applied, there is a wire connection that will break.
- ▲ CAUTION! Be careful not to force the tabs inward. This will result in broken tabs.

Step 7

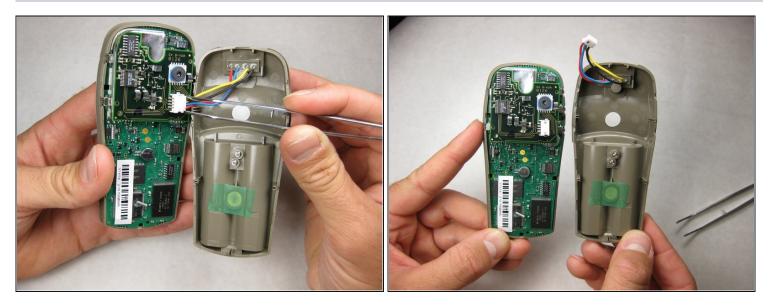


• With tweezers (or your fingernails), carefully disconnect the wires between the PC input and the motherboard.

Step 8 — Disassembling Garmin eTrex Vista H Motherboard



• The motherboard should look like this. If it is dirty, gently use a small paintbrush to clean it of dust.

Step 9

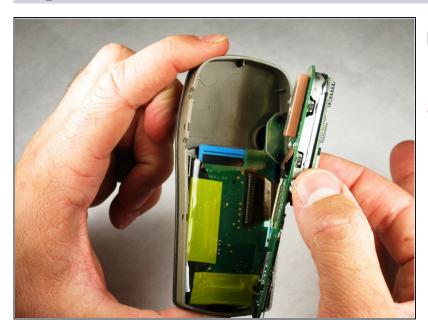

- There are no screws holding the motherboard in place.
- ⚠ Carefully lift the motherboard from the case.

Step 10



- With the pointed end of a spudger (or the small end of a Philips #00 screwdriver), gently unhook the small black tabs by pressing into the interlocking hooks that are sunk into the white wire connector.
- Gently pull the wire ribbon from the white connector.

Step 11 — Replacing Antenna



- Locate antenna on the back of the motherboard.
- (i) In order to replace the antennaa you have to purchase a new motherboard.

To reassemble your device, follow these instructions in reverse order.