



Briggs and Stratton 675 Series Spark Plug Replacement

This guide shows how to replace the spark plug in a Briggs and Stratton 675 Series Engine.

Written By: Andrew Saunders



INTRODUCTION

The spark plug is responsible for igniting the fuel in your engine. Over time, it will wear out and need to be replaced. This replacement is fairly simple and can be done anywhere in little time. You will need a 2" long 13/16" socket wrench to remove the spark plug.




TOOLS:

- [13/16" Spark Plug Socket](#) (1)
 - [Smart Wrench](#) (1)
 - [Slip Joint Pliers](#) (1)
 - [Socket Wrench](#) (1)
-




Step 1 — Cap Removal




 Make sure the engine is turned off before beginning.

- Use your hands to remove the spark plug wire. It should pop off easily with little effort

Step 2 — Spark Plug Removal

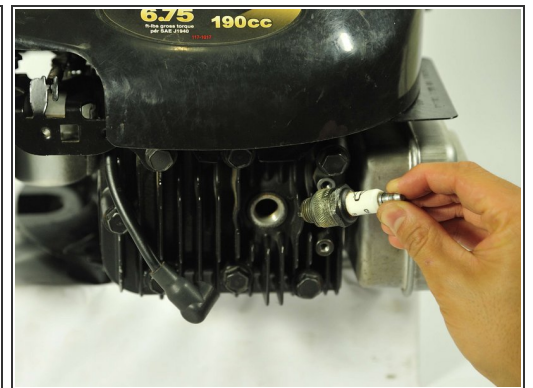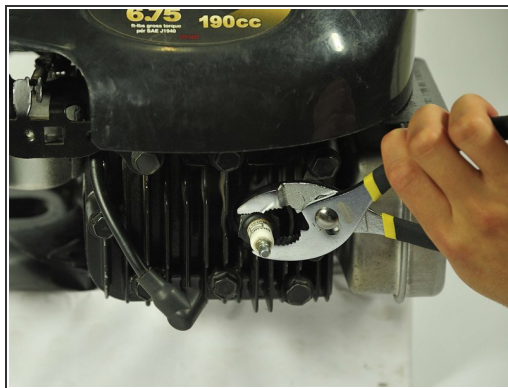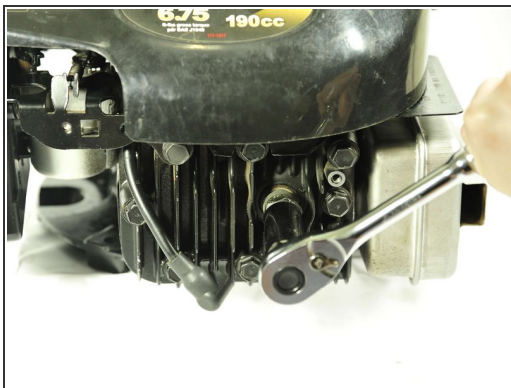

- Use a socket wrench with a 13/16" hex bit to unscrew the spark plug from the engine. You will probably need to use a long hex bit in order to get to the bolt.
- Pull the spark plug out of its housing with your hands.
-  Alternatively, you may use a wrench or pliers to remove the spark plug instead. (Shown in the second image.)

To reassemble your device, follow these instructions in reverse order.