

BlackBerry Z30 Middle Frame Replacement

Guide for the replacement of the middle frame that includes Power Button, Audio Jack and Microphones

Written By: Hans



INTRODUCTION

Guide for the replacement of the middle frame that includes Power Button, Audio Jack and Microphones



TOOLS:

- iFixit Opening Tools (1)
- Spudger (1)
- T5 Torx Screwdriver (1)

Step 1 — Battery cover



 Remove the battery cover by grabbing the notch under the bottom speakers and lifting.

Step 2 — Remove SIM and Media Card



 Remove the SIM card and the Media SD card by pushing on them.

Step 3 — Unscrewing the LCD panel








Locate and unscrew all 10 T5 screws around the back cover

Step 4 — Separate the LCD from the Frame

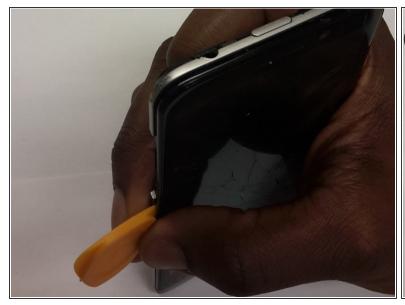




- Use Plastic opening tools to separate the LCD from the Main body
- ⚠ Do NOT remove the screen yet, it is attached with a very fragile ribbon to the main board.
- (i) Start on the same side of the Audio Jack

Step 5 — Remove the LCD



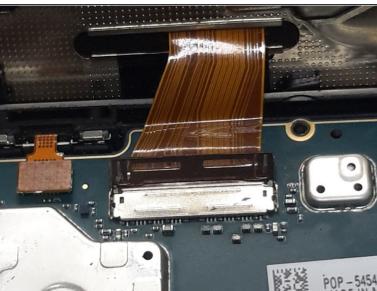

- Use a plastic tool to carefully switch up the LCD ribbon holder
- Detach the LCD from the main board
- (i) When installing the new LCD, make sure the ribbon is inserted to the white line.

Step 6 — LCD Panel removal




 You can now detach the LCD Panel from the main frame.

Step 7 — Untie the System board




- With a plastic tool, untile the system board by detaching the ribbons attached to it
- The battery ribbon is on the bottom right
- Be gentle when detaching these Ribbons as they are very easy to tear and damage.

Step 8 — Untie the System board Part 2

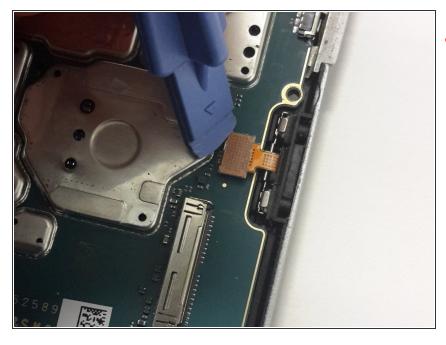

Be gentle as any other system board ribbons, they are very easy to damage

Step 9 — Untie the system board Part 3

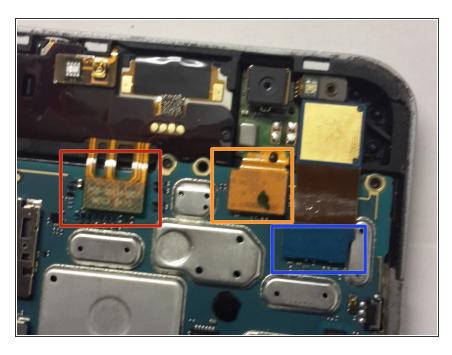

- Power Button /Audio Jack
- Flash
- Rear Facing Camera

Step 10 — System board removal



- Once all Ribbons untied, gently wiggle the system board out of the frame
- Do not pull hard as there might be a ribbon on the way

Step 11 — Remove the Rear Camera





Use a pair of pliers to remove the rear facing camera

Step 12 — Remove the Battery







- If this is the original battery, it might be hold down by VERY strong adhesive on the top, middle and bottom part. Be careful not to damage the battery
- As pointed in the comments, be careful about the NFC membrane when removing the battery. Use heat to loosen the glue.

Step 13 — Replace the Middle Frame



 Re-Assemble the unit using the new middle frame.

Guide ID: 38582 - Draft: 2015-05-19

To reassemble your device, follow these instructions in reverse order.