


# RCA RCT6378W2 Speaker Replacement

During other repairs of the tablet, the speaker wires may become detached from the speaker. This will show the proper way to reattach the wires.

Written By: Matthew Wills

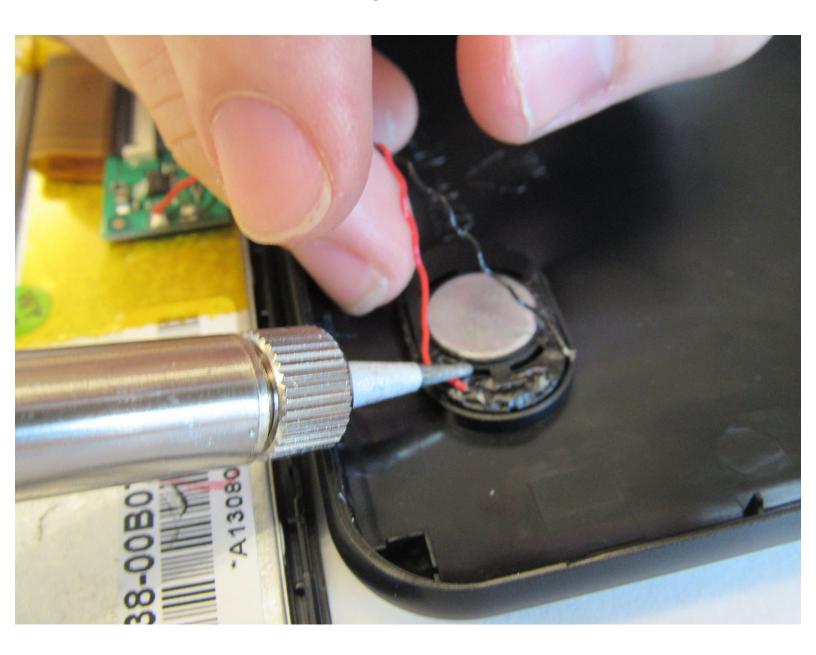



• Soldering Iron (1)

## Step 1 — Speaker







Remove two 2.4mm x 4mm screws from bottom of the tablet with Phillips #00 Screwdriver.

## Step 2








Remove back cover with plastic opening tool, exposing the battery and motherboard.

### Step 3 — Preparing the Wires

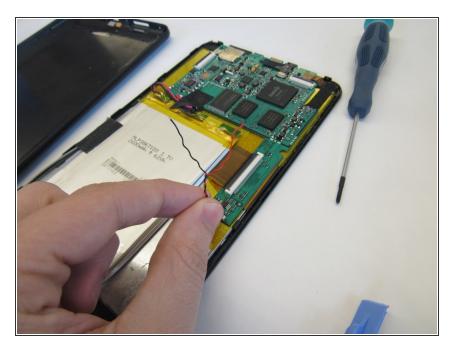

 Uncoil the wires. If necessary, use a wire stripper to expose more of the wire.

### Step 4 — Soldering





 Solder the wires to the base of the speaker. The metal of the wire should be touching exposed metal on the speaker. Insure that the colors of the wires match the picture.

To reassemble your device, follow the instructions in steps 1 and 2 in reverse order.

This document was generated on 2021-01-15 03:40:18 PM (MST).