



Hipstreet Titan 2 HD Screen Replacement

This guide will assist users in replacing the screen on a Hipstreet Titan 2 HD.

Written By: Jeffrey




INTRODUCTION

This guide will allow users to replace the screen components on the tablet. This is a moderately simple process. Users will need a replacement screen to complete the process.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Rear Case

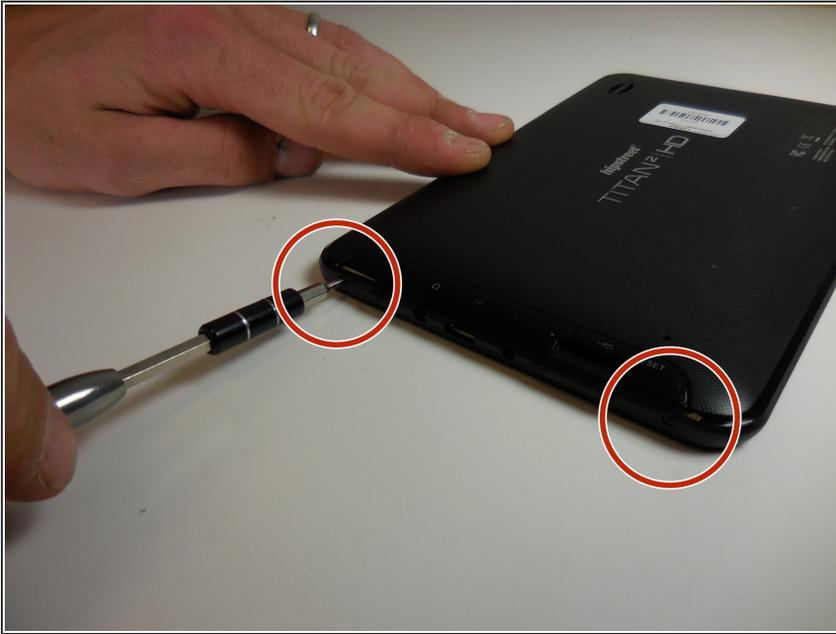

- Using the PH#00 screwdriver, remove the two 0.145 inch Phillips head screws.
- ⓘ The screws are located on the bottom face of the device, near the power and volume controls.

Step 2

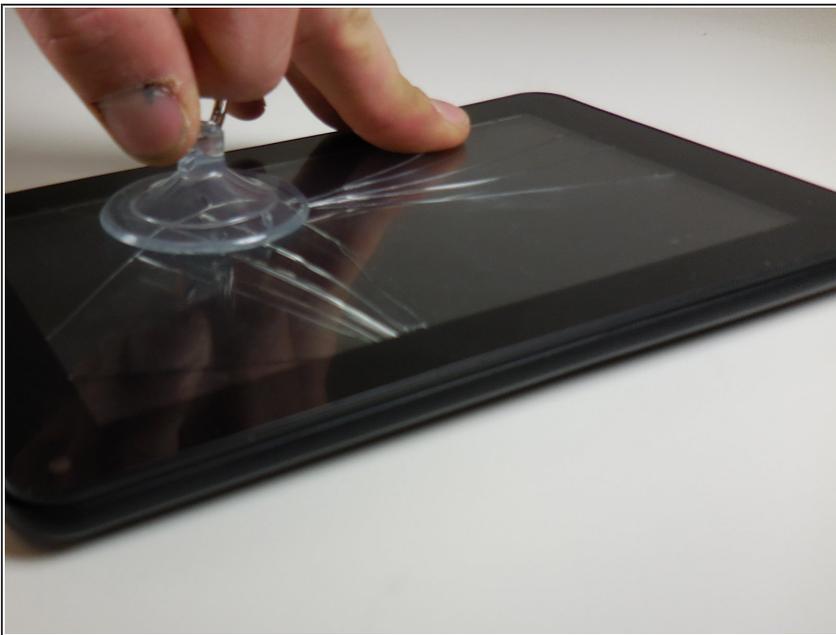

- Place the small suction cup on your screen.
- ⓘ Moisturize the bottom of the suction cup to ensure a proper seal.
- ⚠ If the screen is cracked, the suction cup may not seal correctly; too much pressure may crack or damage the screen.

Step 3



- Insert the plastic opening tool between the screen cover and rear cover of the tablet.
- Grasp the small suction cup.

Step 4





- Slide the plastic opening tool along device edge to separate the screen cover from the rear cover.
- Pull upward on the small suction cup handle while sliding the opening tool.

⚠ When sliding the plastic opening tool, avoid sliding the tool too far into the cover. This could damage the speaker connector on the back cover.

This document was generated on 2020-11-23 01:48:26 AM (MST).

Step 5

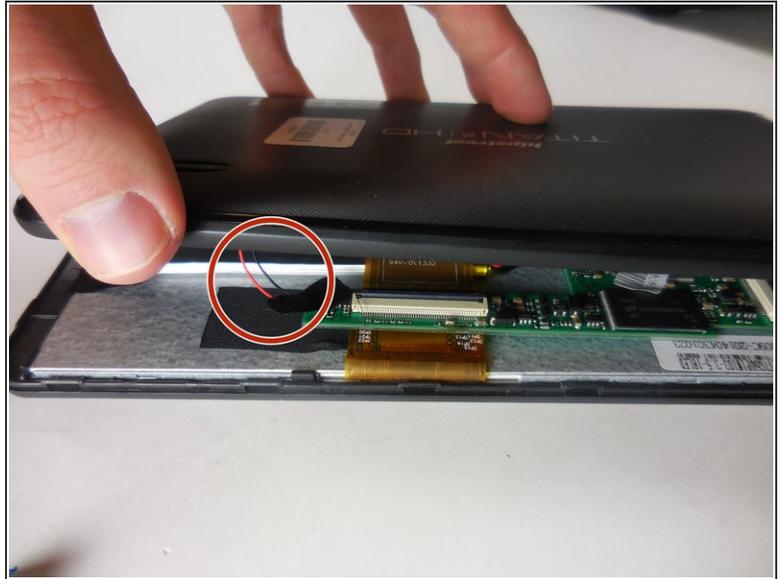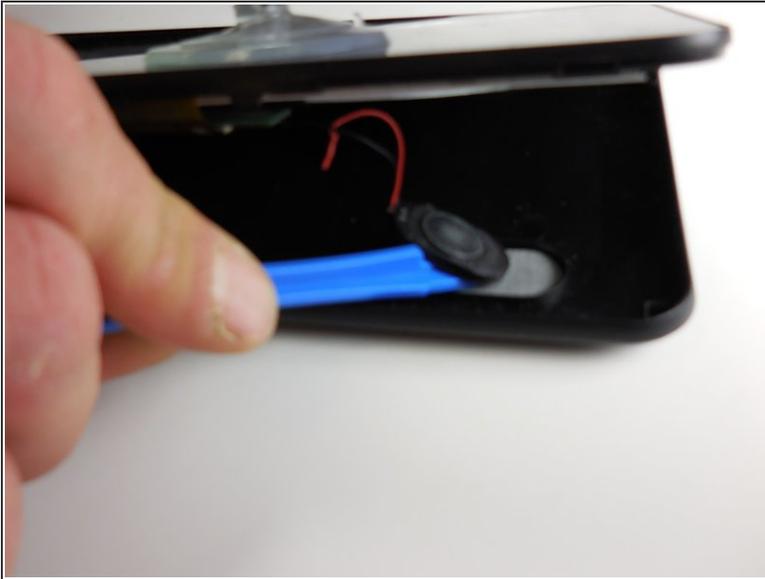

- Use the plastic opening tool to remove the speaker from the rear cover.
- ⓘ The speaker is held in place with adhesive and is easily removed.
- ⚠ Do not pull on the speaker wires. This could damage the soldering connections.

Step 6



- Once the speaker is disconnected, the cover removal is complete.

Step 7 — Screen



- Lift the hinges on the three ribbon connector clips and disconnect the ribbon connector.

Step 8




- Using the PH#00 screwdriver, remove the three 0.145 inch circuit board screws.

Step 9




- Remove battery, speaker and circuit board from screen.
- ⚠ Gently move circuit board assembly with speaker and battery away from device to ensure you do not damage the solder connections.

Step 10

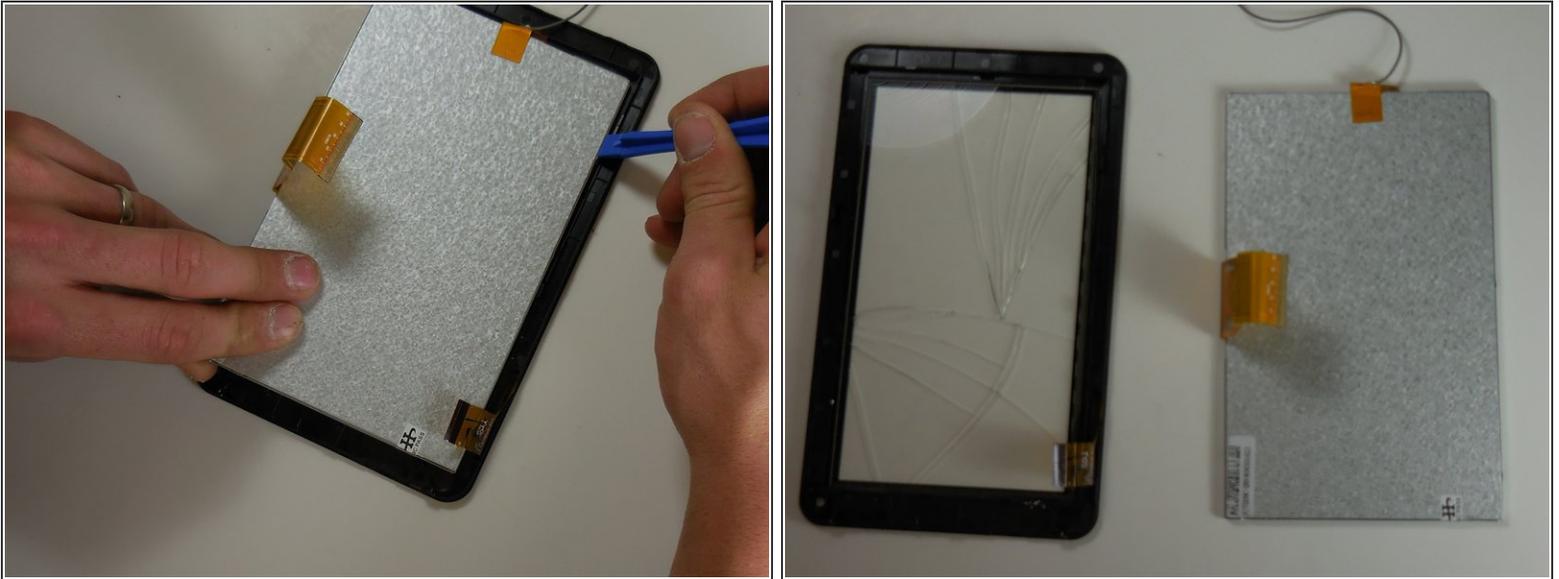

- Use plastic opening tools to remove screen from front cover.
- ⓘ The screen is held in with plastic tabs.
- ⚠ Use of too much force on the screen may result in unwanted damage to screen.
- ⚠ To avoid damage to screen, ensure the metal screen cover does not catch on the plastic tabs.

Step 11

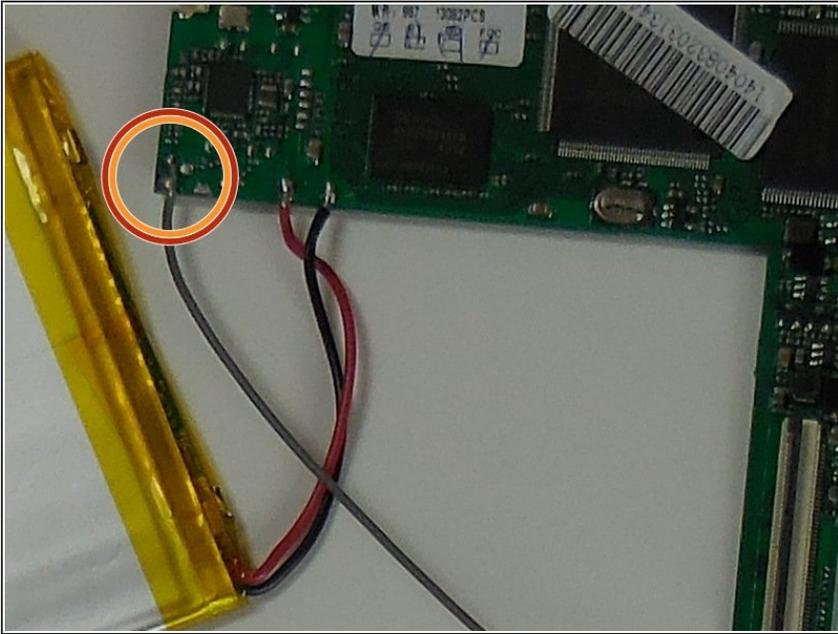

- Remove screen solder connector with solder removal tool.
- Solder new screen wire to circuit board with soldering tool.

To reassemble your device, follow these instructions in reverse order.