

Xelio P1001A-BK Back Cover Replacement

Removing the back cover of the Xelio P1001A-BK...

Written By: Josh Saenz



INTRODUCTION

Removing the back cover of the Xelio P1001A-BK tablet is fairly simple and straightforward.

There are four securing tabs along both long sides of the tablet shells which are disengaged by gently prying them apart with an opening tool. The speakers reside in two housings on the back shell half and connect to the motherboard with two very thin wires each. The tablet speakers have magnets on their backs which should make them stick to the metal shell protecting the back of the screen. However, if the speakers stay attached to the back shell half, gently pry them out of the sockets before completely separating the shell halves.

TOOLS:

iFixit Opening Tool (1)
Phillips #0 Screwdriver (1)

Step 1 — Back Cover



 Remove the two 3 mm retaining screws from the side of the tablet with a Phillips #0 screwdriver.

Step 2



- Insert the plastic opening tool in between the shelf halves and lift the top shelf half to detach the securing tabs.
- (i) There are four securing tabs located on each long side.
- Before fully separating the shell halves, observe if the speakers are separated from the shell half. If they are still in their sockets, gently pry them loose with the plastic opening tool.

To reassemble your device, follow these instructions in reverse order.