



Sony Ericsson z300 Vibrator Replacement

Replace the vibrator so you can tell when someone is calling or texting you.

Written By: Alex Serventi



INTRODUCTION

This guide shows how to remove the vibrator.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Back Phone Cover



- To remove the back cover, use your thumb to press down on the center of case and slide it off.

Step 2 — Battery

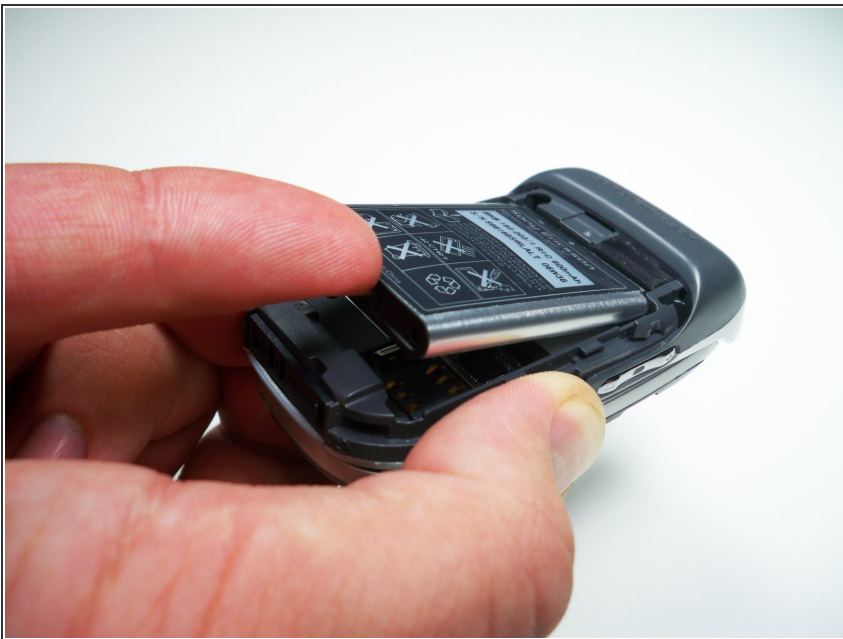

- Using a fingernail lift the battery out of the phone.

Step 3 — Front Phone Cover



- To remove the front cover, lift up the case with a fingernail in the small slot as shown.

Step 4 — Front Dark Grey Case



- To remove the front grey case, remove the two screws shown with a T5 Torx Screwdriver.

Step 5




- Pry up the dark grey case with your fingernail until all four snaps around the top are loose.

Step 6




- Lift up towards the bottom and slide the case off.

Step 7 — Screens

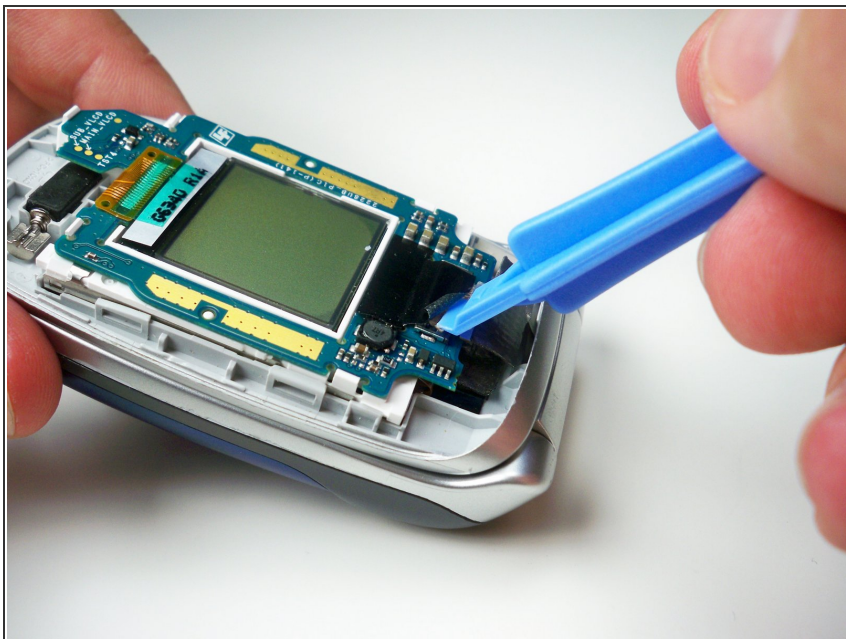


- Use a plastic opening tool to lift the black tape off of the ribbon cable connector.

Step 8

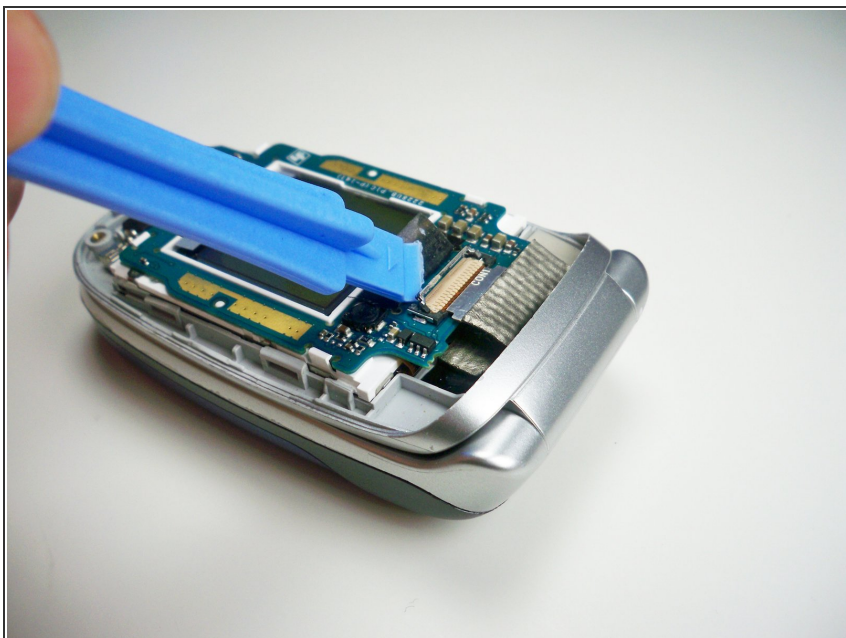



- Lift the ribbon cable connector lock using a plastic opening tool.

Step 9

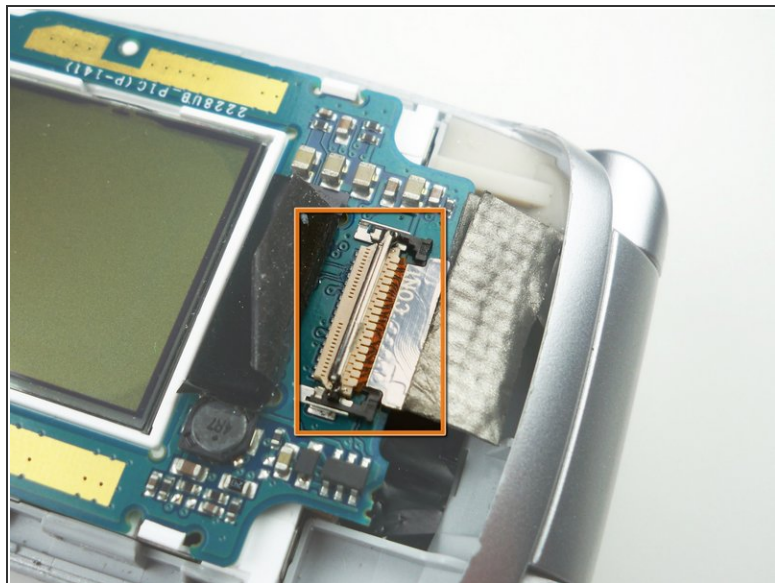


- Slide the black ribbon cable tray out with a plastic opening tool.
- Shown in the second picture is the tray already slid out.

Step 10

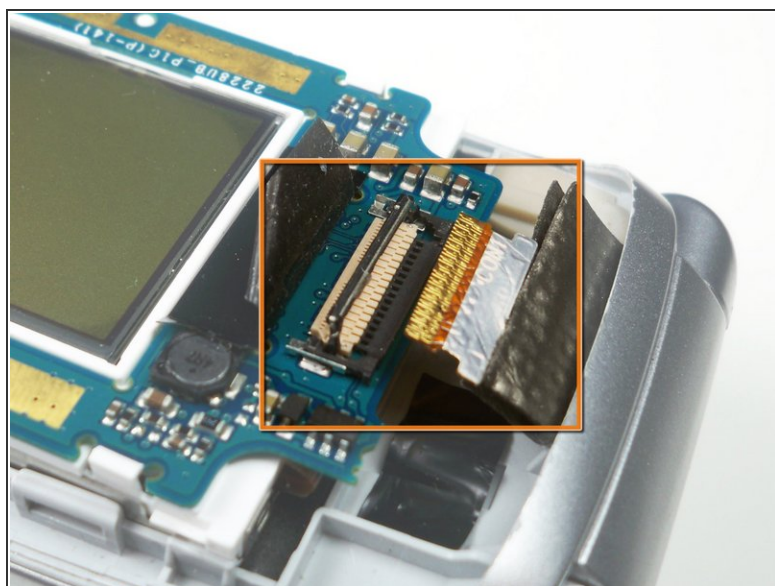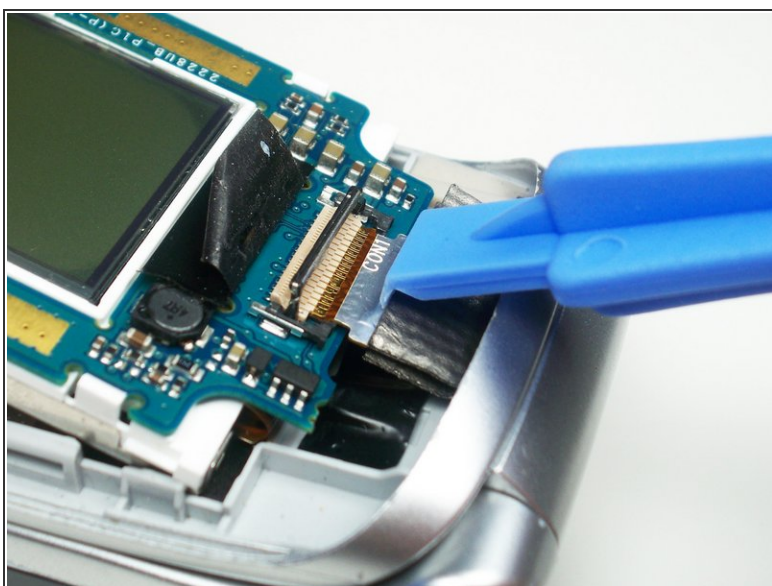

- Slide the ribbon cable out of the connector.
- Shown in the second picture is the cable already out.

Step 11

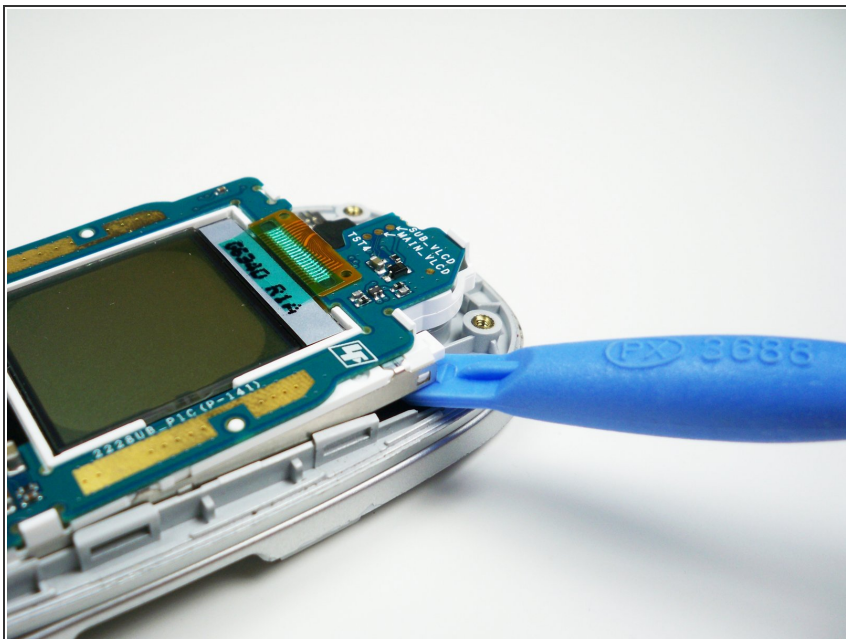

- Use a plastic opening tool to lift up on the screen board and release the clips holding it in place.
- Lift the entire board out of the phone to remove both screens.

Step 12 — Vibrator



- Use a plastic opening tool to lift the vibrator out of its slot.

To reassemble your device, follow these instructions in reverse order.