



Dell Venue 8 Display Replacement

Replace a cracked or broken display of the Dell Venue 8

Written By: Mitul



INTRODUCTION

If your screen is cracked, broken, doesn't respond to touch, or has broken pixels, it might be time to replace the screen. This guide will help you to replace the screen on the Dell Venue 8



TOOLS:

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)



PARTS:


- [Dell Venue 8 Replacement Display](#) (1)

Step 1 — Rear Case/Midframe




- Hold the device with the screen facing up. Gently wedge your plastic opening tool into the crease, and run it along the perimeter of the case
- ⓘ You will hear *click* sounds as the clips unhinge
- Remove the back panel of the device.

Step 2

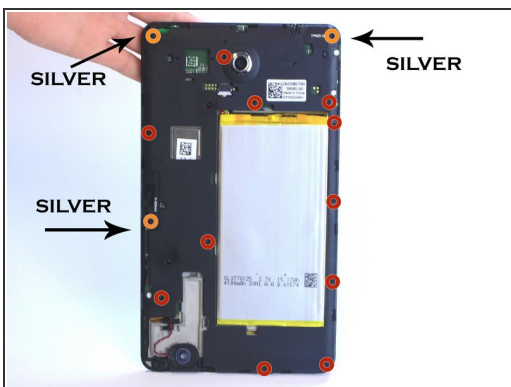


- Remove the 14 screws with the T-5 Torx screwdriver. (11 black 3.6mm screws, and three 4.45mm screws)
- ⓘ The silver screws are marked with an "S" or a sticker [S1.6(Silver)] See the corrected image
- 4.45mm Silver screws
- 3.6mm Black screws
- Gently snap the perimeter clips open, and remove the internal plastic case.

Step 3 — Battery

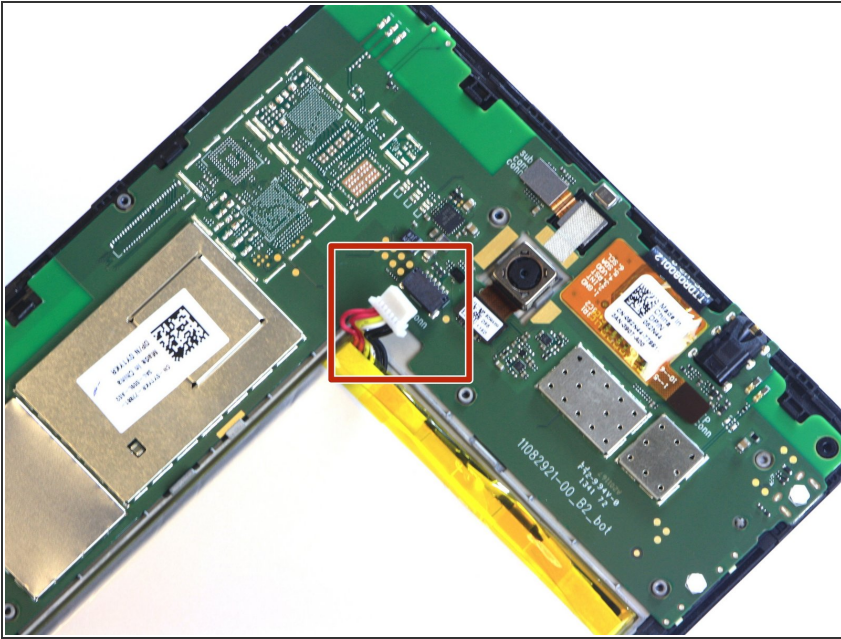


- Unclip the power clip from the motherboard by pulling down gently towards the bottom of the tablet.

Step 4

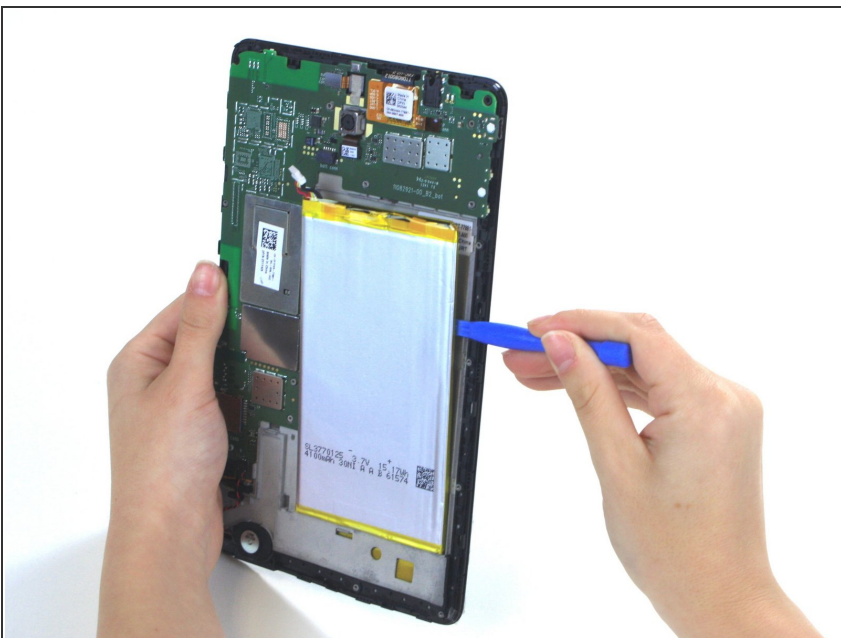

- Gently pry the battery away from the device with the plastic opening tool to remove it.
- ⓘ The battery is held on to the tablet by a light adhesive

Step 5 — Speaker

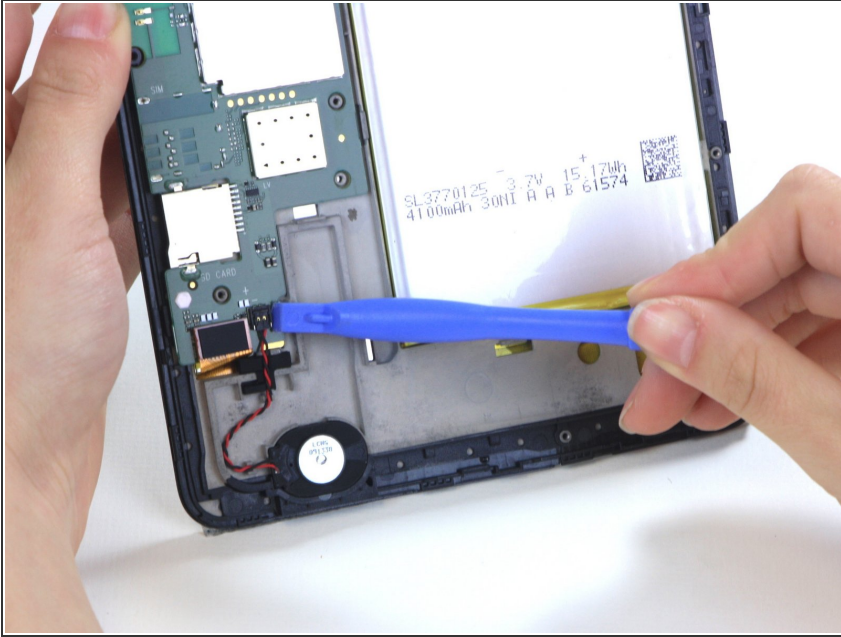

- Using your plastic opening tool, unclip the speaker connection from the logic board.

⚠ Caution: Pull directly up, not out, on the connection

Step 6



- Remove the speaker by placing using your plastic opening tool in the gap on the top of the speaker and prying it up.

ⓘ The speaker is held on by light adhesive

Step 7 — Display



- Disconnect the display clip found next to the speaker.
- Disconnect the Display connection located at the top of the tablet.

Step 8



- Unclip the logic board from the Display.

To reassemble your device, follow these instructions in reverse order.